

DETROIT PUBLIC LIBRARY
AUTOMOTIVE HISTORY COLLECTION

Public Library
Detroit, Mich.

Technology
MOTOR TRUCKS Gotfredson, 1926

Gotfredson

SERVICE PARTS LIST

MODEL 20-B



Gotfredson Corporation Limited

Walkerville, Ontario

Detroit, Michigan

SERVICE PARTS LIST

Gotfredson

MODEL 20-B

CHANGES on Service Parts and Price lists are necessary, at times, due to improvement of product and ever changing costs. This folder is so designed that it will meet these requirements and also accomodate the numerically arranged price list.

Issued February 1926

GOTFREDSON CORPORATION

MOTOR TRUCK DIVISION

Detroit

Michigan

Leah
a-author
D

Guarantee



THE GOTFREDSON CORPORATION guarantees each new truck manufactured by GOTFREDSON CORPORATION to be free from defects in material and workmanship under normal use and service. This guarantee shall not apply to any truck which has been subject to misuse, neglect or accident; nor shall it apply to any truck which has been repaired or altered outside of its factory, or branches of the GOTFREDSON CORPORATION, so as, in the judgment of the GOTFREDSON CORPORATION, to affect its stability or reliability. This guarantee is in lieu of all other guarantees, expressed or implied, and the GOTFREDSON CORPORATION does not authorize any representative or person to assume for it any other liability in connection with its trucks.

No guarantee whatever is made in respect to tires, rims, ignition apparatus, lamps, vacuum tanks, signalling devices, generators, batteries or other trade accessories, inasmuch as these are usually warranted separately by their respective manufacturers.

The obligations of the GOTFREDSON CORPORATION under this guarantee are limited to the furnishing at its factory of any part of said truck which shall, within ninety (90) days after delivery to the original purchaser, and provided the truck has not been run more than three thousand (3,000) miles, be returned to it, transportation charges prepaid, and which examination shall disclose, in its judgment to have been defective. Labor charges incurred in the removal, disassembling, reassembling, or reinstallation of this equipment will not be allowed.

Gotfredson Corporation

MOTOR TRUCK DIVISION
Detroit, Michigan

Important

When ordering parts for your Gotfredson Truck:

You can save **TIME**, **MONEY** and procure **GENUINE PARTS** by ordering from your Gotfredson Dealer.

BE SURE to give part number and name; also state model and serial number of chassis. (found on caution plate on dash and on left front spring horn).

State how many of each part are wanted. Do not order "one pair" or "one set" as a set of rear wheel bearings may mean bearings for one rear wheel or bearings for both rear wheels.

CARE SHOULD BE TAKEN to divide the part numbers exactly as printed on service list, for example: 10001A1—SA1 (should be pronounced ten thousand one A1 dash SA1) and standard parts G-36705-A (should be pronounced G dash thirty six thousand seven hundred five dash A).

GIVE SHIPPING INSTRUCTIONS and be sure to write name of city and state (or province), also how to ship,—parcel post, express, freight, or carload. **WRITE** your orders for parts on a separate sheet from your letter.

When similar parts are used on both sides of truck, be sure to specify which are wanted, **RIGHT** or **LEFT**.

Always refer to **RIGHT HAND** or **LEFT HAND** side of truck taken from the location of the driver as he sits behind the steering wheel.

"Front" or "Rear" following a name indicates the position on truck.

When the terms "Inner" and "Outer" appear, "Inner" means the part nearest the center line of the truck.

The terms "Upper" and "Lower" are used to denote that "Lower" is nearest the base line of the truck.

If in doubt concerning the correct part or symbol number, name or description of the part wanted, we advise that you send to us a sketch of the part required, give the principal dimensions, or send us the old part for duplication, transportation prepaid.

It is best to always **CONFIRM** your telegraphic order with a **WRITTEN ORDER**.

WHEN RETURNING GOODS to us for any reason whatsoever, charges must be prepaid, or we will refuse to accept them. Be sure to mark the package plainly with your name and address and advise the factory of your action by letter. This will enable us to make proper distribution of parts returned and accord you credit for same.

WE RESERVE THE RIGHT to change the design, construction or material, of any detailed part, where we find it desirable, without incurring to ourselves the obligation of installing such changes on trucks already sold or in service.

Gotfredson Numbering System

The GOTFREDSON numbering system is so arranged that the first numerals of the master part number designates the unit on which the part is used. A complete list of master part numbers, as applied to various units, follows:

- 100 to 999 inclusive—Engine—Fan—Muffler.
- 1000 to 2499 inclusive—Clutch—Transmission—Hand Control—Power Take-off.
- 2500 to 2999 inclusive—Propellor Shaft—Propellor Shaft Amidship Bearing Assembly.
- 3000 to 4999 inclusive—Front Axle—Rear Axle—Radius Rod—Springs (leaf)—Transmission Brake—Propellor Shaft Brake—Brake Operating Parts—Wheels—Rims—Tires—Tubes—Flaps—Hubs—Flanges—Caps, Etc.
- 5000 to 5999 inclusive—Steering Gear—Drag Link or Reach Rod.
- 6000 to 6499 inclusive—Radiator.
- 6500 to 6999 inclusive—Fenders—Hood—Filler Plates—Mud Pans—Radiator Aprons—Battery Boxes—Tool Boxes—All Other Sheet Metal Parts.
- 7000 to 7499 inclusive—Frames.
- 7500 to 7999 inclusive—Carburetor — Choke — Sediment Trap — Vacuum Tank — Fuel Tank—Fuel Lines.
- 8000 to 9999 inclusive—Electrical Parts—Wires—Cables—Lugs — Terminals — Clips—Junction Block—Starting Switch—Starting Motor—Generator—Horn—Magneto—Ammeter—Coil—Distributor—Battery—Instrument Panel—Switches—Head Lamp—Tail Lamp—All Other Lamps—Cigar Lighter—All Other Electrical Parts.
- 10,000 to 10,999 inclusive—Windshield—Bodies.
- 11,000 to 12,999 inclusive—Jack—Tire Pump and Parts—Air Compressor—Governor—Air Cleaner—Oil Gauge—Air Gauge—Gasoline Gauge—Speedometer—Clock—Windshield Wipers—Mirror—Bumpers—Tire Carrier—Miscellaneous Equipment.
- 13,000 Up—Miscellaneous Parts.

All part numbers with the letter "G" as a prefix, are Standard Parts such as Cap Screws, bolts, nuts, lock washers, cotter pins, etc. The letter "G" and the first three numerals (of a Standard Part Number) designate the drawing size and number on which these Standard Parts are shown.

Example—G-36012 is a lock washer $\frac{1}{4}$ " SAE Special Light, on drawing G-360.

A dash and letter following a Standard Part Number designates the type of head on a rivet or type of point on a set screw, etc.

Example—G-26857-J is a set screw— $\frac{3}{8}$ "—16 USS Thd. x $\frac{7}{8}$ " Long—Full square head—Cup point. The "J" designates the type of point in this particular case.

When ordering an assembly or a sub-assembly it is not necessary to give all the detail parts that go to make up these assemblies, as the assembly, or sub-assembly number is sufficient.

For Example—If an engine assembly is wanted, refer to engine Complete assembly, check over items listed therein and if it is what you want order as follows:

1 only 100A1—A1 Engine Complete Assembly

The A1 shown in heavy type (following the part number 100A1) designates an assembly.

If a flywheel and ring gear sub-assembly is wanted refer to the engine division, check over items listed under this particular sub-assembly and if it is what you want, order as follows:

1 only—122A1—SA1—Engine Flywheel and Ring Gear Assembly

The SA1 shown in heavy type (following the part No. 122A1) designates a sub-assembly—part of the engine complete assembly.

Index

A		C	
	PAGE		PAGE
Amidship Bearing—(For Propellor Shaft)	59	Core-Radiator	60
Ammeter	21	Countershaft-Transmission	72
Apron-Radiator	52	Cover-Gear Case	40
Armature-Generator	24	Cowl Assembly	12
Armature-Starting Motor	32	Crankcase	37
Axle-Front	1	Crankshaft	38
Axle-Rear	4	Crankshaft Bearings	37
Axle-Housing	4	Cylinder (Block)	35
Axle-Shaft	4	Cylinder Head	35
B		D	
Battery and Parts (Storage)	21	Dash Lamp	30
Bearings-Camshaft	38	Dash and Seat	19
Bearings-Clutch	13	Differential-Rear Axle	6
Bearings-Connecting Rod	36	Distributor	22
Bearings-Amidship	59	Drag Link or Reach Rod	20
Bearings-Crankshaft	37		
Bearings-Differential	6	E	
Bearings-Pinion Shaft	6	Electrical Parts	21
Bearings-Transmission	72	Engine	35
Bearings-Wheel	2-3-4	Equipment and Tools	45
Bell Housing	37		
Bendix Gear	33	F	
Brake Hand Lever-to, Transmission-For Left Hand		Fan	46
Steer	75	Fender-Front	47
Brake Operating Parts	10	Filler Plates	51
Brake Pedal-To Rear Axle Brake	10	Flywheel	38
Brake on Rear Axle-Internal	4-5	Frame-For Left Hand Steer	48
Brake Rods and Levers	10	Frame Parts	48
Brake on Transmission	76	Front Axle	1
C		Front Spring and Parts	62
Cab-Closed-Assembly	11	Front Wheel	0
Camshaft	38	Fuel Lines	53
Camshaft Bearing	38	Fuel Tank	50
Cap-Hub	2-8		
Carburetor	15	G	
Carburetor Control Rods and Levers	16	Gas Control Rods, Levers and Ball Joints	18
Choke-(For Carburetor)	17	Gasoline Tank	50
Clutch	13	Gauge-Oil	55
Clutch Bearing	13	Gear-Bendix Drive	33
Clutch Pedal	14	Gear-Camshaft	38
Coil-Ignition	27	Gear-Cover on Engine	40
Companion Flange-For Propellor Shaft	56-57	Gear-Distributor	23
Connecting Rod	36	Gear-Crankshaft	38
Connecting Rod Bearing	36	Gear-Idler Engine	39
Control System (Rod, Lever and Ball Joint)		Gear-Generator	26
For Ignition and Carburation	18	Gear-Oil Pump	43
		Gear-Water Pump	42

Index

Model 20-B

G	PAGE	R	PAGE
Gear-Rear Axle	6-7-8	Rear Axle	4
Gear-Speedometer	66-67	Rear Axle Brake	4-5
Gear-Steering	68	Rear Axle Differential	6
Gear-Transmission	72	Rear Axle Pinion and Shaft	6-8
Generator	24	Rear Spring	63
Glass-Windshield	79-80	Rear Wheel	9
		Relay	26
H		Rims-Front-Rear-Spare	45
Head Lamp	30		
Hood	51	S	
Horn	26	Seat and Dash Assembly	19
Hub Cap	2-8	Sediment Trap-Bottom of Fuel Tank	65
		Shaft-Axle	4
I		Shaft-Propellor-Front and Rear	56-57
Ignition Coil	27	Shaft-Transmission Main	73
Ignition Control Rods, Levers, and Ball Joints	18	Shifting Lever	74
Instrument Panel	29	Speedometer Head	66
		Speedometer-Shaft	66
J		Speedometer-Drive Gears	66-67
Joints-Universal	56-57-58	Spring-Front	62
Junction Block	30	Spring-Rear	63
		Starting Motor	32
L		Starter Switch	32
Lamp-Dash	30	Steering Gear-For Left Hand Steer	68
Lamp-Head	30	Storage Battery	21
Lamp-Tail	31		
Lever-Brake-Emergency	75	T	
Lever-Transmission Gear Shift-(For L. H. Steer)	74	Tank-Fuel	20
		Tank-Vacuum	77
M		Tail Lamp	31
Motor-Starting	32	Tappets-Engine Valves	35
Mud Pan	52-53	Tires-Front and Rear	3-9
Muffler	54	Tools and Equipment	45
		Transmission	72
O		Transmission Brake	76
Oil Gauge	55	Transmission Counter Shaft	72
Oil Line	50	Transmission Main Shaft	73
Oil Pan	41		
Oil Pump	43	U	
		Universal Joints	56-57
P			
Pedal-Brake-(To Rear Axle Brake)	10	V	
Pedal-Clutch	14	Vacuum Tank	77
Pinion and Shaft-Rear Axle	6-8	Valves and Tappets	35
Piston	35		
Propellor Shaft-Front	56	W	
Propellor Shaft-Rear	57	Water Pump	41
Propellor Shaft-Amidship Bearing	59	Wheel-Front	3
Propellor Shaft-Companion Flanges	56-57	Wheel-Rear	9
Pump-Oil	43	Wheel-Bearings-Front	2-3
Pump-Water	41	Wheel-Bearings-Rear	4
		Wheel-Steering	70
R		Windshield	79
Radiator	60	Wood Cowl Assembly	12
Radiator Core	60		
Radiator Apron	52		
Reach Rod or Drag Link	20		

AXLE (FRONT) Wheels, Tires and Rims

PART No.	No. per Truck	No. per Assy.	NAME OF PART
3000A1 —A1	1	..	FRONT AXLE—Complete Assembly—Less Hub and Bearing Parts— Consisting of—57—Succeeding Items—
3001A1—SA1	1	..	Front Axle Center and Parts Assembly— CONSISTING OF—5—SUCCEEDING ITEMS—
3001A1	..	1	Front Axle Center
3405B2	..	2	Front Axle Center End Bushing—Upper
3405C3	..	2	Front Axle Center End Bushing—Lower
G-27166-L	..	2	Front Axle Center Set Screw—For Arm Adjustment— $\frac{3}{8}$ "—16USS, Thd. x 3" Long, Flat Point, — $\frac{1}{8}$ " Head
13038A27	..	2	Front Axle Center Set Screw Nut
END OF PARTS IN ASSEMBLY No. 3001A1—SA1			
3002B2—SA1	1	..	Front Axle Steering Knuckle and Single Arm Assembly—Right Hand— CONSISTING OF—8—SUCCEEDING ITEMS—
3002B2	..	1	Front Axle Steering Knuckle—Right Hand
3006B2	..	1	Front Axle Steering Knuckle Spindle Bearing Washer—Special
13038B28	..	1	Front Axle Steering Knuckle Spindle Nut
3007A1	..	1	Front Axle Steering Knuckle Hub Bearing Spacer
3003A1	..	1	Front Axle Steering Arm—Right Hand—Single
G-36608	..	1	Front Axle Steering Arm and Knuckle Key—No. 9 Woodruff
G-31308	..	1	Front Axle Steering Arm and Knuckle Nut— $\frac{3}{4}$ "—16 SAE Thd. x $1\frac{1}{8}$ " Hex. x $\frac{1}{2}$ " Thick —Slotted
G-36315	..	1	Front Axle Steering Arm and Knuckle Nut Cotter— $\frac{1}{8}$ " x $1\frac{1}{4}$ " Long
END OF PARTS IN ASSEMBLY No. 3002B2—SA1			
3002A1—SA1	1	..	Front Axle Steering Knuckle and Double Arm Assembly—Left Hand— CONSISTING OF—12—SUCCEEDING ITEMS—
3002A1	..	1	Front Axle Steering Knuckle—Left Hand
3006B2	..	1	Front Axle Steering Knuckle Spindle Bearing Washer—Special
13038B28	..	1	Front Axle Steering Knuckle Spindle Nut
3007A1	..	1	Front Axle Steering Knuckle Hub Bearing Spacer
G-36608	..	1	Front Axle Steering Arm and Knuckle Key—No. 9 Woodruff
G-31308	..	1	Front Axle Steering Arm and Knuckle Nut— $\frac{3}{4}$ "—16 SAE Thd. x $1\frac{1}{8}$ " Hex. x $\frac{1}{2}$ " Thick —Slotted
G-36315	..	1	Front Axle Steering Arm and Knuckle Nut Cotter— $\frac{1}{8}$ " x $1\frac{1}{4}$ " Long
3004A1—SA1	1	..	Front Axle Steering Arm and Ball Assembly—Left Hand—Double— CONSISTING OF—4—SUCCEEDING ITEMS—
3004A1	..	1	Front Axle Steering Arm—Left Hand—Double
3005A1	..	1	Front Axle Steering Arm Ball— $1\frac{1}{8}$ " Diameter
G-31304	..	1	Front Axle Steering Arm Ball Nut— $\frac{1}{2}$ "—20 S.A.E. Thd.— $\frac{3}{4}$ " Hex. x $\frac{1}{8}$ " Thick— Slotted
G-36308	..	1	Front Axle Steering Arm Ball Nut Cotter— $\frac{1}{2}$ " x $\frac{3}{4}$ " Long
END OF PARTS IN ASSEMBLY No. 3004A1—SA1			
END OF PARTS IN ASSEMBLY No. 3002A1—SA1			
3008A1	2	..	Front Axle Steering Knuckle Thrust Washer—Upper
3008B2	2	..	Front Axle Steering Knuckle Thrust Washer—Lower
13020M13	2	..	Front Axle Steering Knuckle Thrust Washer Lock Pin

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

AXLE (FRONT) Wheels, Tires and Rims—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
3009A1	2	..	Front Axle Steering Knuckle Pin
13010B2	2	..	Front Axle Steering Knuckle Pin Wedge Pin
3010A1	2	..	Front Axle Steering Knuckle Pin Dust Cap
13005E5	2	..	Front Axle Steering Knuckle Pin Felt—At Bottom— $1\frac{1}{8}$ " x $\frac{1}{8}$ " Hard
13049B54	2	..	Front Axle Steering Knuckle Pin Felt Washer—Steel
G-36317	2	..	Front Axle Steering Knuckle Spindle Nut Cotter— $\frac{1}{8}$ " x $1\frac{1}{2}$ " Long
3011A1—SA1	1	..	Front Axle Steering Cross Tube and Ends Assembly— CONSISTING OF—13—SUCCEEDING ITEMS—
3011A1	1	..	Front Axle Steering Cross Tube
3012B2—SA1	1	..	Front Axle Steering Cross Tube End and Parts—Right Hand— CONSISTING OF—5—SUCCEEDING ITEMS—
3012B2	..	1	Front Axle Steering Cross Tube End—Right Hand
3405D4	..	2	Front Axle Steering Cross Tube End Bushing
13023U73	..	1	Front Axle Steering Cross Tube End Clamp Screw
13038C29	..	1	Front Axle Steering Cross Tube End Clamp Screw Nut
G-36064	..	1	Front Axle Steering Cross Tube End Clamp Screw Nut Lockwasher— $\frac{3}{8}$ " SAE—Special Heavy
			<u>END OF PARTS IN ASSEMBLY No. 3012B2—SA1</u>
3012A1—SA1	1	..	Front Axle Steering Cross Tube End and Parts—Left Hand— CONSISTING OF—5—SUCCEEDING ITEMS—
3012A1	..	1	Front Axle Steering Cross Tube End—Left Hand
3405D4	..	2	Front Axle Steering Cross Tube End Bushing
13023U73	..	1	Front Axle Steering Cross Tube End Clamp Screw
13038C29	..	1	Front Axle Steering Cross Tube End Clamp Screw Nut
G-36064	..	1	Front Axle Steering Cross Tube End Clamp Screw Nut Lockwasher— $\frac{3}{8}$ "—SAE Special Heavy
			<u>END OF PARTS IN ASSEMBLY No. 3012A1—SA1</u>
			<u>END OF PARTS IN ASSEMBLY No. 3011A1—SA1</u>
3013A1	2	..	Front Axle Steering Cross Tube End Pin
13010A1	2	..	Front Axle Steering Cross Tube End Pin Wedge Pin— $\frac{3}{8}$ " Dia. x $1\frac{1}{8}$ " Hub Length
G-31306	2	..	Front Axle Steering Cross Tube End Pin Nut— $\frac{5}{8}$ "—18SAE Thd. x $\frac{11}{16}$ " Hex. x $\frac{11}{16}$ " Thick—Slotted
G-36313	2	..	Front Axle Steering Cross Tube End Pin Nut Cotter— $\frac{1}{8}$ " x 1" Long
13049D56	2	..	Front Axle Steering Cross Tube End Pin Washer—Upper—Steel
13049D56	2	..	Front Axle Steering Cross Tube End Pin Washer—Lower—Steel
			<u>END OF PARTS IN ASSEMBLY No. 3000A1—A1</u>
G-37300	2	..	Front Hub Alemite Fitting— $\frac{1}{8}$ " Pipe Thd.—Straight
G-37302	2	..	Front Axle Steering Knuckle Alemite Fitting— $\frac{1}{8}$ " Pipe Thd.—25° Angle
G-37308	2	..	Front Axle Steering Knuckle Pin Alemite Fitting— $\frac{1}{8}$ " Pipe Thd.—90° Angle
G-37308	2	..	Front Axle Steering Cross Tube End Pin Alemite Fitting— $\frac{1}{8}$ " Pipe Thd.—90° Angle
13006A1	2	..	Front Hub Cork Washer— $2\frac{1}{2}$ " I. D. x $3\frac{3}{8}$ " O. D. x $\frac{1}{8}$ " Thick
13049C55	2	..	Front Hub Cork Washer Retainer—Flat
3407A1	2	..	Front Hub Cork Washer Retainer
13000L12	2	..	Front Hub Bearing Cone—Inner (Timken No. 419)
13000U21	2	..	Front Hub Bearing Cone—Outer (Timken No. 2558)
3303A1	2	..	Front Hub Cap

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

AXLE (FRONT) Wheels, Tires and Rims—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
3304A1	2	..	Front Hub Cap Adapter
3300A1—SA1	2	..	Front Wheel, Hub and Flange Assembly— CONSISTING OF—9—SUCCEEDING ITEMS—
3300A1	2	..	Front Wheel—Van No. 22—32" x 4 1/2"—Standard
3301A1—SA1	2	..	Front Hub and Cups Assembly— CONSISTING OF—3—SUCCEEDING ITEMS
3301A1	..	1	Front Hub—8 Bolt Holes on 6 1/2" Dia.
13000T20	..	1	Front Hub Bearing Cup—Inner—Timken No. 412
13000V22	..	1	Front Hub Bearing Cup—Outer—Timken No. 2520
			END OF PARTS IN ASSEMBLY No. 3301A1—SA1
3302A1	2	..	Front Hub Flange—8 Bolt Holes on 6 1/2" Dia.
G-30075	16	..	Front Hub Bolt—1/2"—13 USS Thd. x 2 7/8" Long—Square Under Head
13038H34	16	..	Front Hub Bolt Nut
G-35916	16	..	Front Hub Bolt Nut Lockwasher—1/2" SAE Std.
			END OF PARTS IN ASSEMBLY No. 3300A1—SA1
3305A1	2	..	Front Wheel Tire Casing—33" x 5" Cord—Pneumatic
3306A1	2	..	Front Wheel Tire Inner Tube—33" x 5" Heavy Tourist
3307A1	2	..	Front Wheel Tire Inner Tube Flap—For 33" x 5" Casing
3308A1—SA1	2	..	Front Wheel Rim Assembly—32" x 4 1/2"—For 33" x 5" Pneumatic Tire— CONSISTING OF—7—SUCCEEDING ITEMS—
3308A1	..	1	Front Wheel Rim Base—32" x 4 1/2"
3309A1	..	1	Front Wheel Rim Side Ring—32" x 4 1/2"
3309B2	..	1	Front Wheel Rim Locking Ring—32" x 4 1/2"
3309C3	..	1	Front Wheel Rim Clamp Ring—32" x 4 1/2"
			END OF PARTS IN ASSEMBLY No. 3308A1—SA1
3310A1	8	..	Front Wheel Rim Clamp
13016D4	8	..	Front Wheel Rim Bolt
3425B2	8	..	Front Wheel Rim Bolt Nut

AXLE (REAR) Wheels, Tires and Rims

PART No.	No. per Truck	No. per Assy.	NAME OF PART
3400A1— A1	1	..	REAR AXLE—Complete Assembly—Less (Hubs, Hub Caps, Hub Bolts and Nuts and Brake Drums— Consisting of—107—Succeeding Items—
3401A1—SA1	1	..	Rear Axle Housing and Parts Assembly— CONSISTING OF—11—SUCCEEDING ITEMS—
3401A1	..	1	Rear Axle Housing—Not Sold Separately
G-37506	..	1	Rear Axle Housing Drain Plug— $\frac{1}{2}$ " Pipe—Square Head—Iron
13009A1	..	2	Rear Axle Housing Dowel Pin
3433A1	..	2	Rear Axle Spring Seat
G-38410-E	..	14	Rear Axle Spring Seat and Housing Rivet— $\frac{1}{8}$ " Dia. x $1\frac{1}{8}$ " Long—Flat Head—Iron
3418A1	..	2	Rear Axle Brake Disc
G-38509-D	..	18	Rear Axle Brake Disc and Spring Seat Rivet— $\frac{3}{8}$ " Dia. x 1" Long—Oval Head—Iron
3409A1	..	2	Rear Axle Brake Anchor Bracket
G-37913-D	..	12	Rear Axle Brake Anchor Bracket and Disc Rivet— $\frac{1}{8}$ " Dia. x $\frac{3}{4}$ " Long—Oval Head—Iron
3414A1	..	2	Rear Axle Brake Cam Shaft Bracket Spacer
G-38159-D	..	4	Rear Axle Brake Cam Shaft Bracket Spacer and Disc Rivet— $\frac{1}{4}$ " Dia. x $\frac{5}{8}$ " Long—Oval Head—Iron
END OF PARTS IN ASSEMBLY No. 3401A1—SA1			
3412A1	1	..	Rear Axle Housing Cover
3406A1	1	..	Rear Axle Housing Cover and Housing Gasket
G-10201	10	..	Rear Axle Housing Cover and Housing Cap Screw— $\frac{3}{8}$ "—16 USS Thd. x $\frac{5}{8}$ " Long— $\frac{1}{4}$ " Hex. x $\frac{5}{8}$ " High
G-35914	10	..	Rear Axle Housing Cover and Housing Cap Screw Lockwasher— $\frac{3}{8}$ " SAE Std.
G-37508	1	..	Rear Axle Housing Cover Plug— $\frac{3}{4}$ " Pipe—Square Head—Iron
13000W23	2	..	Rear Axle Hub Bearing Cone—Timken No. 4550
13000X24	2	..	Rear Axle Hub Bearing Cup—Timken No. 4520
3407B2	2	..	Rear Axle Hub Bearing Retainer (Adjuster)
13005F6	2	..	Rear Axle Hub Bearing Retainer Felt
13015A1	2	..	Rear Axle Hub Bearing Retainer Lock
G-10614	2	..	Rear Axle Hub Bearing Retainer Clamp Bolt— $\frac{5}{8}$ "—11 USS Thd. x $2\frac{3}{4}$ " Long— $\frac{1}{4}$ " Hex. x $\frac{5}{8}$ " High
G-30506	2	..	Rear Axle Hub Bearing Retainer Clamp Bolt Nut— $\frac{5}{8}$ "—11 USS Thd. — $1\frac{1}{8}$ " Hex. x $\frac{5}{8}$ " High
G-35918	2	..	Rear Axle Hub Bearing Retainer Clamp Bolt Nut Lockwasher— $\frac{5}{8}$ "—SAE Std.
13012B2	2	..	Rear Axle Shaft and Hub Key
13049E5	2	..	Rear Axle Shaft and Hub Washer
G-31210	2	..	Rear Axle Shaft and Hub Nut—Castle— $1\frac{1}{8}$ "—12 SAE Thd. $1\frac{5}{8}$ " Hex. x $1\frac{1}{2}$ " High
G-36353	2	..	Rear Axle Shaft and Hub Nut Cotter— $\frac{1}{8}$ " x 2" Long
3426A1—SA1	2	..	Rear Axle Shaft and Thrust Plug Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
3426A1	..	1	Rear Axle Shaft—Not Sold Without Plug
3415A1	..	1	Rear Axle Shaft Thrust Plug
END OF PARTS IN ASSEMBLY No. 3426A1—SA1			
3418A1—SA1	2	..	Rear Axle Internal Brake Band, Lining and Brackets Assembly— CONSISTING OF—10—SUCCEEDING ITEMS—
3418A1	..	1	Rear Axle Internal Brake Band

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

AXLE (REAR) Wheels, Tires and Rims—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
3419A1	..	1	Rear Axle Internal Brake Band Lining
13042F6	..	21	Rear Axle Internal Brake Band Lining Rivet— $\frac{1}{8}$ " Dia. x $\frac{1}{2}$ " Long—Flat Countersunk Head—Copper
13042G7	..	2	Rear Axle Internal Brake Band Lining Rivet— $\frac{3}{8}$ " Dia. x $\frac{3}{4}$ " Long—Flat Countersunk Head—Copper
3409B2	..	1	Rear Axle Internal Brake Band End Bracket
G-38505-D	..	3	Rear Axle Internal Brake Band End Bracket Rivet— $\frac{3}{8}$ " Dia. x $\frac{1}{2}$ " Long—Oval Head—Iron
3409C8	..	1	Rear Axle Internal Brake Band Anchor Bracket
G-38158-D	..	6	Rear Axle Internal Brake Band Anchor Bracket Rivet— $\frac{1}{4}$ " Dia. x $\frac{1}{2}$ " Long—Oval Head—Iron
13009B2	..	1	Rear Axle Internal Brake Band Dowel Pin—In Anchor
3454A1	..	2	Rear Axle Internal Brake Band Spring
			END OF PARTS IN ASSEMBLY NO. 3418A1—SA1
3423B2	1	..	Rear Axle Internal Brake Cam Shaft and Cam Assembly—Right Hand
3423A1	1	..	Rear Axle Internal Brake Cam Shaft and Cam Assembly—Left Hand
3409D4	2	..	Rear Axle Internal Brake Cam Shaft Bracket—Inner—At Differential Carrier
G-10306	4	..	Rear Axle Internal Brake Cam Shaft Bracket Cap Screw— $\frac{1}{8}$ "—14 USS x $1\frac{1}{4}$ "—Long $\frac{3}{8}$ " Hex.— $\frac{1}{8}$ " High
G-35915	4	..	Rear Axle Internal Brake Cam Shaft Bracket Cap Screw Lockwasher— $\frac{1}{8}$ " SAE Std.
3409E5	2	..	Rear Axle Internal Brake Cam Shaft Bracket—Outer—At Brake Disc.
13016H8	2	..	Rear Axle Internal Brake Cam Shaft Bracket Bolt—Special
G-30502	4	..	Rear Axle Internal Brake Cam Shaft Bracket Bolt Nut— $\frac{3}{8}$ "—16 USS Thd.— $\frac{11}{16}$ " Hex. $\frac{3}{8}$ " High
G-35914	2	..	Rear Axle Internal Brake Cam Shaft Bracket Bolt Nut Lockwasher— $\frac{3}{8}$ " SAE Std.
3454F6	2	..	Rear Axle Internal Brake Cam Shaft Bracket Bolt Spring
13049F6	4	..	Rear Axle Internal Brake Cam Shaft Bracket Bolt Spring Washer
3408A1	2	..	Rear Axle Internal Brake Lever
G-10206	2	..	Rear Axle Internal Brake Lever Screw—In Inner Bracket— $\frac{3}{8}$ "—16 USS Thd. x $1\frac{1}{4}$ " Long— $\frac{1}{8}$ " Hex. x $\frac{3}{8}$ " High
G-30502	2	..	Rear Axle Internal Brake Lever Screw Nut— $\frac{3}{8}$ "—16 USS Thd.— $\frac{11}{16}$ " Hex. x $\frac{3}{8}$ " High
G-10210	2	..	Rear Axle Internal Brake Lever Clamp Screw— $\frac{3}{8}$ "—16 USS Thd. x $1\frac{1}{4}$ " Long— $\frac{1}{8}$ " Hex. x $\frac{3}{8}$ " High
G-30502	2	..	Rear Axle Internal Brake Lever Clamp Screw Nut— $\frac{3}{8}$ "—16 USS Thd.— $\frac{11}{16}$ " Hex. x $\frac{3}{8}$ " High
G-35914	2	..	Rear Axle Internal Brake Lever Clamp Screw Nut Lockwasher— $\frac{3}{8}$ " SAE Std.
3465A1—SA1	1	..	Rear Axle Differential Carrier and Parts Assembly—Ratio 5.66:1 Only— CONSISTING OF—43—SUCCEEDING ITEMS— (This Ratio 5.66:1 is Standard—See Below for Differential Carrier Assembly with Ratio 5.1:1)
3465A1—SA2	1	..	Rear Axle Differential Carrier and Caps Assembly— CONSISTING OF—4—SUCCEEDING ITEMS—
3465A1	..	1	Rear Axle Differential Carrier
3465A1	..	2	Rear Axle Differential Carrier Cap
G-10608	..	4	Rear Axle Differential Carrier and Cap Cap Screw— $\frac{3}{8}$ "—11 USS. Thd. x $1\frac{1}{4}$ " Long— $\frac{11}{16}$ " Hex. x $\frac{3}{8}$ " High

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

AXLE (REAR) Wheels, Tires and Rims—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
G-35918	..	4	Rear Axle Differential Carrier and Cap Cap Screw Lockwasher— $\frac{3}{8}$ "—SAE Std. END OF PARTS IN ASSEMBLY No. 3465A1—SA2
3460A1—SA1	1	..	Rear Axle Differential and Ring Gear Assembly—Ratio 5.66:1 Only— CONSISTING OF—9—SUCCEEDING ITEMS—
3460A1—SA2	1	..	Rear Axle Differential Assembly— CONSISTING OF—6—SUCCEEDING ITEMS—
3461A1	..	1	Rear Axle Differential Case—Right Hand—Plain
3461B2	..	1	Rear Axle Differential Case—Left Hand—Flanged
None	..	12	Rear Axle Differential Case Cap Screw—Not Serviced
3464A1	..	1	Rear Axle Differential Spider
3463A1	..	4	Rear Axle Differential Pinion
3462A1	..	2	Rear Axle Differential Side Gear END OF PARTS IN ASSEMBLY No. 3460A1—SA2
3457A1	1	..	Rear Axle Differential Ring Gear—Ratio 5.66:1 Only—If Ratio is Changed Both Ring Gear and Pinion Shaft Must Be Changed
G-38510-D	12	..	Rear Axle Differential and Ring Gear Rivet— $\frac{3}{8}$ " Dia. x $1\frac{1}{8}$ " Long—Oval Head—Iron END OF PARTS IN ASSEMBLY No. 3460A1—SA1
13000Y25	2	..	Rear Axle Differential Bearing Cone—Timken No. 377
13000Z26	2	..	Rear Axle Differential Bearing Cup—Timken No. 3720
3424A1	2	..	Rear Axle Differential Bearing Adjusting Ring
3411A1	2	..	Rear Axle Differential Bearing Adjusting Ring Lock Pin
G-36326	2	..	Rear Axle Differential Bearing Adjusting Ring Lock Pin Cotter Pin— $\frac{1}{8}$ " x 1" Long
13015B2	1	..	Rear Axle Pinion Shaft Outer Bearing Adjusting Cage Lock
G-10415	1	..	Rear Axle Pinion Shaft Outer Bearing Adjusting Cage Clamp Bolt— $\frac{1}{2}$ "—13 USS Thd. x $2\frac{3}{4}$ " Long— $\frac{3}{4}$ " Hex. x $\frac{1}{2}$ " High
G-30504	1	..	Rear Axle Pinion Shaft Outer Bearing Adjusting Cage Clamp Bolt Nut— $\frac{1}{2}$ "—13 USS Thd.— $\frac{7}{8}$ " Hex. $\frac{1}{4}$ " High
G-35916	1	..	Rear Axle Pinion Shaft Outer Bearing Adjusting Cage Clamp Bolt Nut Lockwasher— $\frac{1}{4}$ " SAE Std.
3410A1—SA1	1	..	Rear Axle Pinion Shaft Bearing Adjusting Cage Outer and Parts Assembly— Ratio—5.66:1 Only— CONSISTING OF—18—SUCCEEDING ITEMS—
3456A1—SA1	1	..	Rear Axle Pinion Shaft and Bushing Assembly—Ratio—5.66:1 Only— CONSISTING OF—2—SUCCEEDING ITEMS—
3456A1	..	1	Rear Axle Pinion Shaft—Ratio—5.66:1 Only—If Ratio Is Changed Both Pinion Shaft and Ring Gear Must Be Changed
3405A1	..	1	Rear Axle Pinion Shaft Bushing END OF PARTS IN ASSEMBLY No. 3456A1—SA1
13038H8	1	..	Rear Axle Pinion Shaft Nut—Inner
G-36330	1	..	Rear Axle Pinion Shaft Nut Cotter Pin—Inner— $\frac{1}{8}$ " x $1\frac{1}{2}$ " Long
G-31806	1	..	Rear Axle Pinion Shaft Nut—Outer (Universal Joint Flange End) 1"—20 SAE Thd— $1\frac{1}{8}$ " Hex. $\frac{1}{2}$ " High—Slotted—Steel
G-36332	1	..	Rear Axle Pinion Shaft Nut Cotter Pin—Outer— $\frac{1}{8}$ " x $1\frac{1}{4}$ " Long
13001E5	1	..	Rear Axle Pinion Shaft Bearing—Inner—Single Row Ball
13002A1	1	..	Rear Axle Pinion Shaft Bearing—Outer—Double Row Ball
3425A1	2	..	Rear Axle Pinion Shaft Bearing Lock Nut

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

AXLE (REAR) Wheels, Tires and Rims—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
3006A1	1	..	Rear Axle Pinion Shaft Bearing Lock Nut Locking Washer
3416B2	1	..	Rear Axle Pinion Shaft Bearing Baffle Plate
3410A1	1	..	Rear Axle Pinion Shaft Bearing Adjusting Cage—Outer
3407C8	1	..	Rear Axle Pinion Shaft Bearing Retainer—Outer Bearing
13005G7	1	..	Rear Axle Pinion Shaft Felt
3407D4	1	..	Rear Axle Pinion Shaft Felt Retainer
G-24026	1	..	Rear Axle Pinion Shaft Felt Retainer Mach. Screw No. 10—24 Thd. x $\frac{1}{4}$ " Long— Round Fill. Head
G-36004	1	..	Rear Axle Pinion Shaft Felt Retainer Mach. Screw Lockwasher—No. 10 SAE Std. for Fill. Head
			END OF PARTS IN ASSEMBLY No. 3410A1—SA1
			END OF PARTS IN ASSEMBLY No. 3465A1—SA1
G-10304	6	..	Rear Axle Differential Carrier and Housing Cap Screw
G-35915	6	..	Rear Axle Differential Carrier and Housing Cap Screw Lockwasher— $\frac{1}{16}$ " SAE Std.
3406A1	1	..	Rear Axle Differential Carrier and Housing Gasket
			END OF PARTS IN ASSEMBLY No. 3400A1—A1
			Note—When Rear Axle Differential Carrier and Parts Assembly with Gears Ratio 5.1:1 Is Wanted Use the Following—
3465A1—SA3	1	..	Rear Axle Differential Carrier and Parts Assembly—Ratio 5.1:1 Only— CONSISTING OF—43—SUCCEEDING ITEMS— This Ratio 5.1:1 Is Special—See Above for Differential Carrier Assembly with Ratio 5.66:1
3465A1—SA2	1	..	Rear Axle Differential Carrier and Caps Assembly— CONSISTING OF—4—SUCCEEDING ITEMS—
3465A1	..	1	Rear Axle Differential Carrier
3466A1	..	2	Rear Axle Differential Carrier Cap
G-10608	..	4	Rear Axle Differential Carrier and Cap Cap Screw— $\frac{5}{16}$ "—11 USS Thd. x $1\frac{3}{4}$ " Long— $\frac{11}{16}$ " Hex. x $\frac{5}{16}$ " High—Steel
G-35918	..	4	Rear Axle Differential Carrier and Cap Cap Screw Lockwasher— $\frac{5}{16}$ " SAE Std.
			END OF PARTS IN ASSEMBLY No. 3465A1—SA2
3460A1—SA3	1	..	Rear Axle Differential and Ring Gear Assembly—Ratio 5.1:1 Only— CONSISTING OF—9—SUCCEEDING ITEMS—
3460A1—SA2	1	..	Rear Axle Differential Assembly— CONSISTING OF—6—SUCCEEDING ITEMS—
3461A1	..	1	Rear Axle Differential Case—Right Hand—Plain
3461B2	..	1	Rear Axle Differential Case—Left Hand—Flanged
None	..	12	Rear Axle Differential Case Cap Screw—Not Serviced
3464A1	..	1	Rear Axle Differential Spider
3463A1	..	4	Rear Axle Differential Pinion
3462A1	..	2	Rear Axle Differential Side Gear
			END OF PARTS IN ASSEMBLY No. 3460A1—SA2
3457B2	1	..	Rear Axle Differential Ring Gear—Ratio 5.1:1 Only—If Ratio Is Changed, Both Ring and Pinion Shaft Must Be Changed
G-38510-D	12	..	Rear Axle Differential and Ring Gear Rivet— $\frac{3}{8}$ " Dia. x $1\frac{1}{8}$ " Long—Oval Head—Iron
			END OF PARTS IN ASSEMBLY No. 3460A1—SA3

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

AXLE (REAR) Wheels, Tires and Rims—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
13000Y25	2	..	Rear Axle Differential Bearing Cone—Timken No. 377
13000Z26	2	..	Rear Axle Differential Bearing Cup—Timken No. 3720
3424A1	2	..	Rear Axle Differential Bearing Adjusting Ring
3411A1	2	..	Rear Axle Differential Bearing Adjusting Ring Lock Pin
G-36326	2	..	Rear Axle Differential Bearing Adjusting Ring Lock Pin Cotter Pin— $\frac{1}{8}$ " x 1" Long
13015B2	1	..	Rear Axle Pinion Shaft Outer Bearing Adjusting Cage Lock
G-10415	1	..	Rear Axle Pinion Shaft Outer Bearing Adjusting Cage Clamp Bolt— $\frac{1}{4}$ "—13 USS Thd. $\frac{3}{4}$ " Hex. x $\frac{1}{4}$ " High
G-30504	1	..	Rear Axle Pinion Shaft Outer Bearing Adjusting Cage Clamp Bolt Nut— $\frac{1}{4}$ "—13 USS $\frac{7}{8}$ " Hex. $\frac{1}{4}$ " High
G-35916	1	..	Rear Axle Pinion Shaft Outer Bearing Adjusting Cage Clamp Bolt Nut Lockwasher— $\frac{1}{2}$ " SAE Std.
3410A1—SA2	1	..	Rear Axle Pinion Shaft Bearing Adjusting Cage—Outer—and Parts Assembly— Ratio 5.1:1 Only— CONSISTING OF—18—SUCCEEDING ITEMS—
3456B2—SA1	1	..	Rear Axle Pinion Shaft and Bushing Assembly—Ratio 5.1:1 Only— CONSISTING OF—2—SUCCEEDING ITEMS—
3456B2	..	1	Rear Axle Pinion Shaft—Ratio 5.1:1 Only—If Ratio Is Changed, Both Pinion Shaft and Ring Gear Must Be Changed
3405A1	..	1	Rear Axle Pinion Shaft Bushing END OF PARTS IN ASSEMBLY NO. 3456B2—SA1
13038H8	1	..	Rear Axle Pinion Shaft Nut—Inner— $\frac{1}{8}$ "—14 SAE Thd. $1\frac{1}{2}$ " Hex. x $\frac{1}{4}$ " High—Slotted
G-36330	1	..	Rear Axle Pinion Shaft Nut Cotter Pin—Inner— $\frac{1}{8}$ " x $1\frac{1}{2}$ " Long
G-31806	1	..	Rear Axle Pinion Shaft Nut—Outer (Universal Joint Flange End)—1"—20 SAE Thd.— $1\frac{1}{8}$ " Hex. $\frac{1}{2}$ " High—Slotted
G-36332	1	..	Rear Axle Pinion Shaft Nut Cotter—Outer— $\frac{1}{8}$ " x $1\frac{3}{4}$ " Long
13001E5	1	..	Rear Axle Pinion Shaft Bearing—Inner—Single Row Ball
13002A1	1	..	Rear Axle Pinion Shaft Bearing—Outer—Double Row Ball
3425A1	2	..	Rear Axle Pinion Shaft Bearing Lock Nut
3006A1	1	..	Rear Axle Pinion Shaft Bearing Lock Nut Locking Washer
3451A1	1	..	Rear Axle Pinion Shaft Bearing Baffle Plate
3410A1	1	..	Rear Axle Pinion Shaft Bearing Adjusting Cage—Outer
3407C3	1	..	Rear Axle Pinion Shaft Bearing Retainer—Outer Bearing
13005G7	1	..	Rear Axle Pinion Shaft Felt
3407D4	1	..	Rear Axle Pinion Shaft Felt Retainer
G-24026	1	..	Rear Axle Pinion Shaft Felt Retainer Mach. Screw No. 10—24 Thd. x $\frac{1}{2}$ " Long—Round Fill. Head
G-36004	1	..	Rear Axle Pinion Shaft Felt Retainer Mach. Screw Lockwasher—No. 10 SAE Std. for Fill. Head END OF PARTS IN ASSEMBLY NO. 3410A1—SA2 END OF PARTS IN ASSEMBLY NO. 3465A1—SA3
13012A1	1	..	Rear Axle Pinion Shaft and Universal Joint Flange Key
G-37300	2	..	Rear Axle Internal Brake Cam Shaft Alemite Fitting— $\frac{1}{8}$ " Pipe Thd.—Straight
G-37302	2	..	Rear Hub Bearing Alemite Fitting— $\frac{1}{8}$ " Pipe Thd.—25° Angle
3303A1	2	..	Rear Axle Hub Cap

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

AXLE (REAR) Wheels, Tires and Rims—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
3300B2—SA1	2	..	Rear Wheel, Hub and Brake Drum Assembly— CONSISTING OF—9—SUCCEEDING ITEMS—
3300B2	2	..	Rear Wheel—Van No. 47—32" x 4½" Standard
3301B2—SA1	2	..	Rear Hub, Adapter and Set Screw Assembly— CONSISTING OF—3—SUCCEEDING ITEMS—
3301B2	..	1	Rear Hub—8 Bolt Holes on 6½" Dia.
3304B2	..	1	Rear Hub Cap Adapter
G-26552-K	..	1	Rear Hub Cap Adapter Set Screw—¼"—16 USS Thd. x ¾" Long—Headless—Oval Point
END OF PARTS IN ASSEMBLY No. 3301B2—SA1			
18016J10	16	..	Rear Hub and Wheel Bolt—Special
G-31106	16	..	Rear Hub and Wheel Bolt Nut—¾"—18 SAE Thd. ½" Hex. ½" High
G-35918	16	..	Rear Hub and Wheel Bolt Nut Lockwasher—¾" SAE Std.
3428A1	2	..	Rear Axle Brake Drum
END OF PARTS IN ASSEMBLY No. 3300B2—SA1			
3305A1	2	..	Rear Wheel Tire Casing—33" x 5" Cord—Pneumatic
3306A1	2	..	Rear Wheel Tire Inner Tube—33" x 5" Heavy Tourist
3307A1	2	..	Rear Wheel Tire Inner Tube Flap—For 33" x 5" Casing
3308A1—SA1	2	..	Rear Wheel Rim Assembly—32" x 4½"—For 33" x 5" Pneumatic Tire CONSISTING OF—4—SUCCEEDING ITEMS—
3308A1	..	1	Rear Wheel Rim Base—32" x 4½"
3309A1	..	1	Rear Wheel Rim Side Ring—32" x 4½"
3309B2	..	1	Rear Wheel Rim Locking Ring—32" x 4½"
3309C8	..	1	Rear Wheel Rim Clamp Ring—32" x 4½"
END OF PARTS IN ASSEMBLY No. 3308A1—SA1			
3310A1	8	..	Rear Wheel Rim Clamp
18016D4	8	..	Rear Wheel Rim Bolt
3425B2	8	..	Rear Wheel Rim Bolt Nut—½"—USS—Special—Sherardized

BRAKE OPERATING PARTS—For 144" Wheel Base Only (See page 10-A for Brake Operating Parts for 131" Wheel Base)

PART No.	No. per Truck	No. per Assy.	NAME OF PART
18032B2	1	..	BRAKE PEDAL—For Foot Brake Only
18033A1	1	..	Brake Pedal Foot Pad and Rod Assembly
G-14216	1	..	Brake Pedal and Foot Pad Clamp Screw— $\frac{3}{8}$ "—24 SAE Thd. $1\frac{1}{2}$ " Long— $\frac{1}{8}$ " Hex.— $\frac{3}{4}$ " High—Drilled End
G-31202	1	..	Brake Pedal and Foot Pad Clamp Screw Castle Nut— $\frac{3}{8}$ "—24 SAE Thd. $\frac{1}{8}$ " Hex. x $\frac{1}{2}$ " High
G-36317	1	..	Brake Pedal and Foot Pad Clamp Screw Castle Nut Cotter Pin— $\frac{3}{4}$ " x 1" Long
4900A1—SA1	1	..	Brake Rod Assembly—Brake Pedal to Brake Cross Shaft— CONSISTING OF—5—SUCCEEDING ITEMS—
G-37005	..	1	Brake Rod End Yoke— $\frac{1}{2}$ " Dia. SAE Adjustable
4905A1	..	1	Brake Rod End Yoke— $\frac{1}{2}$ " Dia. SAE Adjustable with Special Nut (Not Sold Without Nut)
4901A1	..	1	Brake Rod End Yoke Special Nut
4900A1	..	1	Brake Rod— $\frac{1}{2}$ " Dia. x 76" Long
G-31104	..	2	Brake Rod Plain Nut— $\frac{1}{2}$ "—20 SAE Thd. $\frac{3}{4}$ " Hex. x $\frac{1}{8}$ " High
			END OF PARTS IN ASSEMBLY No. 4900A1—SA1
3408C3	1	..	Brake Lever—5" Centers
G-14121	1	..	Brake Lever Clamp Screw— $\frac{1}{8}$ "—24 SAE Thd.— $1\frac{1}{2}$ " Long— $\frac{1}{2}$ " Hex. x $\frac{1}{4}$ " High—Drilled End
G-31201	1	..	Brake Lever Clamp Screw Castle Nut— $\frac{1}{8}$ "—24 SAE Thd.— $\frac{1}{2}$ " Hex. x $\frac{1}{4}$ " High
G-36304	1	..	Brake Lever Clamp Screw Cotter Pin— $\frac{1}{8}$ " x $\frac{3}{4}$ " Long
G-36616	1	..	Brake Lever Key—No. 13 Woodruff
4902A1	1	..	Brake Cross Shaft
3409J10	2	..	Brake Cross Shaft Bracket
G-37300	2	..	Brake Cross Shaft Bracket Alemite Fitting— $\frac{1}{8}$ " Pipe Thd.—Straight
G-11605	4	..	Brake Cross Shaft Bracket Cap Screw— $\frac{3}{8}$ "—24 SAE Thd. $1\frac{1}{8}$ " Long— $\frac{1}{8}$ " Hex. x $\frac{3}{4}$ " High
G-35914	4	..	Brake Cross Shaft Bracket Lockwasher— $\frac{3}{8}$ " SAE Std.
G-31102	4	..	Brake Cross Shaft Bracket Plain Nut— $\frac{3}{8}$ "—24 SAE Thd.— $\frac{1}{8}$ " Hex. $\frac{1}{4}$ " High
3408D4	1	..	Brake Lever—4" Centers
G-14121	1	..	Brake Lever Clamp Screw— $\frac{1}{8}$ "—24 SAE Thd.— $1\frac{1}{2}$ " Long— $\frac{1}{2}$ " Hex. x $\frac{1}{4}$ " High—Drilled End
G-31201	1	..	Brake Lever Clamp Screw Castle Nut— $\frac{1}{8}$ "—24 SAE Thd.— $\frac{1}{2}$ " Hex. x $\frac{1}{4}$ " High
G-36304	1	..	Brake Lever Clamp Screw Cotter Pin— $\frac{1}{8}$ " x $\frac{3}{4}$ " Long
G-36616	1	..	Brake Lever Key—No. 13 Woodruff
4900B2—SA1	1	..	Brake Rod Assembly—Brake Cross Shaft To Brake Equalizer— CONSISTING OF—5—SUCCEEDING ITEMS—
G-37005	..	1	Brake Rod End Yoke— $\frac{1}{2}$ " SAE Adjustable
4905A1	..	1	Brake Rod End Yoke— $\frac{1}{2}$ " SAE Adjustable With Special Nut (Not Sold Without Nut)
4901A1	..	1	Brake Rod End Yoke Special Nut
4900B2	..	1	Brake Rod— $\frac{1}{2}$ " Dia. x 20 $\frac{1}{4}$ " Long
G-31104	..	2	Brake Rod Plain Nut— $\frac{1}{2}$ "—20 SAE Thd.— $\frac{3}{4}$ " Hex. x $\frac{1}{8}$ " High
			END OF ASSEMBLY No. 4900B2—SA1
G-36705	4	..	Brake Rod Clevis Pins— $\frac{1}{2}$ " SAE Std.
G-36325	4	..	Brake Rod Clevis Cotter Pin— $\frac{1}{8}$ " x $\frac{3}{8}$ " Long
4903A1	1	..	Brake Equalizer
3454E5	1	..	Brake Rod Tension Spring
4904A1	1	..	Brake Rod Tension Block

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

CLOSED CAB ASSEMBLY—As Required

PART No.	No. per Truck	No. per Assy.	NAME OF PART
10102A1— A1	1	..	CLOSED CAB—Complete Assembly—
G-28956	6	..	Closed Cab Assembly and Frame Carriage Bolt— $\frac{3}{8}$ " Dia. x $2\frac{1}{2}$ " Long
G-30802	6	..	Closed Cab Assembly and Frame Carriage Bolt Nut— $\frac{3}{8}$ "—16 USS Thd.—Square
G-35914	6	..	Closed Cab Assembly and Frame Carriage Bolt Lockwasher— $\frac{3}{8}$ " SAE Std.
13014H8	1	..	Caution Plate—For Detroit Production Only—As Specified
13014J10	1	..	Caution Plate—For Walkerville Production Only—As Specified
13023U21	4	..	Caution Plate Wood Screw—No. 4 x $\frac{1}{2}$ " Long—Oval Head—Nickel Plated

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

COWL ASSEMBLY (Wood) As Required

PART No.	No. per Truck	No. per Assy.	NAME OF PART
10100A1— A1	1	..	WOOD COWL—Complete Assembly—
G-28956	6	..	Wood Cowl Assembly and Frame Carriage Bolt— $\frac{3}{8}$ " Dia. x $2\frac{1}{2}$ " Long
G-30802	6	..	Wood Cowl Assembly and Frame Carriage Bolt Nut— $\frac{3}{8}$ "—16 USS. Thd.—Square
G-35914	6	..	Wood Cowl Assembly and Frame Carriage Bolt Lockwasher— $\frac{3}{8}$ " SAE Std.
13014H8	1	..	Caution Plate—For Detroit Production Only—As Specified
13014J10	1	..	Caution Plate—For Walkerville Production Only—As Specified
13023U21	4	..	Caution Plate Wood Screw—Nickle Plated

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

CLUTCH—Borg & Beck Model No. 10KP Only—Used Up To November 1st, 1925
(See Pages 13-A and 14-A for Borg & Beck Clutch, Model No. 11QL)

PART No.	No. per Truck	No. per Assy.	NAME OF PART
1000A1—A1	1	..	CLUTCH—Complete Assembly— Consisting of—28—Succeeding Items—
1013A1—SA1	1	..	Clutch Release Collar—Bearing and Bushing Assembly— CONSISTING OF—7—SUCCEEDING ITEMS—
1013A1	..	1	Clutch Release Collar
13001A1	..	1	Clutch Release Bearing—Guerney (No. 209 C. T. Plain)
1024A1	..	1	Clutch Release Bearing Bushing
13005B2	..	1	Clutch Release Bearing Felt
1524A1	..	1	Clutch Release Bearing Felt Retainer
13134E5	..	1	Clutch Release Bearing Felt Retainer Lock Wire
1014A1	..	1	Clutch Release Flange
<u>END OF PARTS IN ASSEMBLY No. 1013A1—SA1</u>			
1021A1—SA1	1	..	Clutch First Cover Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
1021A1	..	1	Clutch First Cover
None	..	1	Clutch Name Plate—Not Sold Separately
<u>END OF PARTS IN ASSEMBLY No. 1021A1—SA1</u>			
1016A1—SA1	1	..	Clutch Mounting Ring Assembly— CONSISTING OF—3—SUCCEEDING ITEMS—
1016A1	..	1	Clutch Mounting Ring
1017A1	..	3	Clutch Pressure Lever
1511A1	..	3	Clutch Pressure Lever Pin—Special
<u>END OF PARTS IN ASSEMBLY No. 1016A1—SA1</u>			
1004A1—SA1	1	..	Clutch Drive Plate Assembly— CONSISTING OF—5—SUCCEEDING ITEMS—
1004A1	..	1	Clutch Drive Plate
1003A1	..	2	Clutch Drive Plate Facing—10" Dia.—Asbestos Fabric
13042A1	..	12	Clutch Drive Plate Facing Rivet—Special—Brass
1019A1	..	1	Clutch Drive Plate Hub
13042B2	..	8	Clutch Drive Plate and Hub Rivet—Special—Steel
<u>END OF PARTS IN ASSEMBLY No. 1004A1—SA1</u>			
1004B2	1	..	Clutch Pressure Plate
1006A1	3	..	Clutch Pressure Plate Release Spring
1006B2	1	..	Clutch Thrust Spring—Weight 275 Lbs.
G-10302	2	..	Clutch Adjusting Screw— $\frac{1}{8}$ "—14 USS Thd. x $\frac{3}{4}$ " Long— $\frac{5}{16}$ " Hex. x $\frac{1}{16}$ " Thick— $\frac{1}{8}$ " Length Thd. Cap Screw
1025A1	2	..	Clutch Adjusting Screw Lipped Washer—Special
G-35915	2	..	Clutch Adjusting Screw Lockwasher— $\frac{1}{8}$ " SAE Std.
1511B2	3	..	Clutch Flywheel Pin—Special
<u>END OF PARTS IN ASSEMBLY No. 1000A1—A1</u>			
13001B2	1	..	Clutch Pilot Bearing—S. K. F. No. 205-S
G-10105	12	..	Clutch Assembly and Flywheel Cap Screw— $\frac{1}{8}$ "—18 USS Thd.—1" Long— $\frac{1}{2}$ " Hex. x $\frac{1}{8}$ " High
G-35913	12	..	Clutch Assembly and Flywheel Cap Screw Lockwasher— $\frac{1}{8}$ " SAE Std.

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

CLUTCH—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
13032A1	1	..	Clutch Pedal—On Shifter Shaft—Left Hand Side
13033A1	1	..	Clutch Pedal Foot Pad and Rod Assembly
G-14216	1	..	Clutch Pedal and Foot Pad Clamp Screw— $\frac{3}{8}$ "—24 SAE Thd.— $1\frac{1}{2}$ " Long— $\frac{1}{8}$ " Hex. x $\frac{3}{4}$ " High—Drilled End
G-31202	1	..	Clutch Pedal and Foot Pad Clamp Screw Castle Nut— $\frac{3}{8}$ "—24 SAE Thd.— $\frac{1}{8}$ " Hex x $\frac{1}{2}$ " High
G-36317	1	..	Clutch Pedal and Foot Pad Clamp Screw Castle Nut Cotter Pin— $\frac{3}{32}$ " x 1" Long
G-26863-R	1	..	Clutch Pedal Set Screw— $\frac{3}{8}$ "—16 USS Thd. High Head—Oval Pivot Point
G-30502	1	..	Clutch Pedal Set Screw Nut— $\frac{3}{8}$ "—16 USS Thd.— $\frac{1}{2}$ " Hex. x $\frac{3}{8}$ " High
1017B2	1	..	Clutch Throwout Lever
G-36616	1	..	Clutch Throwout Lever and Shaft Key—No. 13 Woodruff
G-14224	1	..	Clutch Throwout Lever Clamp Screw— $\frac{3}{8}$ "—24 SAE Thd.—2" Long— $\frac{1}{8}$ " Hex x $\frac{1}{2}$ " High—Drilled End
G-31202	1	..	Clutch Throwout Lever Clamp Screw Castle Nut— $\frac{3}{8}$ "—24 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{1}{2}$ " High
G-36317	1	..	Clutch Throwout Lever Clamp Screw Castle Nut Cotter— $\frac{3}{32}$ " x 1" Long

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

CARBURETOR—Zenith SV4P (Setting 22-10 20 x 4-20-45-44)—For Use With Buda WTU Engine

PART No.	No. per Truck	No. per Assy.	NAME OF PART
7500A1— A1	1	..	CARBURETOR—Complete Assembly—
			Consisting of—79—Succeeding Items—
7505A1	1	..	Carburetor Bowl
7517A1	1	..	Carburetor Bowl Plug—In Bottom of Bowl—Over Main. Jet Assembly
13049H8	1	..	Carburetor Bowl Plug Washer—Red Fibre
7517B2	1	..	Carburetor Bowl Plug—In Side of Bowl—Over Compensating Jet
13049J10	1	..	Carburetor Bowl Plug Washer—Red Fibre
7520A1	1	..	Carburetor Channel Filler Screw—In Bowl
13049K11	1	..	Carburetor Channel Filler Screw Washer—Red Fibre
7517C3	2	..	Carburetor Channel Hole Plug—In Bowl
7515A1	1	..	Carburetor Compensating Jet—In Side of Bowl
13049K11	1	..	Carburetor Compensating Jet Washer—Red Fibre
7504A1	1	..	Carburetor Union Body
13049L12	1	..	Carburetor Union Washer—Red Fibre
7517D4	1	..	Carburetor Union Body Filter Plug
13049M13	1	..	Carburetor Union Body Filter Plug Washer—Red Fibre
7519A1	1	..	Carburetor Filter Screen Assembly—In Union Body
7526A1	1	..	Carburetor Sec. Venturi—Assembly—Pressed Into Bowl
7515B2	1	..	Carburetor Main Jet—Assembly—In Bowl
13049N14	1	..	Carburetor Main Jet Washer—Red Fibre
7515C3	1	..	Carburetor Cap Jet Assembly—Screened Into Bowl
13049N14	1	..	Carburetor Cap Jet Washer—Red Fibre
7512A1	1	..	Carburetor Float Assembly
7520C3	1	..	Carburetor Float Axle and Retaining Screw Assembly
13049P16	1	..	Carburetor Float Axle and Retaining Screw Washer—Red Fibre
7511A1	1	..	Carburetor Float Cover
7513A1	1	..	Carburetor Float Cover Gasket
13023Y25	2	..	Carburetor Float Cover Machine Screw
7521A1	1	..	Carburetor Needle Valve Seat
13049J10	1	..	Carburetor Needle Valve Seat Washer—Red Fibre
7525A1—SA1	1	..	Carburetor Needle Valve and Collar Assembly—
			CONSISTING OF—2—SUCCEEDING ITEMS—
7525A1	..	1	Carburetor Needle Valve
7510A1	..	1	Carburetor Needle Valve Collar
			END OF PARTS IN ASSEMBLY NO. 7525A1—SA1
7503A1—SA1	1	..	Carburetor Barrel and Shaft Bushings Assembly—
			CONSISTING OF—2—SUCCEEDING ITEMS—
7508A1	..	1	Carburetor Barrel
7507A1	..	2	Carburetor Butterfly Shaft Bushing
			END OF PARTS IN ASSEMBLY NO. 7503A1—SA1
7513B2	1	..	Carburetor Barrel and Bowl Gasket
13023Z26	2	..	Carburetor Barrel and Bowl Machine Screw
G-35912	2	..	Carburetor Barrel and Bowl Machine Screw Lockwasher— $\frac{1}{4}$ " Screw— $\frac{1}{16}$ " x $\frac{1}{16}$ "
7520B2	1	..	Carburetor Priming Hole Screw—In Barrel
7526B2	1	..	Carburetor Venturi (Choke)
13023A27	1	..	Carburetor Venturi Machine Screw
G-35904	1	..	Carburetor Venturi Machine Screw Lockwasher—For No. 10 Fill. Head Machine Screw

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

CARBURETOR—Zenith SV4P—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
7507B2	1	..	Carburetor Idling Well Bushing—Pressed Into Bowl
7507C3	1	..	Carburetor Idling Well Bushing—Pressed Into Bowl
7519B2	1	..	Carburetor Idling Well Screen
7515D4	1	..	Carburetor Idling Jet Assembly
13049Q17	1	..	Carburetor Idling Jet Washer—Red Fibre
7521B2	1	..	Carburetor Idling Adjusting Seat
13049R18	1	..	Carburetor Idling Adjusting Seat Washer—Red Fibre
7509A1	1	..	Carburetor Idling Adjusting Needle and Cap Assembly
7523A1	1	..	Carburetor Idling Adjusting Needle Spring
7508A1	1	..	Carburetor Butterfly—In Barrel
7520D4	2	..	Carburetor Butterfly and Shaft Set Screw
7522A1—SA1	1	..	Carburetor Butterfly Shaft and Lever Assembly—
			CONSISTING OF—3—SUCCEEDING ITEMS—
7522A1	..	1	Carburetor Butterfly Shaft
7516A1	..	1	Carburetor Butterfly Shaft Lever Assembly—(With $\frac{1}{4}$ "—28 Thd. Tapped Hole)
13020J10	..	1	Carburetor Butterfly Shaft Lever Taper Pin—Special
			<u>END OF PARTS IN ASSEMBLY No. 7522A1—SA1</u>
13005K11	2	..	Carburetor Butterfly Shaft Felt
7518A1	1	..	Carburetor Butterfly Shaft Felt Retainer—Plain
7509B2	1	..	Carburetor Butterfly Shaft Felt Retainer Cap—With Hole for Cotter Pin
G-36804	1	..	Carburetor Butterfly Shaft Felt Retainer Cap Cotter Pin— $\frac{1}{8}$ " x $\frac{1}{4}$ " Long
13023B28	1	..	Carburetor Butterfly Shaft Lever Stop Screw
13023Y25	1	..	Carburetor Butterfly Shaft Lever Stop Screw Clamp Screw
7514A1	1	..	Carburetor Air Intake
7518C3	1	..	Carburetor Air Intake and Bowl Gasket
13023L12	2	..	Carburetor Air Intake and Bowl Cap Screw
G-35903	2	..	Carburetor Air Intake and Bowl Cap Screw Lockwasher—For No. 8— $\frac{1}{4}$ " x $\frac{1}{4}$ "
7502A1	1	..	Carburetor Air Intake Temperature Band or Shutter
7508B2	1	..	Carburetor Air Shutter Butterfly
7522B2	1	..	Carburetor Air Shutter Butterfly Shaft—2 $\frac{1}{8}$ " Long
13023C29	1	..	Carburetor Air Shutter Butterfly Shaft Retaining Mach. Screw
7506A1	1	..	Carburetor Air Shutter Bracket
13023D30	1	..	Carburetor Air Shutter Bracket Clamp Screw
13023M13	1	..	Carburetor Air Shutter Bracket Choke Tube Clamp Screw (For $\frac{1}{2}$ " Dia. Tube)
7516B2—SA1	1	..	Carburetor Air Shutter Lever and Swivel Assembly—
			CONSISTING OF—3—SUCCEEDING ITEMS—
7516B2	..	1	Carburetor Air Shutter Lever
7524A1	..	1	Carburetor Air Shutter Lever Swivel
7527A1	..	1	Carburetor Air Shutter Lever Swivel Washer
			<u>END OF PARTS IN ASSEMBLY No. 7516B2—SA1</u>
13023E31	1	..	Carburetor Air Shutter Lever Clamp Screw
13023N14	1	..	Carburetor Air Shutter Lever Swivel Screw
			<u>END OF PARTS IN ASSEMBLY No. 7500A1—A1</u>
7513D4	1	..	Carburetor and Intake Manifold Gasket
13013K11	2	..	Carburetor and Intake Manifold Stud
G-31101	2	..	Carburetor and Intake Manifold Stud Nut— $\frac{1}{8}$ "—24 SAE Thd.— $\frac{1}{2}$ " Hex. x $\frac{1}{4}$ " High
G-35913	2	..	Carburetor and Intake Manifold Stud Nut Lockwasher— $\frac{1}{8}$ " SAE Std.

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

CHOKE (For Carburetor)

PART No.	No. per Truck	No. per Assy.	NAME OF PART
7600A1— A1	1	..	CHOKE Assembly— Consisting of—6—Succeeding Items—
7601A1	..	1	Choke Bracket and Lever Assembly—Sold as a Unit Only
7602A1	..	1	Choke Handle
7801A1	..	1	Choke Spiral Tube
13023V22	..	1	Choke Spiral Tube Clamp Screw
13038K11	..	1	Choke Spiral Tube Clamp Screw Nut
7603A1	..	1	Choke Wire
END OF PARTS IN ASSEMBLY NO. 7600A1—A1			
G-33224	2	..	Choke and Dash Wood Screw—No. 6 x $\frac{3}{4}$ " Long—Oval Head

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

CONTROL SYSTEM—For Ignition and Carburation

PART No.	No. per Truck	No. per Assy.	NAME OF PART
13050A1	1	..	Accelerator Plunger
G-36402	1	..	Accelerator Plunger Taper Pin—No. 0 x 1¼ Long
13051A1	1	..	Accelerator Plunger Cap
13052A1	1	..	Accelerator Plunger Cap Bracket
G-25112	2	..	Accelerator Plunger Cap Bracket Machine Screw—No. 10—24SAE Thd. x 1¼" Long—Round Head
G-32107	2	..	Accelerator Plunger Cap Bracket Machine Screw Nut No. 10—24 SAE Thd.—Hex.
G-36254	2	..	Accelerator Plunger Cap Bracket Machine Screw Washer—⅜" I. D. x ¼" O. D. x ⅛" Thick
G-35910	2	..	Accelerator Plunger Cap Bracket Machine Screw Lockwasher No. 10—SAE Standard For Round Head Screw
13037A1	1	..	Control Rod—Foot Accelerator to Control Cross Rod Lever—¼" x 25" Long
13053A1	2	..	Control Rod Ball Joint Assembly
G-36012	2	..	Control Rod Lockwasher—¼" SAE Special Light
G-31100	4	..	Control Rod Nut—¼"—28 SAE Thd. x ⅛" Hex. x ⅜" High
13054A1	1	..	Control Rod Lever—Left Hand to Control Cross Shaft
G-36402	1	..	Control Rod Lever Taper Pin—No. 0 x 1¼" Long
13037E5	1	..	Control Cross Rod
13052B2	2	..	Control Cross Rod Bracket
13054B2	1	..	Control Cross Rod Lever
G-24026	1	..	Control Cross Rod Lever Clamp Screw—No. 10—24 SAE Thd. x ¼" Long—Oval Fill. Head Mach. Screw
13037D4	1	..	Control Rod—Cross Shaft to Carburetor
13053A1	2	..	Control Rod Ball Joint Assembly
G-36012	2	..	Control Rod Lockwasher—¼" SAE Special Light
G-31100	4	..	Control Rod Nut—¼"—28 SAE Thd. x ⅛" Hex. x ⅜" High
13046A1	1	..	Control Rod Coil Spring
13037F6—SA1	1	..	Control Rod Assembly—Cross Shaft to Steering Gear— CONSISTING OF—7—SUCCEEDING ITEMS—
13055A1	..	1	Control Rod Tube
13020H8	..	1	Control Rod Tube Pin
13037H8	..	1	Control Rod Tube End Rod
13037F6	..	1	Control Rod
13053A1	..	2	Control Rod Ball Joint Assembly
G-36012	..	2	Control Rod Lockwasher—¼" SAE—Special Light
G-31100	..	4	Control Rod Nut—¼"—28 SAE Thd. x ⅛" Hex. x ⅜" High
			END OF ASSEMBLY No. 13037F6—SA1
13037G7	1	..	Control Rod—Distributor to Steering Gear
13053A1	2	..	Control Rod Ball Joint Assembly
G-36012	2	..	Control Rod Lockwasher—¼" SAE—Special Light
G-31100	4	..	Control Rod Nut—¼"—28 SAE Thd. x ⅛" Hex. x ⅜" High

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

DASH AND SEAT ASSEMBLY—As Required

PART No.	No. per Truck	No. per Assy.	NAME OF PART
10101A1—A1	1	..	SEAT AND DASH—Complete Assembly—
G-28956	6	..	Seat and Dash Assembly and Frame Carriage Bolt— $\frac{3}{8}$ " Dia. x $2\frac{1}{2}$ " Long
G-30502	6	..	Seat and Dash Assembly and Frame Carriage Bolt Nut— $\frac{3}{8}$ "—16 USS Thd.— $\frac{11}{16}$ " Hex. x $\frac{3}{16}$ " High
G-35914	6	..	Seat and Dash Assembly and Frame Carriage Bolt Lockwasher— $\frac{3}{8}$ " SAE Std.
13014H8	1	..	Caution Plate—For Detroit Production Only—As Specified
13014J10	1	..	Caution Plate—For Walkerville Production Only—As Specified
13023U21	4	..	Caution Plate Wood Screw—Nickel Plated

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

DRAG LINK or REACH ROD

PART No.	No. per Truck	No. per Assy.	NAME OF PART
5900A1—A1	1	..	DRAG LINK—Complete Assembly— Consisting of—7—Succeeding Items—
5901A1	..	1	Drag Link Shell
5902A1	..	4	Drag Link Bearing
5025B2	..	2	Drag Link Spring
13049S19	..	1	Drag Link Spring Washer
5903A1	..	1	Drag Link Grease Tube
5904A1	..	2	Drag Link Plug—Threaded
5023B2	..	2	Drag Link Plug Lock Ring
END OF PARTS IN ASSEMBLY No. 5900A1—A1			
G-37300	2	..	Drag Ling Alemite Fitting— $\frac{1}{8}$ " Pipe Thd.—Straight

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ELECTRICAL EQUIPMENT**AMMETER**

PART No.	No. per Truck	No. per Assy.	NAME OF PART
8400A1— A1	1	..	AMMETER—Complete Assembly—
11451B2—SA1	1	..	Ammeter Flange and Glass Assembly—This is the Only Part Sold Separately When Ammeter Is in Need of Repair It Must Be Returned to The Manufacturer Where It Will Be Put in Condition at a Nominal Cost
18023F32	3	..	Ammeter and Instrument Panel Machine Screw
13038L12	3	..	Ammeter and Instrument Panel Machine Screw Nut
G-36051	3	..	Ammeter and Instrument Panel Machine Screw Nut Lockwasher—No. 4 SAE Special Heavy

BATTERY AND PARTS—Willard Type SJRR-4

8500A1— A1	1	..	BATTERY—Complete Assembly— Consisting of—16—Succeeding Items—
8501A1—SA1	1	..	Battery Monobloc and Handles Assembly— CONSISTING OF—3—SUCCEEDING ITEMS—
8501A1	..	1	Battery Monobloc
8502A1	..	2	Battery Monobloc Handle
13023T20	..	8	Battery Monobloc Handle Wood Screws END OF PARTS IN ASSEMBLY No. 8501A1—SA1
8154C3—SA1	3	..	Battery Positive Plate Group Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
8154C3	..	6	Battery Positive Plate
8503A1	..	1	Battery Positive Plate Connector Strap END OF PARTS IN ASSEMBLY No. 8154C3—SA1
8154D4—SA1	3	..	Battery Negative Plate Group Assembly— CONSISTING OF—3—SUCCEEDING ITEMS—
8154D4	..	5	Battery Negative Plate
8154E5	..	2	Battery Negative End Plate
8503B2	..	1	Battery Negative Plate Connector Strap END OF PARTS IN ASSEMBLY No. 8154D4—SA1
8417C3	3	..	Battery Cover
8109G7	6	..	Battery Cover Bushing
8504A1	3	..	Battery Cover Vent Plug
8103C3	2	..	Battery Top Connector
8505A1	36	..	Battery Plate Insulator or Separator END OF PARTS IN ASSEMBLY No. 8500A1—A1
6625B2—SA1	1	..	Battery Box and Support Assembly— CONSISTING OF—3—SUCCEEDING ITEMS—
6625B2	..	1	Battery Box
6627A1	..	2	Battery Box Support
G-38160-A	..	4	Battery Box Support Rivet— $\frac{1}{4}$ " Dia. x $\frac{3}{4}$ " Long—Round Head—Iron END OF PARTS IN ASSEMBLY No. 6625B2—SA1

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ELECTRICAL EQUIPMENT—Continued**BATTERY AND PARTS—Willard Type SJRR-4—Continued**

PART No.	No. per Truck	No. per Assy.	NAME OF PART
8076C3	1	..	Battery Box Support Bracket—Bolted to Frame
G-14211	2	..	Battery Box Support Bracket and Frame Cap Screw— $\frac{3}{8}$ "—24 SAE Thd. x $1\frac{1}{8}$ " Long— $\frac{1}{8}$ " Hex. x $\frac{3}{4}$ " High—Drilled End
G-31202	2	..	Battery Box Support Bracket and Frame Cap Screw Castle Nut— $\frac{3}{8}$ "—24 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{1}{2}$ " High
G-36317	2	..	Battery Box Support Bracket and Frame Cap Screw Castle Nut Cotter Pin— $\frac{3}{32}$ " x 1" Long
G-14213	2	..	Battery Box Support and Bracket Cap Screw— $\frac{3}{8}$ "—24SAE Thd. x $1\frac{1}{8}$ " Long— $\frac{1}{8}$ " Hex. x $\frac{3}{4}$ " High—Drilled End
G-31202	2	..	Battery Box Support and Bracket Cap Screw—Castle Nut— $\frac{3}{8}$ "—24 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{1}{2}$ " High
G-36317	2	..	Battery Box Support and Bracket Cap Screw Castle Nut Cotter— $\frac{3}{32}$ " x 1" Long
G-14222	2	..	Battery Box Support Clamp Screw— $\frac{3}{8}$ "—24 SAE Thd. x $1\frac{1}{8}$ " Long— $\frac{1}{8}$ " Hex. x $\frac{3}{4}$ " High—Drilled End
G-31202	2	..	Battery Box Support Clamp Screw Castle Nut— $\frac{3}{8}$ " 24SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{1}{2}$ " High
G-36317	2	..	Battery Box Support Clamp Screw Castle Nut Cotter— $\frac{3}{32}$ " x 1" Long
8155B2	2	..	Battery Hold Down Clamp
G-30501	2	..	Battery Hold Down Clamp Nut— $\frac{1}{4}$ "—18 USS Thd.— $\frac{1}{2}$ " Hex. x $\frac{1}{8}$ " High—Steel
G-35913	2	..	Battery Hold Down Clamp Nut Lockwasher— $\frac{1}{4}$ "—SAE Std.
13049G7	2	..	Battery Hold Down Clamp Nut Washer
8002F6—SA1	1	..	Battery Cable and Terminals Assembly—Positive— CONSISTING OF—5—SUCCEEDING ITEMS—
8002F6	..	1	Battery Cable—No. O. W. P.—Style No. 267
8003A1	..	1	Battery Cable Lug— $\frac{1}{8}$ "
8001C3	..	1	Battery Cable Terminal—Battery Positive Post End
13016T20	..	1	Battery Cable Terminal Clamp Bolt—Special
13038T46	..	1	Battery Cable Terminal Clamp Bolt Nut—Special
			<u>END OF PARTS IN ASSEMBLY NO. 8002F6—SA1</u>
8002G7—SA1	1	..	Battery Cable and Terminals Assembly—Negative— CONSISTING OF—5—SUCCEEDING ITEMS—
8002G7	..	1	Battery Cable—No. O. W. P.—Style No. 267
8003A1	..	1	Battery Cable Lug— $\frac{1}{8}$ "
8001D4	..	1	Battery Cable Terminal—Battery Negative Post End
13016U21	..	1	Battery Cable Terminal Clamp Bolt—Special
13038U47	..	1	Battery Cable Terminal Clamp Bolt Nut—Special
			<u>END OF PARTS IN ASSEMBLY NO. 8002G7—SA1</u>

DISTRIBUTOR—Remy Model 368-A

8439A1—A1	1	..	DISTRIBUTOR—Complete Assembly— Consisting of—35—Succeeding Items—
8118C3—SA1	1	..	Distributor Cap Assembly— INCLUDES NEXT—2—ITEMS—

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ELECTRICAL EQUIPMENT—Continued

DISTRIBUTOR—Remy Model 368-A—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
8153B2	..	1	Distributor Cap Brush
8157B2	..	5	Distributor Cap Pin—Special
END OF PARTS IN ASSEMBLY No. 8118C3—SA1			
8161B2—SA1	1	..	Distributor and Circuit Breaker Base Assembly—
8441A1	1	..	Distributor Shaft
8111C3	1	..	Distributor Shaft Gear
8157C3	1	..	Distributor Shaft Gear Pin—Special
8156C3	1	..	Distributor Shaft Gear Washer—Special
8156D4	1	..	Distributor Shaft Washer—Cam End
8442A1—SA1	1	..	Distributor Cam and Pin Assembly—
INCLUDES NEXT—2—ITEMS—			
8157D4	..	1	Distributor Cam Pin
13038Y51	..	1	Distributor Cam Nut—Special
END OF PARTS IN ASSEMBLY No. 8442A1—SA1			
8443A1—SA1	1	..	Distributor Segment Assembly—
INCLUDES NEXT—4—ITEMS—			
8443A1	..	1	Distributor Segment Only
8117C3	..	1	Distributor Segment Holder
8112J10	..	1	Distributor Segment Spring
13023G33	..	1	Distributor Segment Spring Screw
END OF PARTS IN ASSEMBLY No. 8443A1—SA1			
8444A1—SA1	1	..	Distributor Circuit Breaker Assembly—
INCLUDES NEXT—7—ITEMS—			
8161B2	..	1	Distributor Circuit Breaker Base
8205B2	..	1	Distributor Contact Point Screw—Special
13038Z52	..	1	Distributor Contact Point Screw Locknut—Special
8440A1	..	1	Distributor Contact Lever and Point
8112L11	..	1	Distributor Contact Lever Tension Spring
8445A1	..	1	Distributor Contact Lever Retainer
8156E5	..	1	Distributor Contact Lever Retainer Washer
END OF PARTS IN ASSEMBLY No. 8444A1—SA1			
8440B2	1	..	Distributor Timing Lever
8156F6	3	..	Distributor Timing Lever Spring Washer
8156G7	1	..	Distributor Timing Lever Spring Washer
13038M13	3	..	Distributor Timing Lever Stud Nut
G-36008	3	..	Distributor Timing Lever Stud Nut Lockwasher—No. 6—SAE Spec. Light—For Button Head Screw
8154B2	1	..	Distributor Timing Lever Range Plate
13049U21	1	..	Distributor Timing Lever Washer
13038A53	1	..	Distributor Cable End Nut—Special
G-35910	1	..	Distributor Cable End Nut Lockwasher—No. 10—SAE Std.—For Button Head Screw
13045B2	1	..	Distributor Grease Cup
END OF PARTS IN ASSEMBLY No. 8439A1—A1			
8002E5—SA1	1	..	Distributor High Tension Cable Assembly—4 Wires to Spark Plugs—1 Wire to Ignition Coil

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ELECTRICAL EQUIPMENT—Continued**GENERATOR AND RELAY—Old Type No. 917-D—Superceded by No. 941-F,
October 1st, 1925 (See Pages 24-A, 25-A, 26-A for Generator No. 941-F)**

PART No.	No. per Truck	No. per Assy.	NAME OF PART
8150A1— A1	1	..	GENERATOR AND RELAY—Complete Assembly— Consisting of—66—Succeeding Items—
8101B2—SA1	1	..	Generator Frame and Field Assembly— CONSISTING OF—8—SUCCEEDING ITEMS—
8101B2	..	1	Generator Frame—(With Name Plate and Rivets)
8151A1	..	2	Generator Pole Shoe
18023H34	..	2	Generator Pole Shoe Screw
8109B2	..	1	Generator Lead Bushing
8005B2	..	1	Generator Lead Clip
8102D4	..	1	Generator Field Coil—Right Hand
8102C3	..	1	Generator Field Coil—Left Hand
8000H8—SA1	..	1	Generator Relay Lead Assembly—(Wire and —1—Clip No. 3634) END OF PARTS IN ASSEMBLY NO. 8101B2—SA1
8005C3	1	..	Generator Relay Lead Clip—Sold Separately If Desired
8106B2	1	..	Generator Armature Assembly
G-36608	1	..	Generator Armature Shaft and Gear Key—No. 8 Woodruff
G-31204	1	..	Generator Armature Shaft and Gear Castle Nut— $\frac{1}{4}$ "—20SAE Thd.— $\frac{1}{4}$ " Hex. x $\frac{1}{8}$ " High
13049V22	1	..	Generator Armature Shaft and Gear Washer
8162A1	1	..	Generator Oil Baffle
8115B2—SA1	1	..	Generator Drive End Bearing and Bushing Assembly— CONSISTING OF—3—SUCCEEDING ITEMS—
8115B2	..	1	Generator Drive End Bearing
8109C3	..	1	Generator Drive End Bearing Bushing
13022E5	..	1	Generator Drive End Bearing and Bushing Dowel
			END OF PARTS IN ASSEMBLY NO. 8115B2—SA1
13049N40	As Req'd	..	Generator Drive End Bearing Shim Washer
13048C3	1	..	Generator Drive End Bearing Oil Wick
8107B2—SA1	1	..	Generator Commutator Band Assembly—Sold Only As An Assembly
13016G7	2	..	Generator Thru Bolt—Special—Blued
G-35912	2	..	Generator Thru Bolt Lockwasher— $\frac{1}{4}$ "—SAE Std.
13045A1	1	..	Generator Armature Shaft Oiler
8152A1	1	..	Generator Armature Shaft Oiler Well
13048B2—SA1	1	..	Generator Armature Shaft Oil Wick and Spring Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
13048B2	..	1	Generator Armature Shaft Oil Wick—Not Sold Separately—Sold Only as an Assembly
8112D4	..	1	Generator Armature Shaft Oil Wick Spring—Not Sold Separately—Sold Only as an Assembly
			END OF PARTS IN ASSEMBLY NO. 13048B2—SA1
8115C8—SA1	1	..	Generator Commutator End Bearing and Brush Complete Assembly— CONSISTING OF—32—SUCCEEDING ITEMS—

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ELECTRICAL EQUIPMENT—Continued**GENERATOR AND RELAY—Continued**

PART No.	No. per Truck	No. per Assy.	NAME OF PART
8115C3—SA2	1	..	Generator Commutator End Bearing and Bushing Assembly— CONSISTING OF—3—SUCCEEDING ITEMS—
8115C3	..	1	Generator Commutator End Bearing
8109D4	..	1	Generator Commutator End Bearing Bushing
13022C2	..	1	Generator Commutator End Bearing Bushing Dowel
END OF PARTS IN ASSEMBLY NO. 8115C3—SA2			
8153A1	3	..	Generator Brush
8117B2	3	..	Generator Brush Holder
G-25025	6	..	Generator Brush Machine Screw—No. 6—32 Thd. x $\frac{1}{8}$ " Long—Round Head
G-36008	6	..	Generator Brush Machine Screw Lockwasher—No. 6—SAE Spec. Light—For Button Head Screw
8156K11	6	..	Generator Brush Machine Screw Washer—Special
8112E5	2	..	Generator Brush Spring—Third and Ground Brushes
8112F6	1	..	Generator Brush Spring—Ins. Main Brush
8154A1—SA1	1	..	Generator Third Brush Plate Assembly—
8155A1	1	..	Generator Third Brush Plate Clamp
13023J36	1	..	Generator Third Brush Plate Clamp Machine Screw
G-35910	1	..	Generator Third Brush Plate Clamp Machine Screw Lockwasher—No. 10—SAE Std.— For Round Head Screw
8000B2—SA1	1	..	Generator Brush Ground Lead Wire and Clip
8005B2	1	..	Generator Brush Ground Lead Clip
G-23921	3	..	Generator Brush Clip Machine Screw—No. 6—32 Thd. x $\frac{1}{8}$ " Long—Fill. Head
G-36008	3	..	Generator Brush Clip Machine Screw Lockwasher—No. 6—SAE Special Light—For Round Head Screw
8156A1	1	..	Generator Brush Spring Washer
8157A1	1	..	Generator Brush Spring Washer Pin
G-25022	1	..	Generator Ground Machine Screw—No. 6—32 Thd. x $\frac{1}{4}$ " Long—Round Head
13049W23	1	..	Generator Ground Machine Screw Washer
G-36008	1	..	Generator Ground Machine Screw Lockwasher—No. 6—SAE Special Light—For Round Head Screw
8118B2	1	..	Generator Commutator Dust Cap
G-25023	2	..	Generator Thermostat Resistance Screw—No. 6—32 Thd. x $\frac{1}{8}$ " Long—Round Head Machine Screw
G-36008	2	..	Generator Thermostat Resistance Screw Lockwasher—No. 6—SAE—Special Light—For Round Head Screw
13023G33	2	..	Generator Thermostat Screw
G-36008	2	..	Generator Thermostat Screw Lockwasher—No. 6—SAE Special Light—For Round Head Screw
13022D4	1	..	Generator Commutator End Bearing Dowel
8416B2—SA1	1	..	Generator Thermostat Resistance Assembly—
8158A1—SA1	1	..	Generator Thermostat Assembly—
END OF PARTS IN ASSEMBLY NO. 8115C3—SA1			
13023K37	2	..	Relay and Generator Screw

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ELECTRICAL EQUIPMENT—Continued**GENERATOR AND RELAY—Continued**

PART No.	No. per Truck	No. per Assy.	NAME OF PART
G-36009	2	..	Relay and Generator Screw Lockwasher—No. 8—SAE Special Light—For Round Head Screw
8103B2	1	..	Relay Short Circuit Connector
8159A1—SA1	1	..	Relay and Parts Assembly—Sold as a Complete Unit Only— END OF PARTS IN ASSEMBLY No. 8150A1—A1
Note—The Next—5—Items Are the Only Ones Sold as Service Parts on This Relay			
8417B2	1	..	Relay Cover
13023L38	2	..	Relay Base Terminal Screw
8156B2	1	..	Relay Base Terminal Screw Locking Washer—Special
G-36009	2	..	Relay Base Terminal Screw Lockwasher—No. 8—SAE Special Light—For Round Head Screw
8161A1	1	..	Relay Base
8111B2	1	..	Generator Gear—Assembled on Generator Shaft
G-10305	3	..	Generator and Crankcase Cap Screw— $\frac{1}{8}$ "—14 USS Thd. x $1\frac{1}{8}$ " Long x $\frac{5}{8}$ " Hex. x $\frac{1}{8}$ " High
G-35915	3	..	Generator and Crankcase Cap Screw Lockwasher— $\frac{1}{8}$ " SAE—Std.
G-36259	1	..	Generator and Crankcase Cap Screw Plain Washer—Upper Only— $\frac{1}{4}$ " I. D. x $\frac{1}{4}$ " O. D. x $\frac{1}{8}$ " Thick—Steel
8160A1	1	..	Generator and Crankcase Gasket
G-36317	1	..	Generator Shaft Nut Cotter— $\frac{3}{16}$ " x 1" Long

ELECTRIC WIRING HARNESS

8004—A1	1	..	ELECTRIC WIRING HARNESS—Complete Assembly
---------	---	----	---

HORN ASSEMBLY—Remy Model K7, Type No. 602—Superceded by New Model K-8-6 September 21, 1925 (See Pages 26-A, 27-A for Horn Model K-8-6)

8200A1—A1	1	..	HORN—Complete Assembly— Consisting of—9—Succeeding Items—
8201A1—SA1	..	1	Horn Projector—With Collar, Name Plate and Rivets Assembly—
8202A1—SA1	..	1	Horn Diaphragm and Parts Assembly—
8160B2	..	2	Horn Diaphragm Gasket
8203A1—SA1	..	1	Horn Complete Motor and Shell Assembly—
13023N40	..	3	Horn Projector and Motor Shell Screw—Short
13028P42	..	3	Horn Projector and Motor Shell Screw—Long
13038P16	..	9	Horn Projector and Motor Shell Screw Nut
G-35910	..	9	Horn Projector and Motor Shell Screw Nut Lockwasher—No. 10 SAE Std.—For Round Head Screw
8076B2	..	3	Horn Universal Dash Bracket (K8B Type 203) END OF PARTS IN ASSEMBLY No. 8200A1—A1

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ELECTRICAL EQUIPMENT—Continued**HORN ASSEMBLY—Continued**

PART No.	No. per Truck	No. per Assy.	NAME OF PART
The Following—19—Horn Parts Are Sold Separately If Desired—All Are Included in Assemblies No. 8202A1—SA1 and No. 8203A1—SA1 Listed Above			
8153D4	1	..	Horn Brush and Holder—Right Hand
8153C3	1	..	Horn Brush and Holder—Left Hand
8112H8	1	..	Horn Brush Spring—Right Hand
8112G7	1	..	Horn Brush Spring—Left Hand
8204A1	1	..	Horn Rotar
8205A1	1	..	Horn Rotar Screw—Blued
8206A1	2	..	Horn Terminal Stud—Sherardized
13038N14	4	..	Horn Terminal Stud Nut
G-35909	4	..	Horn Terminal Stud Nut Lockwasher—No. 8 SAE Std.
13049X24	2	..	Horn Terminal Stud Nut Washer
8109E5	2	..	Horn Terminal Stud Bushing—Outer—Fibre
8109F6	2	..	Horn Terminal Stud Bushing—Inner—Fibre
8207A1	2	..	Horn Terminal Stud Insulator Strip—Fibre
13049B2	2	..	Horn Terminal Stud Washer—Brass—Special Square Hole
13038X50	1	..	Horn Tone Adjusting Lock Nut—Zinc Plated
13023M39	2	..	Horn Shell and Motor Assembly Screw
13038P16	2	..	Horn Shell and Motor Assembly Screw Nut
13132C3	2	..	Horn Shell and Motor Assembly Screw Nut Lockwasher
8005D4	2	..	Horn Ground Clip
END OF HORN PARTS			
G-25112	3	..	Horn Bracket and Dash Machine Screw—No. 10—24 Thd. x 1 1/4" Long—Round Head—Steel
G-32107	3	..	Horn Bracket and Dash Machine Screw Nut—No. 10—24 Thd.—3/8" Hex. x 1/4" High—Steel
G-35910	3	..	Horn Bracket and Dash Machine Screw Nut Lockwasher—No. 10 SAE Std.—For Round Head Screw
13049Y25	3	..	Horn Bracket and Dash Machine Screw Washer
8002D4—SA1	1	..	Horn to Junction Block Cable Assembly— CONSISTING OF—3—SUCCEEDING ITEMS—
8002D4	..	1	Horn to Junction Block Cable—No. 14 I-C Armored—9" Long
8208A1	..	2	Horn to Junction Block Cable Rubber Sleeve
8001B2	..	2	Horn to Junction Block Cable Terminal—No. 6 Sherman
END OF PARTS IN ASSEMBLY No. 8002D4—SA1			

IGNITION COIL—Remy Model 284-L

8416A1—A1	1	..	IGNITION COIL—Complete Assembly— Consisting of—9—Succeeding Items—
8416A1—SA1	..	1	Ignition Coil Resistance Assembly—
13023Q43	..	1	Ignition Coil Resistance Screw
G-35910	..	1	Ignition Coil Resistance Screw Lockwasher—No. 10 SAE Std.—For Round Head Screw
13023R44	..	2	Ignition Coil Terminal Screw

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ELECTRICAL EQUIPMENT—Continued**IGNITION COIL—Continued**

PART No.	No. per Truck	No. per Assy.	NAME OF PART
G-35910	..	2	Ignition Coil Terminal Screw Lockwasher—No. 10 SAE Std.—For Round Head Screw
8417A1—SA1	..	1	Ignition Coil Cover Assembly—
18049Z26	..	1	Ignition Coil Cover Washer
18038Q17	..	1	Ignition Coil Cover Nut
G-36059	..	1	Ignition Coil Cover Nut Lockwasher—No. 8—SAE—Special Heavy
END OF PARTS IN ASSEMBLY No. 8415A1—A1			
G-11405	2	..	Ignition Coil and Magneto Bracket Cap Screw— $\frac{1}{4}$ "—28 SAE Thd.—1" Long x $\frac{1}{16}$ " Hex. x $\frac{1}{2}$ " High
G-31100	2	..	Ignition Coil and Magneto Bracket Cap Screw Nut— $\frac{1}{4}$ "—28 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{1}{2}$ " High—plain
G-35912	2	..	Ignition Coil and Magneto Bracket Cap Screw Nut Lockwasher— $\frac{1}{4}$ "—SAE Std.

INSTRUMENT PANEL—(For Battery Ignition Only)

8550A1— A1	1	..	INSTRUMENT PANEL—Complete Assembly— Consisting of—57—Succeeding Items—
8550A1—SA1	1	..	Instrument Panel and Fuse Block Assembly— CONSISTING OF—9—SUCCEEDING ITEMS—
8550A1	..	1	Instrument Panel
8551A1	..	1	Instrument Panel Switch Case
18042C3	..	4	Instrument Panel and Switch Case Rivet—Tubular—Tubular Rivet Co's No. 1366— Black Enameled
8552A1—SA1	1	..	Instrument Panel Fuse Block Assembly— CONSISTING OF—4—SUCCEEDING ITEMS—
None	..	1	Instrument Panel Fuse Block—Not Sold Separately
None	..	2	Instrument Panel Fuse Clip—Not Sold Separately
None	..	2	Instrument Panel Fuse Connector—Not Sold Separately
None	..	2	Instrument Panel Fuse Block, Clip and Connector Rivet—Tubular—Not Sold Separately
18042D4	4	..	Instrument Panel and Fuse Block Assembly Rivet—Tubular—Tubular Rivet Co's. No. 1266
END OF PARTS IN ASSEMBLY No. 8550A1—SA1			
8553A1—SA1	1	..	Instrument Panel Fuse Door Assembly— CONSISTING OF—3—SUCCEEDING ITEMS—
None	..	1	Instrument Panel Fuse Door—Not Sold Separately
None	..	1	Instrument Panel Fuse Door Knob—Not Sold Separately
None	..	1	Instrument Panel Fuse Door Clip—Not Sold Separately
END OF PARTS IN ASSEMBLY No. 8553A1—SA1			
8554A1	1	..	Instrument Panel Fuse—20A—25V
8114B2—SA1	1	..	Instrument Panel Terminal Head and Parts Assembly— CONSISTING OF—20—SUCCEEDING ITEMS—
8114B2—SA2	1	..	Instrument Panel Terminal Head Assembly— CONSISTING OF—6—SUCCEEDING ITEMS—

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ELECTRICAL EQUIPMENT—Continued**INSTRUMENT PANEL—(For Battery Ignition Only)—Continued**

PART No.	No. per Truck	No. per Assy.	NAME OF PART
None	..	1	Instrument Panel Terminal Head—Not Sold Separately
None	..	1	Instrument Panel Terminal Head Bushing—Not Sold Separately
None	..	1	Instrument Panel Terminal Head Bushing—Not Sold Separately
None	..	3	Instrument Panel Terminal Head Bushing—Not Sold Separately
None	..	1	Instrument Panel Terminal Head Bushing—Not Sold Separately
13020K11	..	1	Instrument Panel Terminal Head Pin
END OF PARTS IN ASSEMBLY No. 8114B2—SA2			
8112M12	1	..	Instrument Panel Terminal Head Reinforcing Spring
8112N13	1	..	Instrument Panel Terminal Head Contact Spring
8505B2	1	..	Instrument Panel Terminal Head Insulator
13023S45	1	..	Instrument Panel Terminal Head Spring Machine Screw
G-36008	1	..	Instrument Panel Terminal Head Spring Machine Screw Lockwasher—No. 6—SAE— Special Light—For Round Head Screw
8560A1	1	..	Instrument Panel Terminal Head Resister Coil
13023T46	2	..	Instrument Panel Terminal Head Resister Coil Machine Screw
13132D4	2	..	Instrument Panel Terminal Head Resister Coil Machine Screw Lockwasher
13023U47	2	..	Instrument Panel Terminal Head Machine Screw
13038R18	2	..	Instrument Panel Terminal Head Machine Screw Nut
G-36007	2	..	Instrument Panel Terminal Head Machine Screw Nut Lockwasher—No. 4—SAE Special Light—For Round Head Screw
13023T46	2	..	Instrument Panel Terminal Machine Screw
13132D4	2	..	Instrument Panel Terminal Machine Screw Lockwasher
END OF PARTS IN ASSEMBLY No. 8114B2—SA1			
8555A1—SA1	1	..	Instrument Panel Contact Disc and Spider Assembly— CONSISTING OF—3—SUCCEEDING ITEMS—
None	..	1	Instrument Panel Contact Disc—Not Sold Separately
None	..	2	Instrument Panel Contact Disc Spider—Not Sold Separately
None	..	2	Instrument Panel Contact Disc Spider Pin—.063 Dia. x ¼" St. Z. Pl. E. Sc. —Not Sold Separately
END OF PARTS IN ASSEMBLY No. 8555A1—SA1			
G-26123	2	..	Instrument Panel Contact Disc Machine Screw—No. 6—32 Thd.— $\frac{1}{8}$ " Long—Flat Countersunk Head
8502B2	1	..	Instrument Panel Switch Handle
8556A1	1	..	Instrument Panel Switch Pusher
8557A1	1	..	Instrument Panel Switch Thrust Cup
8558A1	1	..	Instrument Panel Switch Key
8559A1	1	..	Instrument Panel Switch Key Guide
8000C3	1	..	Instrument Panel Switch Wire—From Fuse Block to Dash Light—3½" Long
8000D4	1	..	Instrument Panel Switch Wire—From Fuse Block to Terminal Head—8" Long
8000E5	1	..	Instrument Panel Switch Wire—From Terminal Head to Ammeter—With Terminal— 5" Long
8000F6	1	..	Instrument Panel Switch Wire—From Fuse Block to Ammeter—With Terminal— 6" Long

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ELECTRICAL EQUIPMENT—Continued**INSTRUMENT PANEL—(For Battery Ignition Only)—Continued**

PART No.	No. per Truck	No. per Assy.	NAME OF PART
8690A1—SA1	1	..	Instrument Panel Dash Lamp Assembly— CONSISTING OF—6—SUCCEEDING ITEMS—
8651D4	..	1	Instrument Panel Dash Lamp Body
13038W49	..	1	Instrument Panel Dash Lamp Body Nut—Special
13132B2	..	1	Instrument Panel Dash Lamp Body Nut Lockwasher
8691A1	..	1	Instrument Panel Dash Lamp Body Contact Unit
8692A1	..	1	Instrument Panel Dash Lamp Body Contact Unit Lever
8693A1	..	1	Instrument Panel Dash Lamp Body Hood
END OF PARTS IN ASSEMBLY No. 8690A1—SA1			
END OF PARTS IN ASSEMBLY No. 8550A1—A1			
8655C3	1	..	Instrument Panel Dash Lamp Bulb—6-8 Volt—2 C. P.—Single Contact
13023V48	4	..	Instrument Panel and Dash Wood Screw
8004B2	1	..	Instrument Board Harness Assembly—Electric Wires and Terminals

JUNCTION BLOCK

8050A1— A1	1	..	JUNCTION BLOCK—Assembled Complete— The Only Parts Serviced on This Are Listed Below—(2—Items Only)
13023X50	8	..	Junction Block Machine Screw
13049E31	8	..	Junction Block Machine Screw Washer
END OF JUNCTION BLOCK PARTS			
G-32904	2	..	Junction Block Assembly and Wood Dash Wood Screw—No. 10— $\frac{3}{4}$ " Long—Round Head

LAMP—Head

8650B2— A1	1	..	HEAD LAMP—Complete Assembly—Right Hand— Consisting of—18—Succeeding Items
8651B2	..	1	Headlamp Body and Bracket—(Less Connector Socket)
8103D4	..	1	Headlamp Body Connector
8156H8	..	1	Headlamp Body Connector Washer—Special
8208G7	..	1	Headlamp Body Connector Nut—Special
8652A1	..	1	Headlamp Body Connector Plug
8118C3	..	1	Headlamp Body Connector Cap
8653A1	..	1	Headlamp Reflector
8654A1	..	1	Headlamp Reflector Electric Socket
8156J10	..	1	Headlamp Reflector Electric Socket Lockwasher—Special
8208G7	..	1	Headlamp Reflector Electric Socket Nut—Special
8116B2	..	1	Headlamp Reflector Retaining Ring
8000G7	..	1	Headlamp Connecting Wire—Between Socket and Connector—No. 16 SAE Wire— 4" Long
8655A1	..	1	Headlamp Bulb—21 C. P.—6-8 Volt—Single Contact
8656A1	..	1	Headlamp Lens— $6\frac{1}{8}$ " Dia. Monogram
8116C3	..	1	Headlamp Lens Retaining Ring
8553B2	..	1	Headlamp Door

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ELECTRICAL EQUIPMENT—Continued**LAMP—Head—Continued**

PART No.	No. per Truck	No. per Assy.	NAME OF PART
8116D4	1	1	Headlamp Door and Body Coupling Ring
13023W23	1	1	Headlamp Door and Body Coupling Ring Machine Screw
<u>END OF PARTS IN ASSEMBLY No. 8650B2—A1</u>			
8650A1— A1	1	1	Headlamp Complete Assembly—Left Hand— CONSISTING OF—18—SUCCEEDING ITEMS—
8651A1	1	1	Headlamp Body and Bracket—(Less Connector Socket)
8103D4	1	1	Headlamp Body Connector
8156H8	1	1	Headlamp Body Connector Washer—Special
8208G7	1	1	Headlamp Body Connector Nut—Special
8652A1	1	1	Headlamp Body Connector Plug
8118C3	1	1	Headlamp Body Connector Cap
8653A1	1	1	Headlamp Reflector
8654A1	1	1	Headlamp Reflector Electric Socket
8156J10	1	1	Headlamp Reflector Electric Socket Lockwasher—Special
13038B54	1	1	Headlamp Reflector Electric Socket Nut—Special
8116B2	1	1	Headlamp Reflector Retaining Ring
8000G7	1	1	Headlamp Connecting Wire—Between Socket and Connector—No. 16 SAE Wire— 4" Long
8655A1	1	1	Headlamp Bulb—21 C. P.—6-8 Volt—Single Contact
8656A1	1	1	Headlamp Lens—6 $\frac{1}{2}$ " Dia. Monogram
8116C3	1	1	Headlamp Lens Retaining Ring
8553B2	1	1	Headlamp Door
8116D4	1	1	Headlamp Door and Body Coupling Ring
13023W23	1	1	Headlamp Door and Body Coupling Ring Machine Screw
<u>END OF PARTS IN ASSEMBLY No. 8650A1—A1</u>			
13023X24	4	1	Headlamp and Radiator Cap Screw
13049T20	4	1	Headlamp and Radiator Cap Screw Washer
13132A1	4	1	Headlamp and Radiator Cap Screw Lockwasher
G-36304	2	1	Headlamp Cable Cotter Pin—In Cap Screw on Engine— $\frac{1}{8}$ " x $\frac{3}{4}$ " Long

LAMP—Tail

8675A1— A1	1	1	TAIL LAMP—Complete Assembly— Consisting of—7—Succeeding Items—
8651C3	1	1	Tail Lamp Body—With 2 Screws Assembled—Sold Only as a Unit
G-32107	2	1	Tail Lamp Body Screw Nut—No. 10—24 Thd. Hex. Nut for Machine Screw
8676A1	1	1	Tail Lamp Body Celluloid Window—1 $\frac{1}{4}$ " x 2 $\frac{1}{8}$ " x $\frac{1}{2}$ " Thick
8656B2	1	1	Tail Lamp 3" Ruby Semaphore (Jefferson 900) Lens
8116E5	1	1	Tail Lamp 3" Ruby Semaphore Wire Retaining Ring
8655B2	1	1	Tail Lamp Bulb—6-8 Volt—2 C. P.—Single Point Contact
8652B2	1	1	Tail Lamp Plug and Connector—Sold Only as a Unit
<u>END OF PARTS IN ASSEMBLY No. 8675A1—A1</u>			
G-36326	5	1	Tail Lamp Cable to Frame Cotter Pin— $\frac{1}{8}$ " x 1" Long

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ELECTRICAL EQUIPMENT—Continued**STARTER SWITCH**

PART No.	No. per Truck	No. per Assy.	NAME OF PART
8075A1— A1	1	..	STARTER SWITCH—Assembled Complete—
			Note—The Only Parts Serviced on This Are Listed Below (2 Items Only)
18038S19	2	..	Starter Switch Check Nut—Bronze
19038T20	2	..	Starter Switch Check Nut
			END OF STARTING SWITCH
8076A1	1	..	Starter Switch Bracket
G-10005	4	..	Starter Switch Bracket and Crankcase Cap Screw— $\frac{1}{4}$ "—20 USS Thd.—1" Long x $\frac{1}{8}$ " Hex. $\frac{1}{4}$ " High
G-35912	4	..	Starter Switch Bracket and Crankcase Cap Screw Lockwasher— $\frac{1}{4}$ " SAE Std.
G-14006	2	..	Starter Switch and Bracket Cap Screw— $\frac{1}{4}$ "—28SAE Thd.— $\frac{3}{4}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{1}{8}$ " High—Drilled End
G-31200	2	..	Starter Switch and Bracket Cap Screw Castle Nut— $\frac{1}{4}$ "—28 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{3}{8}$ " High
G-36304	2	..	Starter Switch and Bracket Cap Screw Castle Nut Cotter Pin— $\frac{1}{8}$ " x $\frac{3}{4}$ " Long
8002A1— A1	1	..	Cable and Lugs Assembled Complete—(Starting Switch to Starting Motor)—
			CONSISTING OF—2—SUCCEEDING ITEMS—
8002A1	..	1	Cable
8003A1	..	2	Cable Lug— $\frac{1}{8}$ "
			END OF PARTS IN ASSEMBLY NO. 8002A1—A1

**STARTING MOTOR—Remy Model 720-E—Clockwise—No. 2 SAE Flange Mounting
Outboard Bendix Drive R-11-X-13 Teeth**

8100A1— A1	1	..	STARTING MOTOR—Complete Assembly—
			Consisting of—64—Succeeding Items—
8101A1—SA1	1	..	Starting Motor Frame and Field Assembly—
			INCLUDES NEXT—12—ITEMS—
8102A1—SA1	..	1	Starting Motor Field Coil Assembly—Lower
8102B2—SA1	..	1	Starting Motor Field Coil Assembly—Upper—
8103A1	..	1	Starting Motor Field Connector
8104A1	..	4	Starting Motor Pole
18023Y51	..	4	Starting Motor Pole Screw
8105A1	..	1	Starting Motor Terminal Wedge
18023S19	..	1	Starting Motor Terminal Screw—Special
18049G33	..	2	Starting Motor Terminal Screw Washer
18049H34	..	3	Starting Motor Terminal Screw Insulation Washer
18049J36	..	2	Starting Motor Terminal Screw Washer
G-36014	..	2	Starting Motor Terminal Screw Lockwasher— $\frac{3}{8}$ "—SAE—Special Light
18038U21	..	2	Starting Motor Terminal Screw Nut
			END OF PARTS IN ASSEMBLY NO. 8101A1—SA1
8106A1	1	..	Starting Motor Armature
G-36605	1	..	Starting Motor Armature Shaft Key—No. 6 Woodruff
18049K37	1	..	Starting Motor Thrust Washer—Commutator End
18045A1	1	..	Starting Motor Oiler
18048A1	1	..	Starting Motor Oiler Wick

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ELECTRICAL EQUIPMENT—Continued**STARTING MOTOR—Continued**

PART No.	No. per Truck	No. per Assy.	NAME OF PART
13016F6	2	..	Starting Motor Through Bolt—Special—Blued
G-35912	2	..	Starting Motor Through Bolt Lockwasher— $\frac{1}{4}$ " SAE Std.
8107A1	1	..	Starting Motor Commutator Cover Band
13009C3	1	..	Starting Motor Commutator End Bearing Dowel Pin
13023C55	2	..	Starting Motor Brush and Field Lead Machine Screw
G-35910	2	..	Starting Motor Brush and Field Lead Machine Screw Lockwasher—No. 10 SAE Std.— For Round Head Screw
8108A1—SA1	1	..	Starting Motor Bendix Housing and Bushing Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
8108A1	..	1	Starting Motor Bendix Housing
8109A1	..	1	Starting Motor Bendix Housing Bushing
END OF PARTS IN ASSEMBLY No. 8108A1—SA1			
13020L12	1	..	Starting Motor Bendix Housing Dowel Pin
13049K37	1	..	Starting Motor Bendix Housing Thrust Washer
13049L38	1	..	Starting Motor Bendix Housing Space Washer
13049M39	1	..	Starting Motor Bendix Housing Space Washer
8110A1—SA1	1	..	Starting Motor Bendix Shaft and Pinion Assembly— INCLUDES NEXT—12—ITEMS—
8110A1—SA2	1	..	Starting Motor Bendix Shaft Sleeve and Gear Assembly— INCLUDES NEXT—5—ITEMS—
8110A1	..	1	Starting Motor Bendix Shaft and Sleeve Assembly
13038V48	..	1	Starting Motor Bendix Stop Nut—Special
8111A1	..	1	Starting Motor Bendix Gear
8157E5	..	1	Starting Motor Bendix Retarder Pin—Special
8112A1	..	1	Starting Motor Bendix Retarder Pin Spring
END OF PARTS IN ASSEMBLY No. 8110A1—SA2			
8112B2	1	..	Starting Motor Bendix Drive Spring
13023R18	1	..	Starting Motor Bendix Drive Spring Shaft Screw—Special
13023Q17	1	..	Starting Motor Bendix Drive Spring Head Screw—Special
13049D4	2	..	Starting Motor Bendix Drive Spring Screw Lockwasher—Special
8113A1	2	..	Starting Motor Bendix Drive Support
8114A1	1	..	Starting Motor Bendix Drive Head
END OF PARTS IN ASSEMBLY No. 8110A1—SA1			
8115A1—SA1	1	..	Starting Motor Commutator End Bearing and Brush Assembly— CONSISTING OF—19—SUCCEEDING ITEMS—
8115A1	1	..	Starting Motor Commutator End Bearing Only
13023A53	2	..	Starting Motor Brush Ring Fastening Screw
G-36910	2	..	Starting Motor Brush Ring Fastening Screw Lockwasher—No. 10—SAE Std.—For Round Head Screw
13038V22	2	..	Starting Motor Brush Ring Fastening Screw Nut—Special Shape—Zinc Plated
13023Z52	2	..	Starting Motor Ground Machine Screw
G-36009	2	..	Starting Motor Ground Machine Screw Lockwasher—No. 8—SAE Spec. Light—For Round Head

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ELECTRICAL EQUIPMENT—Continued**STARTING MOTOR—Continued**

PART No.	No. per Truck	No. per Assy.	NAME OF PART
13049F32	2	..	Starting Motor Ground Machine Screw Washer
8116A1—SA1	1	..	Starting Motor Brush Ring Assembly— INCLUDES NEXT—8—ITEMS
8116A1	..	1	Starting Motor Brush Ring—Only
8002B2—SA1	..	2	Starting Motor Cable and Brush Assembly—
8002C3—SA1	..	2	Starting Motor Brush Cable and Clip Assembly—
13023B54	..	4	Starting Motor Brush Screw
G-35902	..	4	Starting Motor Brush Screw Lockwasher—No. 6—SAE Std.
8112C3	..	4	Starting Motor Brush Spring
8117A1	..	4	Starting Motor Brush Holder—Steel—Zinc Plated
8005A1	..	2	Starting Motor Brush Cable Clip END OF PARTS IN ASSEMBLY No. 8116A1—SA1
8118A1	1	..	Starting Motor Dust Cap
8119A1	1	..	Starting Motor Pipe Plug—Special
13048B2—SA1	1	..	Starting Motor Oil Wick and Spring Assembly— END OF PARTS IN ASSEMBLY No. 8115A1—SA1 END OF PARTS IN ASSEMBLY No. 8100A1—A1
G-10205	3	..	Starting Motor and Crank Case Cap Screw— $\frac{3}{8}$ "—16 USS Thd.— $1\frac{1}{8}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{3}{8}$ " High
G-35914	3	..	Starting Motor and Crank Case Cap Screw Lockwasher— $\frac{3}{8}$ "—SAE Std.

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ENGINE—Buda—Model WTU ($3\frac{3}{4}'' \times 5\frac{1}{8}''$, 4 Cyl.)—For Use with Borg & Beck Clutch No. 10KP Only—(SEE PAGE 44-A FOR ENGINE EQUIPPED WITH DOW METAL PISTONS AND FOR USE WITH BORG & BECK CLUTCH No. 11QL)

PART No.	No. per Truck	No. per Assy.	NAME OF PART
100A1— A1	1	..	BUDA ENGINE —Complete Assembly—With No. 3 Bell Housing—Flywheel Machined for Borg & Beck Clutch No. 10 K. P. Only—Cast Iron Piston Only—Consisting of—317—Succeeding Items—
101A1— SA1	1	..	Engine Cylinder Block and Parts Assembly—CONSISTING OF—7—SUCCEEDING ITEMS—
101A1	..	1	Engine Cylinder Block
13013A1	..	19	Engine Cylinder Block and Head Stud
125A1	..	8	Engine Cylinder Block Valve Stem Guide
130A1	..	8	Engine Cylinder Block Valve Push Rod Guide
131A1	..	4	Engine Cylinder Block Valve Push Rod Guide Crab
G-10103	..	4	Engine Cylinder Block Valve Push Rod Guide Crab Cap Screw— $\frac{1}{8}''$ —18 USS Thd. x $\frac{3}{4}''$ Long x $\frac{1}{4}''$ Hex. x $\frac{1}{8}''$ High
G-36013	..	4	Engine Cylinder Block Valve Push Rod Guide Crab Cap Screw Lockwasher— $\frac{1}{8}''$ SAE—Special Light
END OF PARTS IN ASSEMBLY No. 101A1—SA1			
132A1	4	..	Engine Cylinder Piston—Standard—Cast Iron Only
133A1	16	..	Engine Cylinder Piston Ring—Standard
134A1	4	..	Engine Cylinder Piston Pin—Standard—Used With Cast Iron Piston Only
13023D4	4	..	Engine Cylinder Piston Pin Set Screw—Special—Used With Cast Iron Piston Only
G-36014	4	..	Engine Cylinder Piston Pin Set Screw Lockwasher— $\frac{3}{16}''$ SAE—Special Light—Used With Cast Iron Piston Only
112A1	8	..	Engine Cylinder Piston Pin Retaining Spring
124A1	4	..	Engine Cylinder Valve—Exhaust
124A1	4	..	Engine Cylinder Valve—Intake
112E5	8	..	Engine Cylinder Valve Spring
127A1	8	..	Engine Cylinder Valve Spring Cup
128A1	16	..	Engine Cylinder Valve Spring Retainer—Halves
129A1	8	..	Engine Cylinder Valve Push Rod
13023A1	8	..	Engine Cylinder Valve Push Rod Adjusting Screw
13038B2	8	..	Engine Cylinder Valve Push Rod Adjusting Screw Nut—Special
126A1	2	..	Engine Cylinder Valve Enclosure Cover
104F6	2	..	Engine Cylinder Valve Enclosure Cover Gasket
13023D56	12	..	Engine Cylinder Valve Enclosure Cover Cap Screw—Special
G-36012	12	..	Engine Cylinder Valve Enclosure Cover Cap Screw Lockwasher— $\frac{1}{4}''$ SAE—Special Light
102A1	1	..	Engine Cylinder Head
104A1	1	..	Engine Cylinder Head Gasket
13038W23	19	..	Engine Cylinder Head Stud Nut—Special Steel
13049P42	19	..	Engine Cylinder Head Stud Nut Washer
135A1	1	..	Engine Cable Tube
173A1	1	..	Engine Cable Tube Bracket
G-10105	2	..	Engine Cable Tube Bracket Cap Screw— $\frac{1}{8}''$ —18 USS 'hd. x 1" Long x $\frac{1}{4}''$ Hex. x $\frac{1}{8}''$ High
G-36013	2	..	Engine Cable Tube Bracket Cap Screw Lockwasher— $\frac{1}{8}''$ SAE—Special Light
13023E57	2	..	Engine Cable Tube and Bracket Machine Screw
G-36012	2	..	Engine Cable Tube and Bracket Machine Screw Lockwasher— $\frac{1}{4}''$ SAE—Special Light

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ENGINE—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
G-37516	4	..	Engine Cylinder Head Pipe Plugs—In Priming Cup Holes— $\frac{1}{8}$ " Pipe Thd.—Headless—Slotted
103A1	1	..	Engine Cylinder Head Water Outlet—Bolted to Head
104G7	1	..	Engine Cylinder Head Water Outlet Gasket
G-10105	4	..	Engine Cylinder Head Water Outlet Cap Screw— $\frac{1}{8}$ "—18 USS Thd. x 1" Long x $\frac{1}{2}$ " Hex. x $\frac{1}{8}$ " High
G-36013	4	..	Engine Cylinder Head Water Outlet Cap Screw Lockwasher— $\frac{1}{8}$ " SAE—Special Light
103B2	1	..	Engine Cylinder Water Inlet—Bolted to Cylinder
104H8	1	..	Engine Cylinder Water Inlet Gasket
13023F58	2	..	Engine Cylinder Water Inlet Cap Screw—Special
G-36014	2	..	Engine Cylinder Water Inlet Cap Screw Lockwasher— $\frac{3}{8}$ " SAE—Special Light
168A1	1	..	Engine Cylinder Exhaust Pipe—With 1 Tappet Clearance Plate—Buda No. KE-225—4—Tappet Clearance Plate Rivets— $\frac{1}{8}$ " Dia. x $\frac{3}{8}$ " Long—R. H. Brass
169A1	1	..	Engine Cylinder Exhaust Pipe Flange
104T20	1	..	Engine Cylinder Exhaust Pipe Flange Gasket
G-10210	3	..	Engine Cylinder Exhaust Pipe Flange Bolt— $\frac{3}{8}$ "—16 USS Thd. x $1\frac{1}{4}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{3}{8}$ " High
G-30502	3	..	Engine Cylinder Exhaust Pipe Flange Bolt Nut— $\frac{3}{8}$ "—16 USS Thd.— $\frac{1}{8}$ " Hex. x $\frac{3}{8}$ " High—Plain
G-36014	3	..	Engine Cylinder Exhaust Pipe Flange Bolt Nut Lockwasher— $\frac{3}{8}$ " SAE—Special Light
13023G59	6	..	Engine Cylinder Exhaust Port Cap Screw
G-36014	6	..	Engine Cylinder Exhaust Port Cap Screw Lockwasher— $\frac{3}{8}$ "—SAE—Special Light
104J10	2	..	Engine Cylinder Exhaust and Intake Port Gasket—Combination (3 in One Piece)
170A1	1	..	Engine Cylinder Intake Pipe
104K11	1	..	Engine Cylinder Intake and Exhaust Pipe Union Gasket
13023G59	4	..	Engine Cylinder Intake and Exhaust Pipe Union Cap Screw
G-36014	4	..	Engine Cylinder Intake and Exhaust Pipe Union Cap Screw Lockwasher— $\frac{3}{8}$ " SAE—Special Light
13023G59	4	..	Engine Cylinder Intake Port Cap Screw
G-36014	4	..	Engine Cylinder Intake Port Cap Screw Lockwasher— $\frac{3}{8}$ " SAE—Special Light
104B2	1	..	Engine Cylinder Foot Gasket—Between Cylinder Block and Crank Case
G-31103	10	..	Engine Cylinder Foot Stud Nut— $\frac{1}{2}$ "—20 SAE Thd.— $\frac{5}{8}$ " Hex. x $\frac{3}{8}$ " High—Plain
G-36015	10	..	Engine Cylinder Foot Stud Nut Lockwasher— $\frac{1}{2}$ "—SAE—Special Light
136A1—SA1	4	..	Engine Connecting Rod and Parts Assembly— CONSISTING OF—9—SUCCEEDING ITEMS—
136A1	..	1	Engine Connecting Rod and Cap
13016A1	..	4	Engine Connecting Rod and Cap Bolt—Special
13038E5	..	4	Engine Connecting Rod and Cap Bolt Nut—Special—Slotted
G-36319	..	4	Engine Connecting Rod and Cap Bolt Nut Cotter— $\frac{1}{2}$ " x $1\frac{1}{4}$ " Long
111A1	..	1	Engine Connecting Rod Bushing—Piston Pin End
137A1	..	2	Engine Connecting Rod Bearing—Upper and Lower
13023H60	..	2	Engine Connecting Rod Bearing Machine Screw
185D4	..	2	Engine Connecting Rod Bearing Shim
185E5	..	2	Engine Connecting Rod Bearing Shim—Laminated
			END OF PARTS IN ASSEMBLY No. 136A1—SA1
176A1	1	..	Engine Governor Drive Housing Cover

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ENGINE—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
104L12	1	..	Engine Governor Drive Housing Cover Gasket
18023J62	4	..	Engine Governor Drive Housing Cover Machine Screw
G-36012	4	..	Engine Governor Drive Housing Cover Machine Screw Lockwasher— $\frac{1}{4}$ " SAE—Special Light
105A1—SA1	1	..	Engine Crank Case Assembly—Always Fitted and Furnished With These Parts CONSISTING OF—47—SUCCEEDING ITEMS—
105A1	1	..	Engine Crank Case—Upper
106A1	1	..	Engine Crank Case Bell Housing
G-36501	2	..	Engine Crank Case Bell Housing Taper Pin—No. 6 x 1" Long
G-10204	6	..	Engine Crank Case Bell Housing Cap Screw— $\frac{3}{8}$ "—16 USS Thd. x 1" Long x $\frac{1}{16}$ " Hex. x $\frac{3}{8}$ " High
G-36014	6	..	Engine Crank Case Bell Housing Cap Screw Lockwasher— $\frac{3}{8}$ " SAE—Special Light
104M13	2	..	Engine Crank Case Bell Housing Gasket
G-37493	1	..	Engine Crank Case Welch Expansion Plug—For Governor Gear Housing— $2\frac{1}{4}$ " Dia.
13013B2	2	..	Engine Crank Case and Cylinder Block Stud—Long
13013C3	8	..	Engine Crank Case and Cylinder Block Stud—Short
G-37504	1	..	Engine Crank Case Oil Distributing Pipe Plug— $\frac{3}{8}$ " Pipe Thd.—Square Head—C. I.
187C3	1	..	Engine Crank Case Oil Distributing Pipe Plug—Front
187D4	2	..	Engine Crank Case Oil Lead Plug—Front and Rear Bearings
G-37516	2	..	Engine Crank Case Oil Line Pipe Plug—In Crank Case— $\frac{1}{8}$ " Pipe Thd.—Headless—Slotted
175A1	1	..	Engine Crank Case Oil Pump Drive Shaft Bearing—Pressed Into Crankcase
13135A1	1	..	Engine Crank Case Oil Pressure Regulating Valve— $\frac{5}{8}$ " Dia. Steel Ball
171A1	1	..	Engine Crank Case Oil Pressure Regulating Valve Seat
112C3	1	..	Engine Crank Case Oil Pressure Regulating Valve Spring
18023C3	1	..	Engine Crank Case Oil Pressure Regulating Valve Adjusting Screw
13049Q43	9	..	Engine Crank Case Oil Pressure Regulating Valve Adjusting Screw Washer—.007 Thick
13049R44	1	..	Engine Crank Case Oil Pressure Regulating Valve Adjusting Screw Washer—.018 Thick
116A1	1	..	Engine Crank Shaft Bearing—Front—Upper
116B2	1	..	Engine Crank Shaft Bearing—Front—Lower
13023K63	8	..	Engine Crank Shaft Bearing—Front Retaining Machine Screw
117A1	1	..	Engine Crank Shaft Bearing—Front Cap
185A1	2	..	Engine Crank Shaft Bearing—Front Shim
116C8	1	..	Engine Crank Shaft Bearing—Center—Upper
116D4	1	..	Engine Crank Shaft Bearing—Center—Lower
13023K63	8	..	Engine Crank Shaft Bearing—Center Retaining Machine Screw
117B2	1	..	Engine Crank Shaft Bearing—Center Cap
185A1	2	..	Engine Crank Shaft Bearing—Center Shim
116E5	1	..	Engine Crank Shaft Bearing—Rear—Upper
116F6	1	..	Engine Crank Shaft Bearing—Rear—Lower
13023K63	8	..	Engine Crank Shaft Bearing—Rear Retaining Machine Screw
117C3	1	..	Engine Crank Shaft Bearing—Rear Cap
185B2	2	..	Engine Crank Shaft Bearing—Rear Shim
13013E5	12	..	Engine Crank Shaft Bearing Stud
13038F6	12	..	Engine Crank Shaft Bearing Stud Nut—Special Steel—Slotted
G-36319	12	..	Engine Crank Shaft Bearing Stud Nut Cotter Pin— $\frac{1}{32}$ " x $1\frac{1}{4}$ " Long
13009F6	12	..	Engine Crank Shaft Bearing Stud Dowel Pin

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ENGINE—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
121A1	..	1	Engine Cam Shaft Bearing—Front
13009D4	..	1	Engine Cam Shaft Bearing—Front Dowel Pin
121B2	..	1	Engine Cam Shaft Bearing—Center
13009D4	..	1	Engine Cam Shaft Bearing—Center Dowel Pin
121C8	..	1	Engine Cam Shaft Bearing—Rear
13009E5	..	1	Engine Cam Shaft Bearing—Rear Dowel Pin
13014A1	..	1	Engine Name Plate—Gottfredson—Detroit Production
13014B2	..	1	Engine Name Plate—Gottfredson—Walkerville Production
G-35044	..	4	Engine Name Plate Drive Screw—No. 6— $\frac{3}{8}$ " Long—Brass Plated
<u>END OF PARTS IN ASSEMBLY No. 105A1—SA1</u>			
113A1	1	..	Engine Crank Shaft
114A1	1	..	Engine Crank Shaft Jaw—Female—For Starting Crank
115A1	1	..	Engine Crank Shaft Gear
G-36619	1	..	Engine Crank Shaft Gear Key—No. B Woodruff
122A1—SA1	1	..	Engine Fly Wheel and Ring Gear Assembly—
			CONSISTING OF—2—SUCCEEDING ITEMS—
122A1	..	1	Engine Flywheel—For Use With Borg & Beck 10 KP Clutch Only
123A1	..	1	Engine Flywheel Ring Gear
<u>END OF PARTS IN ASSEMBLY No. 122A1—SA1</u>			
13016B2	6	..	Engine Flywheel and Crankshaft Bolt—Special
13038D4	6	..	Engine Flywheel and Crankshaft Bolt Nut—Special
G-36319	6	..	Engine Flywheel and Crankshaft Bolt Nut Cotter— $\frac{3}{4}$ " x $1\frac{1}{4}$ " Long
118A1	1	..	Engine Cam Shaft
119A1	1	..	Engine Cam Shaft Gear
13023M65	3	..	Engine Cam Shaft Gear Cap Screw
18194A1	1	..	Engine Cam Shaft Gear Cap Screw Lock Wire—No. 16 B. W. G. A. x 12" Long
120A1—SA1	1	..	Engine Cam Shaft Thrust Spring Housing and Parts Assembly—
			CONSISTING OF—5—SUCCEEDING ITEMS—
120A1	..	1	Engine Cam Shaft Thrust Spring Housing
112B2	..	1	Engine Cam Shaft Thrust Spring
186B2	..	1	Engine Cam Shaft Thrust Spring Plunger
13023B2	..	1	Engine Cam Shaft Thrust Spring Plunger Adjusting Screw
184A1	..	1	Engine Cam Shaft Thrust Spring Plunger Adjusting Screw Lock Nut
<u>END OF PARTS IN ASSEMBLY No. 120A1—SA1</u>			
107A1—SA1	1	..	Engine Bell Housing Oil Retainer and Tube Assembly—
			CONSISTING OF—2—SUCCEEDING ITEMS—
107A1	..	1	Engine Bell Housing Oil Retainer
108A1	..	1	Engine Bell Housing Oil Retainer Tube
<u>END OF PARTS IN ASSEMBLY No. 107A1—SA1</u>			
104N14	1	..	Engine Bell Housing Oil Retainer Gasket
13026A1	1	..	Engine Bell Housing Packing—Cork
13023N66	4	..	Engine Bell Housing Packing Screw
13134A1	1	..	Engine Bell Housing Packing Screw Lock Wire—No. 16 B. W. G. A. x 12" Long

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ENGINE—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
138A1—SA1	1	..	Engine Breather Body and Parts Assembly— CONSISTING OF—13—SUCCEEDING ITEMS—
138A1	..	1	Engine Breather Body
139A1	..	1	Engine Breather Body Cover
13020G7	..	1	Engine Breather Body Cover Pin—Special—Button Head
G-36315	..	2	Engine Breather Body Cover Pin Cotter Pin— $\frac{3}{32}$ " x $\frac{3}{4}$ " Long
112F6	..	1	Engine Breather Body Cover Spring
13023L64	..	3	Engine Breather Body Cover Spring Machine Screw
G-36012	..	3	Engine Breather Body Cover Spring Machine Screw Lockwasher— $\frac{1}{4}$ " SAE—Special Light
140A1	..	1	Engine Breather Body Screen—Upper
140B2	..	1	Engine Breather Body Screen—Lower
13004B2—SA1	1	..	Engine Breather Body Valve Leather and Reinforcement Assembly— CONSISTING OF—3—SUCCEEDING ITEMS—
13004B2	..	1	Engine Breather Body Valve Leather
142A1	..	2	Engine Breather Body Valve Leather Reinforcement
G-37734-A	..	1	Engine Breather Body Valve Leather Reinforcement Rivet— $\frac{1}{8}$ " Dia. x $\frac{3}{4}$ " Long— Round Head—Iron
			END OF PARTS IN ASSEMBLY No 13004B2—SA1
			END OF PARTS IN ASSEMBLY No. 138A1—SA1
104H8	1	..	Engine Breather Body Gasket
G-10204	2	..	Engine Breather Body Cap Screw— $\frac{3}{8}$ "—16 USS Thd. x 1" Long x $\frac{1}{8}$ " Hex x $\frac{3}{4}$ " High
G-36014	2	..	Engine Breather Body Cap Screw Lockwasher— $\frac{3}{8}$ " SAE—Special Light
172A1	1	..	Engine Magneto or Coil Bracket
G-10204	4	..	Engine Magneto or Coil Bracket Cap Screw— $\frac{3}{8}$ "—16 USS Thd. x 1" Long x $\frac{1}{8}$ " Hex. x $\frac{3}{4}$ " High
G-36014	4	..	Engine Magneto or Coil Bracket Cap Screw Lockwasher— $\frac{3}{8}$ " SAE—Special Light
G-36501	2	..	Engine Magneto or Coil Bracket Taper Pin—No. 6 x 1" Long
143A1—SA1	1	..	Engine Oil Level Handle Tube and Nut Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
143A1	..	1	Engine Oil Level Handle Tube
13038C3	..	1	Engine Oil Level Handle Tube Nut
			END OF PARTS IN ASSEMBLY No. 143A1—SA1
144A1—SA1	1	..	Engine Oil Level Gauge Rod and Plug Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
144A1	..	1	Engine Oil Level Gauge Rod
187B2	..	1	Engine Oil Level Gauge Rod Plug
			END OF PARTS IN ASSEMBLY No. 144A1—SA1
145A1—SA1	1	..	Engine Idler Gear and Bushing Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
145A1	..	1	Engine Idler Gear
111B2	..	1	Engine Idler Gear Bushing
			END OF PARTS IN ASSEMBLY No. 145A1—SA1
13013D4	1	..	Engine Idler Gear Stud—Special
187A1	1	..	Engine Idler Gear Stud Plug

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ENGINE—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
13023P68	3	..	Engine Idler Gear Stud Cap Screw—Special
13134B2	1	..	Engine Idler Gear Stud Cap Screw Lock Wire—No. 16 B. W. G. A. x 10" Long
109A1—SA1	1	..	Engine Gear Case Cover and Water Pump Bushing Assembly— CONSISTING OF—3—SUCCEEDING ITEMS—
109A1	..	1	Engine Gear Case Cover
111C8	..	1	Engine Gear Case Cover Bushing—For Water Pump Gear Shaft
13009G7	..	1	Engine Gear Case Cover Bushing Dowel Pin
			END OF PARTS IN ASSEMBLY No. 109A1—SA1
104Q17	1	..	Engine Gear Case Cover Gasket
G-36501	2	..	Engine Gear Case Cover Taper Pin—No. 6 x 1" Long
G-10208	8	..	Engine Gear Case Cover and Crank Case Cap Screw— $\frac{3}{8}$ "—16 USS Thd. x $1\frac{1}{4}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{3}{8}$ " High
G-30502	9	..	Engine Gear Case Cover and Crank Case Cap Screw Nut— $\frac{3}{8}$ "—16 USS Thd. x $\frac{1}{8}$ " Hex. x $\frac{3}{8}$ " High—Plain
13023Q69	2	..	Engine Gear Case Cover and Crank Case Cap Screw
G-30502	2	..	Engine Gear Case Cover and Crank Case Cap Screw Nut— $\frac{3}{8}$ "—16 USS Thd.— $\frac{1}{8}$ " Hex. x $\frac{3}{8}$ " High—Plain
G-36014	11	..	Engine Gear Case Cover and Crank Case Cap Screw Lockwasher— $\frac{3}{8}$ "—SAE—Special Light
G-10204	4	..	Engine Gear Case Cover and Crank Case Cap Screw— $\frac{3}{8}$ "—16 USS Thd. x 1" Long x $\frac{1}{8}$ " Hex. x $\frac{3}{8}$ " High
174A1	1	..	Engine Support Bracket—Front
13016M13	1	..	Engine Support Bracket Clamp Bolt—Special
13038Z26	1	..	Engine Support Bracket Clamp Bolt Nut—Special
G-36318	1	..	Engine Support Bracket Clamp Bolt Nut Cotter— $\frac{1}{2}$ " x $1\frac{1}{2}$ " Long
185C3	1	..	Engine Support Bracket Shim
147A1—SA1	1	..	Engine Starting Crank Shaft, Bracket and Crank Case Assembly— CONSISTING OF—16—SUCCEEDING ITEMS—
147A1—SA2	1	..	Engine Starting Crank Shaft and Bracket Assembly— CONSISTING OF—5—SUCCEEDING ITEMS—
147A1	..	1	Engine Starting Crank Shaft With Jaw
186A1	..	1	Engine Starting Crank Shaft Plunger
112G7	..	1	Engine Starting Crank Shaft Plunger Spring
148A1	..	1	Engine Starting Crank Shaft Plunger Spring Cap
146A1	..	1	Engine Starting Crank Bracket
			END OF PARTS IN ASSEMBLY No. 147A1—SA2
G-36612	1	..	Engine Starting Crank and Shaft Key—No. 11 Woodruff
149A1—SA1	1	..	Engine Starting Crank and Handle Assembly— CONSISTING OF—8—SUCCEEDING ITEMS—
149A1	..	1	Engine Starting Crank
13016L12	..	1	Engine Starting Crank Clamp Bolt—Special
G-30502	..	1	Engine Starting Crank Clamp Bolt Nut— $\frac{3}{8}$ "—16 USS Thd.— $\frac{1}{8}$ " Hex. x $\frac{3}{8}$ " High— Plain
G-36014	..	1	Engine Starting Crank Clamp Bolt Nut Lockwasher— $\frac{3}{8}$ " SAE—Special Light

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ENGINE—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
150A1	..	1	Engine Starting Crank Handle Sleeve
148B2	..	1	Engine Starting Crank Handle Sleeve Cap
13049S45	..	1	Engine Starting Crank Handle Collar
112D4	..	1	Engine Starting Crank Handle Spring
			<u>END OF PARTS IN ASSEMBLY NO. 149A1—SA1</u>
			<u>END OF PARTS IN ASSEMBLY NO. 147A1—SA1</u>
104R18	1	..	Engine Starting Crank Bracket Gasket
13023R70	3	..	Engine Starting Crank Bracket Cap Screw
G-36014	3	..	Engine Starting Crank Bracket Cap Screw Lockwasher— $\frac{3}{8}$ "—SAE—Special Light
13134A1	1	..	Engine Starting Crank Bracket Cap Screw Lock Wire—No. 16 B. W. G. A. x 12" Long
110A1	1	..	Engine Oil Pan
104C3	2	..	Engine Oil Pan and Crank Case Gasket
G-36501	2	..	Engine Oil Pan and Crank Case Taper Pin—No. 6 x 1" Long
G-10204	15	..	Engine Oil Pan and Crank Case Cap Screw— $\frac{3}{8}$ "—16 USS Thd. x 1" Long x $\frac{1}{8}$ " Hex. x $\frac{3}{8}$ " High
G-36014	15	..	Engine Oil Pan and Crank Case Cap Screw Lockwasher— $\frac{3}{8}$ "—SAE—Special Light
G-10208	13	..	Engine Oil Pan and Crank Case Bolt— $\frac{3}{8}$ "—16 USS Thd. x 1 $\frac{1}{2}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{3}{8}$ " High
G-30502	13	..	Engine Oil Pan and Crank Case Bolt Nut— $\frac{3}{8}$ "—16 USS Thd.— $\frac{1}{8}$ " Hex x $\frac{3}{8}$ " High—Plain
G-36014	13	..	Engine Oil Pan and Crank Case Bolt Nut Lockwasher— $\frac{3}{8}$ "—SAE—Special Light
G-37502	1	..	Engine Oil Pan Pipe Plug— $\frac{1}{4}$ " Pipe Thd.—Square Head—Iron
706A1	1	..	Engine Fan Drive Pulley
G-36330	1	..	Engine Fan Drive Pulley and Water Pump Shaft Nut Cotter— $\frac{3}{8}$ " x 1 $\frac{1}{2}$ " Long
G-36699	1	..	Engine Fan Drive Pulley and Water Pump Shaft Key—No. 9 Woodruff
151A1—SA1	1	..	Engine Water Pump Drive Housing and Shaft Bushing Assembly— CONSISTING OF—3—SUCCEEDING ITEMS—
151A1	..	1	Engine Water Pump Drive Housing
111C3	..	1	Engine Water Pump Drive Shaft Bushing
13009G7	..	1	Engine Water Pump Drive Shaft Bushing Dowel Pin
			<u>END OF PARTS IN ASSEMBLY NO. 151A1—SA1</u>
13024A1	1	..	Engine Water Pump Coupling—Drive End
G-36608	1	..	Engine Water Pump Coupling Key—No. 8 Woodruff
13024B2	1	..	Engine Water Pump Coupling—Driven End
G-36607	1	..	Engine Water Pump Coupling Key—No. 7 Woodruff
13008A1	1	..	Engine Water Pump Coupling Disc—Thermoid
13007A1	2	..	Engine Water Pump Coupling Disc—Spring Steel
13023K11	4	..	Engine Water Pump Coupling Screw
G-31200	4	..	Engine Water Pump Coupling Screw Nut—Castle— $\frac{1}{4}$ "—28 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{1}{8}$ " High
G-36012	4	..	Engine Water Pump Coupling Screw Nut Lockwasher— $\frac{1}{4}$ " SAE—Special Light
G-36201	4	..	Engine Water Pump Coupling Screw Nut Washer— $\frac{1}{8}$ " I. D. x $\frac{3}{4}$ " O. D. x $\frac{1}{8}$ " Thick—Steel
G-36302	4	..	Engine Water Pump Coupling Screw Nut Cotter— $\frac{1}{8}$ " x $\frac{1}{2}$ " Long
G-36468	1	..	Engine Water Pump Coupling Taper Pin—No. 4 x 1 $\frac{3}{4}$ " Long
G-36802	1	..	Engine Water Pump Coupling Taper Pin Cotter— $\frac{1}{8}$ " x $\frac{1}{4}$ " Long

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ENGINE—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
G87500	1	..	Engine Water Pump Pipe Plug— $\frac{1}{8}$ " Pipe Thd.—Square Head—Iron
152A1	1	..	Engine Water Pump Gear
	1	..	Engine Water Pump Gear Shaft Coupling Nut Washer
G-36319	1	..	Engine Water Pump Gear Shaft Coupling Nut Cotter— $\frac{3}{16}$ " x $1\frac{1}{4}$ " Long
153A1	1	..	Engine Water Pump Gear Shaft Oil Deflector
G-36612	1	..	Engine Water Pump Gear and Shaft Key—No. 11 Woodruff
104S19	1	..	Engine Water Pump Drive Housing Gasket
G-10204	3	..	Engine Water Pump Drive Housing Cap Screw— $\frac{3}{8}$ "—16 USS Thd. x 1" Long x $\frac{1}{8}$ " Hex. x $\frac{3}{8}$ " High
G-36014	3	..	Engine Water Pump Drive Housing Cap Screw Lockwasher— $\frac{3}{8}$ "—SAE—Special Light
G-26857-J	1	..	Engine Water Pump Drive Housing Set Screw— $\frac{3}{8}$ "—16 USS Thd. x $\frac{3}{8}$ " Long—Full Square Head—Cup Point—Steel
G-30502	1	..	Engine Water Pump Drive Housing Set Screw Nut— $\frac{3}{8}$ "—16 USS Thd.— $\frac{1}{2}$ " Hex. x $\frac{3}{8}$ " High—Plain
154A1—SA1	1	..	Engine Water Pump Gear Shaft and Nuts Assembly— CONSISTING OF—3—SUCCEEDING ITEMS—
154A1	..	1	Engine Water Pump Gear Shaft
13038X24	..	1	Engine Water Pump Gear Shaft Nut—Coupling End
13038Y25	..	1	Engine Water Pump Gear Shaft Nut—Fan Pulley End
			<u>END OF PARTS IN ASSEMBLY No. 154A1—SA1</u>
154B2—SA1	1	..	Engine Water Pump Assembly— CONSISTING OF—15—SUCCEEDING ITEMS—
154B2	..	1	Engine Water Pump Shaft
13045C3	..	2	Engine Water Pump Grease Cup—Bowen No. 00— $\frac{1}{8}$ "—With Check Valve
13047A1	..	2	Engine Water Pump Grease Cup Extension
156A1	..	1	Engine Water Pump Runner
G-36608	..	1	Engine Water Pump Runner Key—No. 8 Woodruff
G-36468	..	1	Engine Water Pump Runner Taper Pin—No. 4 x $1\frac{1}{4}$ " Long
157A1	..	1	Engine Water Pump Body
158A1	..	1	Engine Water Pump Body Cover
104P16	..	1	Engine Water Pump Body Cover Gasket
13023L64	..	7	Engine Water Pump Body Cover Machine Screw
G-36012	..	7	Engine Water Pump Body Cover Machine Screw Lockwasher— $\frac{1}{4}$ " SAE—Special Light
13026B2	..	2 Sets	Engine Water Pump Packing
13027A1	..	2	Engine Water Pump Packing Gland
13028A1	..	1	Engine Water Pump Packing Nut—Front
13028B2	..	1	Engine Water Pump Packing Nut—Rear
			<u>END OF PARTS IN ASSEMBLY No. 154B2—SA1</u>
13029A1	1	..	Engine Water Pump Hose—Pump Cover to Inlet Connection on Cylinder Block
13030C3	2	..	Engine Water Pump Hose Clamp—For $1\frac{1}{2}$ " Dia. Hose
103C3	1	..	Engine Water Pump Inlet—Bolted to Pump Cover
104H8	1	..	Engine Water Pump Inlet Gasket
13016K11	2	..	Engine Water Pump Inlet Bolt
G-30501	2	..	Engine Water Pump Inlet Bolt Nut— $\frac{1}{8}$ "—18 USS Thd.— $\frac{3}{16}$ " Hex. x $\frac{1}{8}$ " High—Plain
G-36013	2	..	Engine Water Pump Inlet Bolt Nut Lockwasher— $\frac{1}{8}$ " SAE—Special Light

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ENGINE—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
159A1—SA1	1	..	Engine Oil Pump Body Assembly— CONSISTING OF—8—SUCCEEDING ITEMS—
159A1	..	1	Engine Oil Pump Body
160A1	..	1	Engine Oil Pump Body Cover
104D4	..	1	Engine Oil Pump Body Cover Gasket
13023S71	..	4	Engine Oil Pump Body Cover Machine Screw
G-36012	..	4	Engine Oil Pump Body Cover Machine Screw Lockwasher— $\frac{1}{4}$ " SAE Light
13134C3	..	1	Engine Oil Pump Body Cover Machine Screw Lock Wire—No. 16—BWGA x 7" Long
161A1	..	1	Engine Oil Pump Gear—Driver
161B2	..	1	Engine Oil Pump Gear—Driven
END OF PARTS IN ASSEMBLY No. 159A1—SA1			
104E5	1	..	Engine Oil Pump Body Gasket—Upper
13023T72	4	..	Engine Oil Pump Body Cap Screw
G-36014	4	..	Engine Oil Pump Body Cap Screw Lockwasher— $\frac{3}{8}$ " SAE—Special Light
13134B2	1	..	Engine Oil Pump Body Cap Screw Lock Wire—No. 16 BWGA x 10" Long
G-36433	2	..	Engine Oil Pump Body Taper Pin—No. 2 x 1" Long
162A1	1	..	Engine Oil Pump Drive Shaft
13049T46	1	..	Engine Oil Pump Drive Shaft Thrust Washer—Special
163A1	1	..	Engine Oil Pump Drive Shaft Spiral Gear—Driver
G-36602	1	..	Engine Oil Pump Drive Shaft Spiral Gear Key—No. 3 Woodruff
G-36417	1	..	Engine Oil Pump Drive Shaft Spiral Gear Taper Pin—No. 1 x 1" Long
164A1	1	..	Engine Oil Pump Drive Shaft Thrust Plate
104U21	1	..	Engine Oil Pump Drive Shaft Thrust Plate Gasket
G-10204	2	..	Engine Oil Pump Drive Shaft Thrust Plate Cap Screw— $\frac{3}{8}$ "—16 USS Thd. x 1" Long x $\frac{1}{8}$ " Hex. x $\frac{3}{8}$ " High
G-36014	2	..	Engine Oil Pump Drive Shaft Thrust Plate Cap Screw Lockwasher— $\frac{3}{8}$ " SAE—Special Light
140C3	1	..	Engine Oil Pump Screen
	1	..	Engine Oil Pump Screen Wire
G-26809-M	1	..	Engine Distributor Boss Set Screw— $\frac{1}{4}$ "—20 USS Thd. x $1\frac{1}{4}$ " Long—Square Head— Flat Dog Point
G-30500	1	..	Engine Distributor Boss Set Screw Lock Nut— $\frac{1}{4}$ "—20 USS Thd.— $\frac{1}{4}$ " Hex. x $\frac{1}{4}$ " High Plain
END OF PARTS IN ASSEMBLY No. 100A1—A1			
165A1	4	..	Engine Spark Plug— $\frac{7}{8}$ "—18 Thd. (Champion)
166A1	4	..	Engine Spark Plug Gasket—For Above
13049U47	2	..	Engine and Front Support Washer—Fibre
G-14418	2	..	Engine and Front Support Cap Screw— $\frac{1}{2}$ "—20 SAE Thd. x $1\frac{3}{4}$ " Long x $\frac{3}{4}$ " Hex. x $\frac{3}{8}$ " High—Drilled End
G-31204	2	..	Engine and Front Support Cap Screw Castle Nut— $\frac{1}{2}$ "—20 SAE Thd.— $\frac{1}{4}$ " Hex. x $\frac{1}{8}$ " High
G-36317	2	..	Engine and Front Support Cap Screw Castle Nut Cotter Pin— $\frac{3}{32}$ " x 1" Long
13049U47	2	..	Engine and Rear Support Washer—Fibre
G-14669	2	..	Engine and Rear Support Cap Screw— $\frac{5}{8}$ "—18 SAE Thd. x $5\frac{1}{8}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{1}{8}$ " High—Drilled End
G-31206	2	..	Engine and Rear Support Cap Screw Castle Nut— $\frac{5}{8}$ "—18 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{1}{8}$ " High
G-36328	2	..	Engine and Rear Support Cap Screw Castle Nut Cotter Pin— $\frac{1}{8}$ " x $1\frac{1}{4}$ " Long

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

ENGINE—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
112H8	2	..	Engine and Rear Support Bracket Spring
13049V48	2	..	Engine and Rear Support Bracket Spring Washer
G-37302	1	..	Engine Front Support Alemite Fitting— $\frac{1}{4}$ " Pipe Thd.—25° Angle
108D4	1	..	Engine Lower Water Inlet Connection—Bolted to Engine
G-10212	1	..	Engine Lower Water Inlet Connection Cap Screw— $\frac{1}{4}$ "—16 USS Thd. x 2" Long— x $\frac{5}{16}$ " Hex. x $\frac{3}{8}$ " High

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

EQUIPMENT AND TOOLS

PART No.	No. per Truck	No. per Assy.	NAME OF PART
3308A1—SA2	1	..	WHEEL RIM —Assembly—32" x 4 1/4"—For 33" x 5" Pneumatic Tire—Spare— Consisting of—3—Succeeding Items—
3308A1	..	1	Wheel Rim Base—32" x 4 1/4"
3309A1	..	1	Wheel Side Ring—32" x 4 1/4"
3309B2	..	1	Wheel Locking Ring—32" x 4 1/4"
END OF PARTS IN ASSEMBLY No. 3308A1—SA2			
11731A1	1	..	Oil Can
11732A1	1	..	Oil Can Bracket Assembly—Screwed to Wood Dash
G-32905	2	..	Oil Can Bracket Wood Screw—No. 10—3/8" Long—Round Head
11736A1— A1	1	..	Wheel Puller and Parts Assembly— CONSISTING OF—4—SUCCEEDING ITEMS—
11736A1	..	1	Wheel Puller
G-15806	..	1	Wheel Puller Clamp Bolt—1/2"—13 USS Thd. x 2 1/2" Long—Square Head—Mach. Bolt
G-30504	..	1	Wheel Puller Clamp Bolt Nut—1/2"—13 USS Thd.—1/8" Hex. x 1/2" High—Plain
G-27095	..	1	Wheel Puller Set Screw—1 1/4"—7 USS Thd. x 4" Long—Flat Point
END OF PART IN ASSEMBLY No. 11736A1—A1			
11733A1— A1	1	..	Alemite Lubricating Gun—See Bassick Mfg. Co. Service Parts List
11000A1— A1	1	..	Jack Assembly—See Ashland Products Co. Service Parts List
11050A1— A1	1	..	Tire Pump—See Ashland Products Co. Service Parts List
6625A1	1	..	Tool Box
G-32905	9	..	Tool Box Wood Screw—To Wood Dash and Toe Board—No. 10—3/8" Long—Round Head
6626A1	1	..	Tool Box Cover
G-32905	5	..	Tool Box Cover Wood Screw—To Wood Dash—No. 10—3/8" Long—Round Head
11725A1	1	..	Wrench—For Hub Cap and Axle Shaft and Spindle Nuts
11725B2	1	..	Wrench—For Wheel Rim Nut
11734A1— A1	1	..	Tool Kit Assembly— CONSISTING OF—12—SUCCEEDING ITEMS—
11735A1	..	1	Case
11725F6	..	1	D. E. Wrench—1/4" and 5/16"
11725G7	..	1	D. E. Wrench—3/8" and 7/16"
11725H8	..	1	D. E. Wrench—1/2" and 5/8"
11725J10	..	1	D. E. Wrench—3/4" and 7/8"
11727A1	..	1	Cold Chisel—1/2" Standard
11728A1	..	1	Solid Punch—1/2" Standard
11729A1	..	1	Combination Pliers—8"
11730A1	..	1	Screw Driver—Square Shank—6" Long—Wood Handle
11725E5	..	1	Spark Plug Wrench—7/8" x 1 1/8"
11726A1	..	1	Hammer—10 Oz.—All Steel
11725C3	..	1	Auto Wrench—9"
END OF PARTS IN ASSEMBLY No. 11734A1—A1			
11725D4	1	..	Wrench—Spanner—For Water Pump Nut
11725K11	1	..	Wrench—For Distributor
11725L12	1	..	Wrench—For Distributor

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

FAN ASSEMBLY

PART No.	No. per Truck	No. per Assy.	NAME OF PART
700A1—A1	1	..	FAN—Complete Assembly—
			Consisting of—21—Succeeding Items—
701A1—SA1	1	..	Fan Blade Spider and Blades Assembly—16" Dia.—Parts Not Sold Separately
702A1	..	1	Fan Hub
104V22	..	1	Fan Hub and Blade Assembly Gasket
13023W49	..	4	Fan Hub and Blade Assembly Cap Screw
G-36063	..	4	Fan Hub and Blade Assembly Cap Screw Lockwasher— $\frac{1}{16}$ " SAE Special Heavy
187E5	..	1	Fan Hub Oil Plug—Special
13001C3	..	2	Fan Hub Bearing—No. 20 New Departure—Magneto Type—Ball
13049A27	..	1	Fan Hub Bearing Cone Clamp Washer
112J10	..	1	Fan Hub Bearing Cone Adjusting Spring
707A1	..	1	Fan Hub Bearing Cone Adjusting Spring Retainer
G-31304	..	1	Fan Hub Bearing Cone Clamp Nut— $\frac{1}{2}$ "—20 SAE Thd.— $\frac{3}{4}$ " Hex. x $\frac{1}{16}$ " High—Slotted
G-36016	..	1	Fan Hub Bearing Cone Clamp Nut Lockwasher— $\frac{1}{2}$ " SAE—Special Light
G-36304	..	1	Fan Hub Bearing Cone Clamp Nut Cotter Pin— $\frac{1}{16}$ " x $\frac{3}{4}$ " Long
13005A1	..	1	Fan Hub Felt
707B2	..	1	Fan Hub Felt Retainer
13049B28	..	1	Fan Hub Felt Retainer Washer
703A1	..	1	Fan Spindle
13049C29	..	1	Fan Spindle Clamp Washer
13049D30	..	1	Fan Spindle Clamp Washer
G-31108	..	1	Fan Spindle Nut— $\frac{3}{4}$ "—16 SAE Thd.— $1\frac{1}{16}$ " Hex. x $\frac{1}{2}$ " High—Plain
G-36020	..	1	Fan Spindle Nut Lockwasher— $\frac{3}{4}$ " SAE—Special Light
			END OF PARTS IN ASSEMBLY NO. 700A1—A1
704A1	1	..	Fan Bracket—Bolted to Engine
G-26915-L	2	..	Fan Bracket Set Screw— $\frac{1}{2}$ "—13 USS Thd. x $2\frac{3}{4}$ " Long—Flat Point—Full Head
G-30504	2	..	Fan Bracket Set Screw Nut— $\frac{1}{2}$ "—13 USS Thd.— $\frac{7}{8}$ " Hex. x $\frac{1}{2}$ " High—Plain
G-14416	2	..	Fan Bracket and Engine Cap Screw— $\frac{1}{2}$ "—20 SAE Thd. x $1\frac{5}{8}$ " Long x $\frac{3}{4}$ " Hex. x $\frac{3}{8}$ " High—Drilled End
G-31204	2	..	Fan Bracket and Engine Cap Screw Castle Nut— $\frac{1}{2}$ "—20 SAE Thd.— $\frac{3}{4}$ " Hex. x $\frac{1}{16}$ " High
G-36317	2	..	Fan Bracket and Engine Cap Screw Castle Nut Cotter Pin— $\frac{1}{2}$ " x 1" Long
13035A1	2	..	Fan Belt

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

FENDER—Front

PART No.	No. per Truck	No. per Assy.	NAME OF PART
6500B2— A1	1	..	FENDER—Assembly Front Complete—Right Hand—
6500A1— A1	1	..	Fender Assembly Front Complete—Left Hand—
G-14203	2	..	Fender and Frame Cap Screw— $\frac{3}{8}$ "—24 SAE Thd. x $1\frac{1}{4}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{3}{4}$ " High—Drilled End
13049G7	2	..	Fender and Frame Cap Screw Washer
G-31202	2	..	Fender and Frame Cap Screw Castle Nut— $\frac{3}{8}$ "—24 SAE Thd. x $\frac{1}{8}$ " Hex. x $\frac{1}{4}$ " High
G-36317	2	..	Fender and Frame Cap Screw Castle Nut Cotter Pin— $\frac{3}{4}$ " x 1" Long
G-11605	6	..	Fender Irons Front to Frame Cap Screw— $\frac{3}{8}$ "—24 SAE Thd. x $1\frac{1}{8}$ " Long x $\frac{1}{8}$ " Hex x $\frac{1}{2}$ " High
G-35914	6	..	Fender Irons Front to Frame Cap Screw Lockwasher— $\frac{3}{8}$ "—SAE Standard
G-14212	6	..	Fender Irons Rear to Frame Cap Screw— $\frac{3}{8}$ "—24 SAE Thd. x $1\frac{1}{4}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{1}{2}$ " High—Drilled End
G-31202	6	..	Fender Irons Rear to Frame Cap Screw Castle Nut— $\frac{3}{8}$ "—24 SAE Thd. x $\frac{1}{8}$ " Hex. x $\frac{1}{4}$ " High
G-36317	6	..	Fender Irons Rear to Frame Cap Screw Castle Nut Cotter Pin— $\frac{3}{4}$ " x 1" Long
G-14209	4	..	Fender Support to Frame Cap Screw— $\frac{3}{8}$ "—24 SAE Thd. x $1\frac{1}{8}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{1}{2}$ " High—Drilled End
G-31202	4	..	Fender Support to Frame Cap Screw Castle Nut— $\frac{3}{8}$ "—24 SAE Thd. x $\frac{1}{8}$ " Hex. x $\frac{1}{4}$ " High
G-36317	4	..	Fender Support to Frame Cap Screw Castle Nut Cotter Pin— $\frac{3}{4}$ " x 1" Long
13018A1	2	..	Fender Mud Flap—Leather
13036A1	2	..	Fender Mud Flap Retainer
G-11403	8	..	Fender Mud Flap Retainer Cap Screw— $\frac{1}{4}$ "—28 SAE Thd. x $\frac{1}{4}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{1}{8}$ " High
G-36256	8	..	Fender Mud Flap Retainer Washer— $\frac{3}{4}$ " I. D. x $\frac{5}{8}$ " O. D. x $\frac{1}{8}$ " Thick
G-35912	8	..	Fender Mud Flap Retainer Lockwasher— $\frac{1}{4}$ " SAE Standard
G-31100	8	..	Fender Mud Flap Retainer Nut— $\frac{1}{4}$ "—28 SAE Thd. x $\frac{1}{8}$ " Hex. x $\frac{3}{4}$ " High

FRAME AND PARTS—For 144" Wheel Base Only (See Pages 48-A and 49-A for Frame and Parts For 131" Wheel Base)

PART No.	No. per Truck	No. per Assy.	NAME OF PART
7000A1— A1	1	..	FRAME AND PARTS—Complete Assembly—
			Consisting of—53—Succeeding Items—
7000A1—SA1	1	..	Frame Assembly—
			CONSISTING OF—26—SUCCEEDING ITEMS—
7001B2	..	1	Frame Side Rail—Right Hand
7001A1	..	1	Frame Side Rail—Left Hand
7002A1	..	2	Frame Side Rail Reinforcement
G-38162-B	..	6	Frame Side Rail Reinforcement Rivet— $\frac{1}{4}$ " Dia. x 1" Long—Countersunk Head—Iron
7003B2	..	1	Frame Front Spring Hanger—Front—Right Hand
7003A1	..	1	Frame Front Spring Hanger—Front—Left Hand
G-38527-A	..	2	Frame Front Spring Hanger Rivet— $\frac{3}{8}$ " Dia. x $3\frac{1}{2}$ " Long—Round Head—Iron
G-38512-A	..	4	Frame Front Spring Hanger Rivet— $\frac{3}{8}$ " Dia. x $1\frac{3}{8}$ " Long—Round Head—Iron
7004A1	..	1	Frame Cross Bar—Front
G-38511-A	..	6	Frame Cross Bar and Side Rail Rivet— $\frac{3}{8}$ " Dia. x $1\frac{1}{4}$ " Long—Round Head—Iron
7005A1	..	1	Frame Cross Member—Front Center
G-38511-A	..	12	Frame Cross Member and Side Rail Rivet— $\frac{3}{8}$ " Dia. x $1\frac{1}{4}$ " Long—Round Head—Iron
7006A1	..	1	Frame Cross Member Filler
G-38511-A	..	4	Frame Cross Member Filler Rivet— $\frac{3}{8}$ " Dia. x $1\frac{1}{4}$ " Long—Round Head—Iron
7005B2	..	1	Frame Cross Member—Rear Center
G-38511-A	..	6	Frame Cross Member to Side Rail Rivet— $\frac{3}{8}$ " Dia. x $1\frac{1}{4}$ " Long—Round Head—Iron
7007B2	..	2	Frame Cross Member Brace—Rear—Right Hand
7007A1	..	2	Frame Cross Member Brace—Rear—Left Hand
G-38511-A	..	12	Frame Cross Member Brace Rivet— $\frac{3}{8}$ " Dia. x $1\frac{1}{4}$ " Long—Round Head—Iron
G-38605-A	..	4	Frame Cross Member Brace and Side Rail Rivet— $\frac{1}{2}$ " Dia. x $1\frac{3}{8}$ " Long—Round Head—Iron
7005C3	..	1	Frame Cross Member—Rear
7008B2	..	2	Frame Cross Member Gusset Plate—Rear—Right Hand
7008A1	..	2	Frame Cross Member Gusset Plate—Rear—Left Hand
G-38511-A	..	8	Frame Cross Member Gusset Plate Rivet— $\frac{3}{8}$ " Dia. x $1\frac{1}{4}$ " Long—Round Head—Iron
G-38511-A	..	8	Frame Cross Member Gusset Plate and Side Rail Rivet— $\frac{3}{8}$ " Dia. x $1\frac{1}{4}$ " Long—Round Head—Iron
G-38512-A	..	4	Frame Cross Member Gusset Plate and Side Rail Rivet— $\frac{3}{8}$ " Dia. x $1\frac{3}{8}$ " Long—Round Head—Iron
END OF PARTS IN ASSEMBLY No. 7000A1—SA1			
7009A1	2	..	Frame Cross Tube
7004B2	2	..	Frame Cross Bar
13049W49	4	..	Frame Cross Bar Plain Washer
G-31204	4	..	Frame Cross Bar Castle Nut— $\frac{1}{2}$ "—20 SAE Thd.— $\frac{3}{4}$ " Hex. x $\frac{1}{8}$ " High
G-36317	4	..	Frame Cross Bar Castle Nut Cotter Pin— $\frac{3}{16}$ " x 1" Long
7010A1	2	..	Radiator Support Bracket
G-38513-A	6	..	Radiator Support Bracket and Frame Rivet— $\frac{3}{8}$ " Dia. x $1\frac{1}{2}$ " Long—Round Head—Iron
7010B2	1	..	Engine Support Bracket—Rear—Right Hand
7010C3	1	..	Engine Support Bracket—Rear—Left Hand
G-38513-A	8	..	Engine Support Rivet— $\frac{3}{8}$ " Dia. x $1\frac{1}{2}$ " Long—Round Head—Iron

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

FRAME AND PARTS—For 144" Wheel Base Only—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
7010E5—SA1	1	..	Steering Gear Bracket, Cap, Bushing and Parts— CONSISTING OF—6—SUCCEEDING ITEMS—
7010E5	..	1	Steering Gear Bracket—On Left Hand Side—For Left Hand Steer
7011A1	..	1	Steering Gear Bracket Cap
13023Q69	..	4	Steering Gear Bracket and Cap Cap Screw
G-35914	..	4	Steering Gear Bracket and Cap Cap Screw Lockwasher— $\frac{3}{8}$ "—SAE—Standard
13134D4	..	1	Steering Gear Bracket and Cap Cap Screw Lock Wire— $\frac{1}{8}$ " Dia. x 16" Long
7012A1	..	1	Steering Gear Bracket Bushing
END OF PARTS IN ASSEMBLY NO. 7010E5—SA1			
G-38513-A	4	..	Steering Gear Bracket and Frame Rivet— $\frac{3}{8}$ " Dia. x $1\frac{1}{2}$ " Long—Round Head—Iron
7010D4—SA1	1	..	Front Spring Bracket—Rear Right Hand and Bushing Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
7010D4	..	1	Front Spring Bracket—Rear—Right Hand
7012A1	..	1	Front Spring Bracket Bushing
END OF PARTS IN ASSEMBLY NO. 7010D4—SA1			
G-38513-A	3	..	Front Spring Bracket (Rear) Rivet— $\frac{3}{8}$ " Dia. x $1\frac{1}{2}$ " Long—Round Head—Iron
7010F6	2	..	Rear Spring Bracket—Front
G-38607-A	10	..	Rear Spring Bracket and Frame Rivet— $\frac{1}{2}$ " Dia. x $1\frac{5}{8}$ " Long—Round Head—Iron
7010G7	2	..	Rear Spring Bracket—Rear
G-38513-A	10	..	Rear Spring Bracket and Frame Rivet— $\frac{3}{8}$ " Dia. x $1\frac{1}{2}$ " Long—Round Head—Iron
END OF PARTS IN ASSEMBLY NO. 7000A1—A1			
13043A1	2	..	Step—Bolted to Frame
G-14212	7	..	Step and Frame Cap Screw— $\frac{3}{8}$ " Dia.—24 SAE Thd. x $1\frac{1}{4}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{3}{4}$ " High —Drilled End
G-14213	1	..	Step and Frame Cap Screw— $\frac{3}{8}$ " Dia.—24 SAE Thd. x $1\frac{1}{4}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{3}{4}$ " High —Drilled End
G-31202	8	..	Step and Frame Cap Screw Castle Nut— $\frac{3}{8}$ "—24 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{3}{4}$ " High
G-36317	8	..	Step and Frame Cap Screw Castle Nut Cotter Pin— $\frac{3}{4}$ " x 1" Long
13014C3	1	..	Name Plate—Screwed to Frame—(Detroit Production Only)
13014D4	1	..	Name Plate—Screwed to Frame—(Walkerville Production Only)
G-26330	2	..	Name Plate and Frame Screw— $\frac{1}{4}$ " Dia.—18 USS Thd. x 1" Long—Machine Screw— Flat Head
G-30701	2	..	Name Plate and Frame Screw Nut— $\frac{1}{4}$ "—18 USS Thd. x $\frac{1}{4}$ " Hex. x $\frac{1}{8}$ " High
G-35913	2	..	Name Plate and Frame Screw Nut Lockwasher— $\frac{1}{4}$ "—SAE Standard

FUEL TANK AND FUEL LINES

PART No.	No per Truck	No. per Assy.	NAME OF PART
7801C3—SA1	1	..	FUEL LINE TUBE (Titeflex) and Parts Assembly—Vacuum Tank to Carburetor— Consisting of—3—Succeeding Items—
7801C3	..	1	Fuel Line Tube—Titeflex—Not Sold Separately
13060A1	..	1	Fuel Line Tube Union—Not Sold Separately
13061B2	..	1	Fuel Line Tube Male Coupling—Not Sold Separately
			END OF PARTS IN ASSEMBLY No. 7801C3—SA1
13057B2	1	..	Fuel Line Stop Cock—In Bottom of Vacuum Tank
13031C3—SA1	1	..	Fuel Line Tube and Parts Assembly—Vacuum Tank to Fuel Tank— CONSISTING OF—3—SUCCEEDING ITEMS—
13031C3	..	1	Fuel Line Tubing— $\frac{1}{8}$ " O. D. Copper x 84" Long
13059A1	..	1	Fuel Line Tubing Union Nut—Long
13059B2	..	1	Fuel Line Tubing Union Nut—Short
			END OF PARTS IN ASSEMBLY No. 13031C3—SA1
13082A1	1	..	Fuel Line Tube Elbow—At Vacuum Tank—For $\frac{1}{8}$ " O. D. Tube— $\frac{1}{4}$ " Pipe Thd.— $\frac{1}{2}$ " 20 SAE—Thd.
13133A1	6	..	Fuel Line Tube Clip
G-32904	6	..	Fuel Line Tube Clip Wood Screw—No. 10— $\frac{3}{4}$ " Long—Round Head
7801D4—SA1	1	..	Fuel Suction Line Tube (Titeflex) and Parts Assembly—Vacuum Tank to Engine Manifold— CONSISTING OF—4—SUCCEEDING ITEMS—
7801D4	..	1	Fuel Suction Line Tube—Titeflex—Not Sold Separately
13060B2	..	1	Fuel Suction Line Tube Gasoline Union—Not Sold Separately
13061A1	..	1	Fuel Suction Line Tube Male Coupling—Not Sold Separately
13058A1	..	1	Fuel Suction Line Tube Adapter—Sold Separately If Desired
			END OF PARTS IN ASSEMBLY No. 7801D4—SA1
13133A1	1	..	Fuel Suction Line Clip—For $\frac{1}{4}$ " Dia. Tube
G-32904	1	..	Fuel Suction Line Clip Wood Screw—No. 10— $\frac{3}{4}$ " Long—Round Head
7800A1	1	..	Fuel Tank
7509C3	1	..	Fuel Tank Filler Cap
7802A1	2	..	Fuel Tank Clamping Strip—Assembly
13049G7	4	..	Fuel Tank Clamping Strip Plain Washer
G-31102	4	..	Fuel Tank Clamping Strip Nut— $\frac{3}{8}$ "—24 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{1}{4}$ " High—Plain
G-35914	4	..	Fuel Tank Clamping Strip Nut Lockwasher— $\frac{3}{8}$ " SAE Std.

HOOD—Filler Plates—Radiator Apron and Mud Pans

PART No.	No. per Truck	No. per Assy.	NAME OF PART
6525A1—A1	1	..	HOOD—Complete Assembly— Consisting of—25—Succeeding Items—
6526B2	..	1	Hood Top Plate—Right Hand
6526A1	..	1	Hood Top Plate—Left Hand
13037A1	..	1	Hood Top Plate Hinge Rod
6528A1	..	1	Hood Top Plate Hinge Rod Adjustable End—Rear
13013L12	..	1	Hood Top Plate Hinge Rod Adjustable End Stud—Sherardized
13038A1	..	1	Hood Top Plate Hinge Rod Adjustable End Acorn Nut—Sherardized
13049G7	..	1	Hood Top Plate Hinge Rod Adjustable End Washer
G-35914	..	1	Hood Top Plate Hinge Rod Adjustable End Lock Washer— $\frac{3}{8}$ " SAE Standard
G-31102	..	1	Hood Top Plate Hinge Rod Adjustable End Plain Nut— $\frac{3}{8}$ "—24 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{11}{16}$ " High
G-31202	..	1	Hood Top Plate Hinge Rod Castle Nut—Front End— $\frac{3}{8}$ "—24 SAE Thd. $\frac{1}{8}$ " Hex. x $\frac{11}{16}$ " High
G-36317	..	1	Hood Top Plate Hinge Rod Cotter Pin— $\frac{3}{32}$ " x 1" Long
13014F6	..	2	Hood Top Plate Name Plate
6527A1	..	2	Hood Top Plate Name Plate Reinforcement
G-26330	..	4	Hood Top Plate Name Plate Screw— $\frac{1}{8}$ "—18 USS Thd. x 1" Long Machine Screw—Flat Countersunk Head
G-30701	..	4	Hood Top Plate Name Plate Screw Nut— $\frac{1}{8}$ "—18 USS Thd.— $\frac{11}{16}$ " Hex. x $\frac{1}{8}$ " High
G-35913	..	4	Hood Top Plate Name Plate Screw Nut Lockwasher— $\frac{1}{8}$ " SAE—Standard
6526D4	..	1	Hood Side Plate—Right Hand
6526C3	..	1	Hood Side Plate—Left Hand
13037B2	..	2	Hood Side Plate Hinge Rod
13039A1	..	4	Hood Side Plate Hook—For Hood Latch
13049Y51	..	8	Hood Side Plate Hook Washer
G-37907-D	..	8	Hood Side Plate Hook Rivet— $\frac{1}{8}$ " Dia. x $\frac{1}{8}$ " Long—Oval Head—Iron
13040A1	..	2	Hood Handle
13049Y51	..	4	Hood Handle Washer
G-37907-D	..	4	Hood Handle Rivet— $\frac{1}{8}$ " Dia. x $\frac{1}{8}$ " Long—Oval Head—Iron
END OF PARTS IN ASSEMBLY NO. 6525A1—A1			
6526F6—SA1	1	..	Hood Filler Plate and Parts Assembly—Right Hand— CONSISTING OF—5—SUCCEEDING ITEMS—
6526F6	..	1	Hood Filler Plate—Right Hand
13025B2	..	1	Hood Filler Plate Antisqueak— $\frac{1}{8}$ " x 1" x $29\frac{1}{4}$ " Long
13042H8	..	7	Hood Filler Plate Antisqueak Rivet
13041A1	..	2	Hood Latch
13020F6	..	2	Hood Latch Pin
END OF PARTS IN ASSEMBLY NO. 6526F6—SA1			
6526E5—SA1	1	..	Hood Filler Plate and Parts Assembly—Left Hand— CONSISTING OF—5—SUCCEEDING ITEMS—
6526E5	..	1	Hood Filler Plate—Left Hand
13025B2	..	1	Hood Filler Plate Antisqueak— $\frac{1}{8}$ " x 1" x $29\frac{1}{4}$ " Long
13042H8	..	7	Hood Filler Plate Antisqueak Rivet
13041A1	..	2	Hood Latch
13020F6	..	2	Hood Latch Pin
END OF PARTS IN ASSEMBLY NO. 6526E5—SA1			

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

HOOD—Filler Plates—Radiator Apron and Mud Pans—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
G-11508	8	..	Hood Filler Plate and Frame Cap Screw— $\frac{5}{8}$ "—24 SAE Thd. x $\frac{1}{4}$ " Long x $\frac{1}{2}$ " Hex. x $\frac{1}{4}$ " High
13049X50	8	..	Hood Filler Plate and Frame Cap Screw Washer
G-31101	8	..	Hood Filler Plate and Frame Cap Screw Nut— $\frac{5}{8}$ "—24 SAE Thd.— $\frac{1}{2}$ " Hex. x $\frac{1}{4}$ " High
G-35913	8	..	Hood Filler Plate and Frame Cap Screw Nut Lockwasher— $\frac{5}{8}$ " SAE Standard
G-11505	2	..	Hood Filler Plate and Drop Cross Member Cap Screw— $\frac{5}{8}$ "—24 SAE Thd. x 1" Long x $\frac{1}{2}$ " Hex. x $\frac{1}{4}$ " High
13049E57	2	..	Hood Filler Plate and Drop Cross Member Cap Screw Washer
13049X50	2	..	Hood Filler Plate and Drop Cross Member Cap Screw Washer
G-31101	2	..	Hood Filler Plate and Drop Cross Member Cap Screw Nut— $\frac{5}{8}$ "—24 SAE Thd.— $\frac{1}{2}$ " Hex. x $\frac{1}{4}$ " High
G-35913	2	..	Hood Filler Plate and Drop Cross Member Cap Screw Lockwasher— $\frac{5}{8}$ " SAE Standard
6600A1	1	..	Apron—For Radiator
G-11505	4	..	Aprong for Radiator and Frame Cap Screw— $\frac{5}{8}$ "—24 SAE Thd. x 1" Long x $\frac{1}{2}$ " Hex. x $\frac{1}{4}$ " High
G-31101	4	..	Apron for Radiator and Frame Cap Screw Nut— $\frac{5}{8}$ "—24 SAE Thd.— $\frac{1}{2}$ " Hex. x $\frac{1}{4}$ " High—Plain
13049X50	4	..	Apron for Radiator and Frame Cap Screw Washer
13049F58	4	..	Apron for Radiator and Frame Cap Screw Washer— $\frac{1}{2}$ " I. D. x $\frac{7}{8}$ " O. D. x $\frac{1}{8}$ " Thick—Fibre
G-35913	4	..	Apron for Radiator and Frame Cap Screw Lockwasher— $\frac{5}{8}$ " SAE Standard
G-14002	4	..	Apron for Radiator and Filler Plate Cap Screw— $\frac{1}{4}$ "—28 SAE Thd. x $\frac{1}{2}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{1}{8}$ " High
G-31100	4	..	Apron for Radiator and Filler Plate Cap Screw Nut— $\frac{1}{4}$ "—28 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{3}{2}$ " High
13049E57	2	..	Apron for Radiator and Filler Plate Cap Screw Washer
13049X50	4	..	Apron for Radiator and Filler Plate Cap Screw Washer— $\frac{1}{2}$ " I. D. x $\frac{3}{4}$ " O. D. x $\frac{1}{8}$ " Thick—Steel
G-35913	4	..	Apron for Radiator and Filler Plate Cap Screw Lockwasher— $\frac{5}{8}$ "—SAE—Standard
6575A1	1	..	Mud Pan—Front
G-11408	5	..	Mud Pan—Front—To Frame Cap Screw— $\frac{1}{4}$ "—28 SAE Thd. x $\frac{3}{4}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{1}{8}$ " High
G-31100	5	..	Mud Pan—Front—To Frame Cap Screw Nut— $\frac{1}{4}$ "—28 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{3}{2}$ " High
G-36256	4	..	Mud Pan—Front—To Frame Cap Screw Washer— $\frac{3}{2}$ " I. D. x $\frac{5}{8}$ " O. D. x $\frac{1}{8}$ " Thick
G-35912	5	..	Mud Pan—Front—To Frame Cap Screw Lockwasher— $\frac{1}{4}$ " SAE Standard
6575B2	1	..	Mud Pan—Right Hand
G-11408	2	..	Mud Pan—Right Hand—To Frame Cap Screw— $\frac{1}{4}$ "—28 SAE Thd. x $\frac{3}{4}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{1}{8}$ " High
G-31100	2	..	Mud Pan—Right Hand—To Frame Cap Screw Nut— $\frac{1}{4}$ "—28 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{3}{2}$ " High—Plain
G-36256	2	..	Mud Pan—Right Hand—To Frame Cap Screw Washer— $\frac{3}{2}$ " I. D. x $\frac{5}{8}$ " O. D. x $\frac{1}{8}$ " Thick—Steel
G-35912	2	..	Mud Pan—Right Hand—To Frame Cap Screw Lockwasher— $\frac{1}{4}$ " SAE Standard
G-11405	2	..	Mud Pan—Right Hand—To Engine Cap Screw— $\frac{1}{4}$ "—28 SAE Thd. x 1" Long x $\frac{1}{8}$ " Hex. x $\frac{1}{8}$ " High
G-31100	2	..	Mud Pan—Right Hand—To Engine Cap Screw Nut— $\frac{1}{4}$ "—28 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{3}{2}$ " High—Plain

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

HOOD—Filler Plates—Radiator Apron and Mud Pans—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
G-36256	2	..	Mud Pan—Right Hand—To Engine Cap Screw Washer— $\frac{3}{4}$ " I. D. x $\frac{5}{8}$ " O. D. x $\frac{1}{8}$ " Thick—Steel
G-35912	2	..	Mud Pan—Right Hand—To Engine Cap Screw Lockwasher— $\frac{1}{4}$ " SAE Standard
6575C3	1	..	Mud Pan—Left Hand
G-11403	2	..	Mud Pan—Left Hand—To Frame Cap Screw— $\frac{1}{4}$ "—28 SAE Thd. x $\frac{3}{4}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{1}{8}$ " High
G-31100	2	..	Mud Pan—Left Hand—To Frame Cap Screw Nut— $\frac{1}{4}$ "—28 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{1}{2}$ " High—Plain
G-36256	2	..	Mud Pan—Left Hand—To Frame Cap Screw Washer— $\frac{3}{4}$ " I. D. x $\frac{5}{8}$ " O. D. x $\frac{1}{8}$ " Thick—Steel
G-35912	2	..	Mud Pan—Left Hand—To Frame Cap Screw Lockwasher— $\frac{1}{4}$ " SAE Standard
G-11405	2	..	Mud Pan—Left Hand—To Engine Cap Screw— $\frac{1}{4}$ "—28 SAE Thd. x 1" Long x $\frac{1}{8}$ " Hex. x $\frac{1}{8}$ " High
G-31100	2	..	Mud Pan—Left Hand—To Engine Cap Screw Nut— $\frac{1}{4}$ "—28 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{1}{2}$ " High—Plain
G-36256	2	..	Mud Pan—Left Hand—To Engine Cap Screw Washer— $\frac{3}{4}$ " I. D. x $\frac{5}{8}$ " O. D. x $\frac{1}{8}$ " Thick—Steel
G-35912	2	..	Mud Pan—Left Hand—To Engine Cap Screw Lockwasher— $\frac{1}{4}$ " SAE Standard

MUFFLER AND PARTS

PART No.	No. per Truck	No. per Assy.	NAME OF PART
900A1— A1	1		MUFFLER—Complete Assembly— Consisting of—6—Succeeding Items
901A1	1		Muffler Inlet—For 2" Exhaust Tube
902A1	1		Muffler Outlet
G-28906	1		Muffler Bolt— $\frac{1}{8}$ "—18 USS Thd. x $2\frac{1}{4}$ " Long—Carriage
G-30801	1		Muffler Bolt Nut—(3 of These Furnished With Above Bolts) $\frac{1}{8}$ "—18 USS Thd. Square
903A1	1		Muffler Tail Pipe
G-37734-A	2		Muffler Tail Pipe and Outlet Rivet— $\frac{1}{8}$ " Dia. x $\frac{3}{8}$ " Long—Round Head—Iron
END OF PARTS IN ASSEMBLY NO. 900A1—A1			
904A1	1		Exhaust Tube—From Muffler to Exhaust Pipe on Engine
G-36394	1		Muffler and Exhaust Tube Cotter Pin— $\frac{1}{8}$ " Dia. x $3\frac{1}{4}$ " Long
G-14111	4		Muffler and Muffler Bracket Cap Screw— $\frac{1}{8}$ "—24 SAE Thd. x $1\frac{1}{8}$ " Long x $\frac{1}{2}$ " Hex. x $\frac{1}{4}$ " High—Drilled End
G-31201	4		Muffler and Muffler Bracket Cap Screw Nut— $\frac{1}{8}$ "—24 SAE Thd.— $\frac{1}{2}$ " Hex. x $\frac{1}{4}$ " High
G-36304	4		Muffler and Muffler Bracket Cap Screw Nut Cotter Pin— $\frac{1}{8}$ " x $\frac{3}{4}$ " Long
905A1	1		Muffler Bracket—Bolted to Frame
G-14211	3		Muffler Bracket and Frame Cap Screw— $\frac{3}{8}$ "—24 SAE Thd. x $1\frac{1}{8}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{3}{8}$ " High—Drilled End
G-31202	3		Muffler Bracket and Frame Cap Screw Castle Nut— $\frac{3}{8}$ "—24 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{1}{2}$ " High
G-36317	3		Muffler Bracket and Frame Cap Screw Castle Nut Cotter Pin— $\frac{3}{8}$ " Dia. x 1" Long

OIL GAUGE

PART No.	No. per Truck	No. per Assy.	NAME OF PART
11450A1— A1	1	..	OIL GAUGE—Complete Assembly—Silver Dial—Nickel Flange With 3 Screw Holes 50 Lb. Dial Reading $\frac{1}{8}$ " Male Pipe Connection
11451A1—SA1	1	..	Oil Gauge Flange and Glass Assembly—This Is the Only Part Sold Separately— Note—When Oil Gauge Is In Need of Repairs It Must Be Returned to the Manufacturer Where It Will Be Put in Condition at a Nominal Cost
13023F32	3	..	Oil Gauge and Instrument Panel Machine Screw
13038L12	3	..	Oil Gauge and Instrument Panel Machine Screw Nut
G-36051	3	..	Oil Gauge and Instrument Panel Machine Screw Nut Lockwasher—No. 4 SAE Special Heavy
13063A1	1	..	Oil Pressure Line Female Coupling— $\frac{1}{8}$ " Pipe Thread
13083A1	1	..	Oil Pressure Line Female Street Elbow— $\frac{1}{8}$ " Standard—At Engine Crank Case
7801E5—SA1	1	..	Oil Pressure Line Tube (Titeflex) Complete Assembly—Engine Crankcase to Oil Gauge— CONSISTING OF—4—SUCCEEDING ITEMS—
7801E5	..	1	Oil Pressure Tube—Titeflex—34 $\frac{1}{4}$ " Long—Not Sold Separately
13060B2	..	1	Oil Pressure Tube Union—Not Sold Sepatarely
13058A1	..	1	Oil Pressure Tube Union Adapter—Sold Separately If Desired
13060A1	..	1	Oil Pressure Tube Male Coupling—Not Sold Separately
END OF PARTS IN ASSEMBLY No. 7801E5—SA1			
13138A1	1	..	Oil Pressure Line and Dash Clip—For $\frac{1}{4}$ " Dia. Tube
G-32904	1	..	Oil Pressure Line and Dash Clip Wood Screw—No. 10— $\frac{3}{4}$ " Long—Round Head

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

**PROPELLOR SHAFT—Front—For 144" Wheel Base Only (See Pages 57-A and 58-A
for Propellor Shaft Used on 131" Wheel Base Job)**

PAWT No.	No. per Truck	No. per Assy.	NAME OF PART
2500A1— A1	1	..	PROPELLOR SHAFT—Complete Assembly—Front— Consisting of—21—Succeeding Items—
2502A1	1	..	Propellor Shaft Companion Flange—Transmission End
13023U99	6	..	Propellor Shaft Companion Flange to Flange Yoke Cap Screw—Special
G-36063	6	..	Propellor Shaft Companion Flange to Flange Yoke Cap Screw Lockwasher— $\frac{1}{4}$ "—SAE Spec. Heavy
13038R44	6	..	Propellor Shaft Companion Flange to Flange Yoke Cap Screw Nut
2501A1—SA1	1	..	Propellor Shaft Tubular Shaft (Permanent Fitting) Assembly— CONSISTING OF—16—SUCCEEDING ITEMS—
2501A1	..	1	Propellor Shaft Tubular Shaft Assembly
2503B2	..	1	Propellor Shaft Flange Yoke
2504A1	..	1	Propellor Shaft Journal
2505A1	..	4	Propellor Shaft Journal Bushing
2508A1	..	4	Propellor Shaft Journal Bushing Retainer Ring
2506A1	..	1	Propellor Shaft Inner Casing
2506B2	..	1	Propellor Shaft Outer Casing
13026C3	..	1	Propellor Shaft Outer Casing Packing
2509A1	..	1	Propellor Shaft Outer Casing Spring
2507A1—SA1	1	..	Propellor Shaft Lock Ring Assembly— CONSISTING OF—4—SUCCEEDING ITEMS—
2507A1	..	1	Propellor Shaft Lock Ring (2 Pieces)
13016S19	..	2	Propellor Shaft Lock Ring Bolt
13132G7	..	4	Propellor Shaft Lock Ring Bolt Lockwasher— $\frac{1}{4}$ " SAE Standard
13038S45	..	1	Propellor Shaft Lock Ring Bolt Nut
			END OF PARTS IN ASSEMBLY No. 2507A1—SA1
13038J10	..	1	Propellor Shaft Nut—Slotted
G-36332	..	1	Propellor Shaft Nut Cotter Pin— $\frac{1}{8}$ " x $1\frac{1}{4}$ " Long
			END OF PARTS IN ASSEMBLY No. 2501A1—SA1
			END OF PARTS IN ASSEMBLY No. 2500A1— A1
G-37300	1	..	Propellor Shaft Alemite Fitting— $\frac{1}{8}$ " Pipe Thread—Straight

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

PROPELLOR SHAFT—Rear—For 144" Wheel Base Only (See Pages 57-A and 58-A for Propellor Shaft Used on 131" Wheel Base Job)

PART No.	No. per Truck	No. per Assy.	NAME OF PART
2500B2— A1	1	..	PROPELLOR SHAFT—Assembly—Rear—
			Consisting of—41—Succeeding Items—
2502B2	1	..	Propellor Shaft Companion Flange—Special—Front End
13023T98	6	..	Propellor Shaft Companion Flange to Flange Yoke Cap Screw
G-36063	6	..	Propellor Shaft Companion Flange to Flange Yoke Cap Screw Lockwasher— $\frac{1}{8}$ " SAE—Special Heavy
13038R44	6	..	Propellor Shaft Companion Flange to Flange Yoke Cap Screw Nut
2503A1—SA1	1	..	Propellor Shaft Sleeve Yoke Assembly (Slip Fitting)—
			CONSISTING OF—17—SUCCEEDING ITEMS—
2503A1	..	1	Propellor Shaft Sleeve Yoke
2503B2	..	1	Propellor Shaft Flange Yoke
2510A1	..	1	Propellor Shaft Flange Yoke Dust Cap
13005D4	..	1	Propellor Shaft Flange Yoke Dust Felt
2511A1	..	1	Propellor Shaft Flange Yoke Dust Split Washer
2504A1	..	1	Propellor Shaft Journal
2505A1	..	4	Propellor Shaft Journal Bushing
2508A1	..	4	Propellor Shaft Journal Bushing Retainer Ring
2506A1	..	1	Propellor Shaft Inner Casing
2506B2	..	1	Propellor Shaft Outside Casing
13026C3	..	1	Propellor Shaft Outside Casing Packing
2509A1	..	1	Propellor Shaft Outside Casing Spring
2507A1—SA1	1	..	Propellor Shaft Lock Ring Assembly—
			CONSISTING OF—4—SUCCEEDING ITEMS—
2507A1	..	1	Propellor Shaft Lock Ring (2 Pieces)
13016S19	..	2	Propellor Shaft Lock Ring Bolt
13132G7	..	4	Propellor Shaft Lock Ring Bolt Lockwasher— $\frac{1}{8}$ " SAE Standard
13038S45	..	2	Propellor Shaft Lock Ring Bolt Nut
			END OF PARTS IN ASSEMBLY No. 2507A1—SA1
			END OF PARTS IN ASSEMBLY No. 2503A1—SA1
2502C3	1	..	Propellor Shaft Companion Flange—Rear End
13023T98	6	..	Propellor Shaft Companion Flange to Flange Yoke Cap Screw
G-36063	6	..	Propellor Shaft Companion Flange to Flange Yoke Cap Screw Lockwasher— $\frac{1}{8}$ " SAE—Special Heavy
13038R44	6	..	Propellor Shaft Companion Flange to Flange Yoke Cap Screw Nut
2501B2—SA1	1	..	Propellor Shaft Tubular Shaft (Permanent Fitting) Assembly—
			CONSISTING OF—14—SUCCEEDING ITEMS—
2501B2	..	1	Propellor Shaft Tubular Shaft Assembly
2503B2	..	1	Propellor Shaft Flange Yoke
2504A1	..	1	Propellor Shaft Journal
2505A1	..	4	Propellor Shaft Journal Bushing
2508A1	..	4	Propellor Shaft Journal Bushing Retainer Ring
2506A1	..	1	Propellor Shaft Inner Casing
2506B2	..	1	Propellor Shaft Outer Casing
13026C3	..	1	Propellor Shaft Outer Casing Packing

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

PROPELLOR SHAFT—Rear—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
2509A1	..	1	Propellor Shaft Outer Casing Spring
2507A1—SA1	1	..	Propellor Shaft Lock Ring Assembly— CONSISTING OF—4—SUCCEEDING ITEMS—
2507A1	..	1	Propellor Shaft Lock Ring (2 Pieces)
13016S19	..	2	Propellor Shaft Lock Ring Bolt
13132G7	..	4	Propellor Shaft Lock Ring Bolt Lockwasher— $\frac{1}{8}$ " SAE Standard
13038S45	..	2	Propellor Shaft Lock Ring Bolt Nut
			END OF PARTS IN ASSEMBLY No. 2507A1—SA1
			END OF PARTS IN ASSEMBLY No. 2501B2—SA1
			END OF PARTS IN ASSEMBLY No. 2500B2—A1
G-37300	2	..	Propellor Shaft Alemite Fitting— $\frac{1}{8}$ " Pipe Thd.—Straight

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

PROPELLOR SHAFT AMIDSHIP BEARING ASSEMBLY AND PARTS

Used on 144" Wheel Base Only

PART No.	No. per Truck	No. per Assy.	NAME OF PART
2515A1	1	..	Amidship Bearing Bracket—Bolted to Frame
G-11616	4	..	Amidship Bearing Bracket and Frame Cap Screw— $\frac{3}{8}$ "—24 SAE Thd. x $2\frac{3}{4}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{1}{2}$ " High
G-31102	4	..	Amidship Bearing Bracket and Frame Cap Screw Nut— $\frac{3}{8}$ "—24 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{1}{2}$ " High—Plain
G-35914	4	..	Amidship Bearing Bracket and Frame Cap Screw Nut Lockwasher— $\frac{3}{8}$ " SAE Std.
2512A1— A1	1	..	Amidship Bearing Complete Assembly— Consisting of—11—Succeeding Items—
2513A1	..	1	Amidship Bearing Housing
13002B2	..	1	Amidship Bearing—Self Aligning Ball—Double Row
2514A1—SA1	2	..	Amidship Bearing Oil Seal Retainer and Parts Assembly— CONSISTING OF—5—SUCCEEDING ITEMS—
2514A1	..	1	Amidship Bearing Oil Seal Retainer
13007B2	..	1	Amidship Bearing Oil Seal Retainer Disc
13004A1	..	1	Amidship Bearing Oil Seal Retainer Leather
2509B2	..	1	Amidship Bearing Oil Seal Retainer Spring
G-37684-A	..	8	Amidship Bearing Oil Seal Retainer Rivet— $\frac{1}{16}$ " Dia. x $\frac{3}{4}$ " Long—Round Head—Iron
END OF PARTS IN ASSEMBLY NO. 2514A1—SA1			
G-11417	6	..	Amidship Bearing Oil Seal Retainer and Parts Assembly and Housing Cap Screw— $\frac{1}{4}$ "—28 SAE Thd. x $2\frac{3}{4}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{1}{4}$ " High
G-31100	6	..	Amidship Bearing Oil Seal Retainer and Parts Assembly and Housing Cap Screw Nut— $\frac{1}{4}$ "—28 SAE Thd. $\frac{1}{8}$ " Hex. $\frac{1}{2}$ " High—Plain
G-35912	6	..	Amidship Bearing Oil Seal Retainer and Parts Assembly and Housing Cap Screw Nut Lockwasher— $\frac{1}{4}$ " SAE Std.
END OF PARTS IN ASSEMBLY NO. 2512A1—A1			
13028S97	2	..	Amidship Bearing Bracket and Housing Cap Screw
G-11606	2	..	Amidship Bearing Bracket and Housing Cap Screw— $\frac{3}{8}$ "—24 SAE Thd. x $1\frac{1}{4}$ " Long x $\frac{1}{8}$ " Hex. $\frac{1}{2}$ " High
G-31102	4	..	Amidship Bearing Bracket and Housing Cap Screw Nut— $\frac{3}{8}$ "—24 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{1}{2}$ " High—Plain
G-35914	4	..	Amidship Bearing Bracket and Housing Cap Screw Nut Lockwasher— $\frac{3}{8}$ " SAE Std.
G-37800	1	..	Amidship Bearing Alemite Fitting— $\frac{1}{8}$ " Pipe Thd.—Straight

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

RADIATOR

PART No.	No. per Truck	No. per Assy.	NAME OF PART
6000A1—A1	1	..	RADIATOR—Complete Assembly— Consisting of—32—Succeeding Items—
6001A1	1	..	Radiator Core
6002A1	1	..	Radiator Tank—Upper
6011A1	1	..	Radiator Tank Bushing—Sherardized
13031A1—SA1	1	..	Radiator Overflow Pipe and Union Elbow Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
13031A1	..	1	Radiator Overflow Pipe—Inner— $\frac{1}{4}$ " O. D. x $4\frac{1}{4}$ " Long—Copper Tubing No. 24 Gauge
13080A1	..	1	Radiator Overflow Pipe Union Elbow
END OF PARTS IN ASSEMBLY No. 13031A1—SA1			
6002B2	1	..	Radiator Tank—Lower
6003A1	1	..	Radiator Side Member—Right Hand
6003B2	1	..	Radiator Side Member—Left Hand
6004A1	2	..	Radiator End Gasket—Upper— $\frac{1}{8}$ " x $1\frac{1}{2}$ " x $4\frac{3}{4}$ "—Cork
6004B2	2	..	Radiator End Gasket—Lower— $\frac{1}{8}$ " x $1\frac{3}{4}$ " x $4\frac{3}{4}$ "—Cork
6004C3	2	..	Radiator Top Gasket— $\frac{1}{8}$ " x $\frac{3}{4}$ " x $21\frac{1}{2}$ "—Cork
6004D4	2	..	Radiator Bottom Gasket— $\frac{1}{8}$ " x $\frac{3}{4}$ " x 22"—Cork
13016E5	2	..	Radiator Tie Bolt—Sherardized
13038D30	2	..	Radiator Tie Bolt Nut
13132E5	2	..	Radiator Tie Bolt Nut Lockwasher
6010A1	2	..	Radiator Clamping Strip—Outside—Polished
6010B2	2	..	Radiator Clamping Strip—Inside
13013G7	24	..	Radiator Clamping Strip Stud—Sherardized
13038E31	12	..	Radiator Clamping Strip Stud Nut
13038F32	12	..	Radiator Clamping Strip Stud Nut
13022B2	8	..	Radiator Dowel—Screwed Into Upper and Lower Tanks—For Holding Side Members
13013H8	2	..	Radiator Support Stud—To Frame—Sherardized
13038G33	2	..	Radiator Support Stud Nut
13031B2	1	..	Radiator Overflow Pipe—Outer
13133B2	2	..	Radiator Overflow Pipe Clip
G-25104	2	..	Radiator Overflow Pipe Clip Machine Screw—No. 10—24 Thd. $\frac{3}{8}$ " Long—Round Head
G-32107	2	..	Radiator Overflow Pipe Clip Machine Screw Nut—No. 10—24 Thd— $\frac{3}{8}$ " Hex. $\frac{3}{4}$ " High
13070A1	1	..	Radiator Overflow Pipe Sleeve—Compression— $\frac{3}{8}$ " O. D. Tube
13076A1	1	..	Radiator Overflow Pipe Coupling Nut (Used on Elbow 13080A1)— $\frac{3}{8}$ " O. D. Tube
13025A1	1	..	Radiator Ledge—Antisqueak— $\frac{1}{8}$ " x $\frac{5}{8}$ " x 58" Long
13042H8	18	..	Radiator Ledge—Antisqueak Rivet— $\frac{1}{8}$ " Dia. x $\frac{1}{8}$ " Long—Split—Japanned Iron
END OF PARTS IN ASSEMBLY No. 6000A1—A1			
13136A1	2	..	Radiator Support Stud Nut Cotter Pin— $\frac{1}{8}$ " x 1" Long—Sherardized
13021A1	2	..	Radiator Rubber Cushion—Upper
13021B2	2	..	Radiator Rubber Cushion—Lower
13049Z52	4	..	Radiator Washer
6005A1	1	..	Radiator Cap
6004E5	1	..	Radiator Cap Gasket—Rubber
6006A1	1	..	Radiator Handle (Stud 13013J10 Cast In)
13049A53	1	..	Radiator Handle Washer—Fibre
6007A1	1	..	Radiator Handle Nut—Special
13136B2	1	..	Radiator Handle Nut Cotter Pin

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

RADIATOR—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
6008A1	1	..	Radiator Inlet
6004F6	1	..	Radiator Inlet Gasket
G-10205	2	..	Radiator Inlet Cap Screw— $\frac{3}{8}$ "—16 USS Thd. x $1\frac{1}{8}$ " Long x $\frac{3}{16}$ " Hex. x $\frac{3}{8}$ " High
G-35914	2	..	Radiator Inlet Cap Screw Lock Washer— $\frac{3}{8}$ " SAE Std.
13029B2	1	..	Radiator Inlet Hose—to Engine Connection
13030A1	2	..	Radiator Inlet Hose Clamp—Complete
6009A1	1	..	Radiator Outlet
6004G7	1	..	Radiator Outlet Gasket
G-10205	2	..	Radiator Outlet Cap Screw— $\frac{3}{8}$ "—16 USS Thd. x $1\frac{1}{8}$ " Long x $\frac{3}{16}$ " Hex. x $\frac{3}{8}$ " High
G-35914	2	..	Radiator Outlet Cap Screw Lockwasher— $\frac{3}{8}$ "—SAE Std.
13029C3	1	..	Radiator Outlet Hose—Radiator to Bracket on Engine
13030B2	2	..	Radiator Outlet Hose Clamp—Complete
13057A1	1	..	Radiator Outlet Drain Cock
13029D4	1	..	Radiator Outlet Hose—Bracket on Engine to Water Pump
13030B2	2	..	Radiator Outlet Hose Clamp—Complete

SPRING AND PARTS—Front

PART No.	No. per Truck	No. per Assy.	NAME OF PART
3429A1— A1	1	..	FRONT SPRING—Assembly— Consisting of—18—Succeeding Items—
3430A1—SA1	1	..	Front Spring Leaf and Bushing Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
3430A1	..	1	Front Spring—Leaf No. 1—No. 2 Gauge x $2\frac{1}{4}$ " x $45\frac{5}{8}$ " Long
3405E5	..	2	Front Spring Bushing
END OF PARTS IN ASSEMBLY NO. 3430A1—SA1			
3430B2	1	..	Front Spring—Leaf No. 2—No. 2 Gauge x $2\frac{1}{4}$ " x $37\frac{1}{2}$ " Long
3430C3	1	..	Front Spring—Leaf No. 3—No. 2 Gauge x $2\frac{1}{4}$ " x $33\frac{1}{2}$ " Long
3430D4	1	..	Front Spring—Leaf No. 4—No. 2 Gauge x $2\frac{1}{4}$ " x $29\frac{1}{4}$ " Long
3430E5	1	..	Front Spring—Leaf No. 5—No. 2 Gauge x $2\frac{1}{4}$ " x $25\frac{1}{4}$ " Long
3430F6	1	..	Front Spring—Leaf No. 6—No. 2 Gauge x $2\frac{1}{4}$ " x $21\frac{1}{4}$ " Long
3430G7	1	..	Front Spring—Leaf No. 7—No. 2 Gauge x $2\frac{1}{4}$ " x $17\frac{1}{4}$ " Long
3430H8	1	..	Front Spring—Leaf No. 8—No. 2 Gauge x $2\frac{1}{4}$ " x 13" Long
3430J10	1	..	Front Spring—Leaf No. 9—No. 2 Gauge x $2\frac{1}{4}$ " x 9" Long
13016Q17	1	..	Front Spring Center Bolt
G-31102	1	..	Front Spring Center Bolt Nut— $\frac{3}{8}$ " 24 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{1}{4}$ " Thick—Plain
3431A1	2	..	Front Spring Clip—On 3rd Leaf
3431B2	2	..	Front Spring Clip—On 6th Leaf
G-38407-A	4	..	Front Spring Clip Rivet— $\frac{1}{8}$ " Dia. x $\frac{3}{4}$ " Long—Round Head—Steel
3437B2	4	..	Front Spring Clip Spacer
13016R18	4	..	Front Spring Clip Bolt
G-37298	4	..	Front Spring Clip Bolt Nut— $\frac{3}{8}$ "—16 USS. Thd.— $\frac{1}{8}$ " Hex. x $\frac{1}{2}$ " Thick—Plain
END OF PARTS IN ASSEMBLY NO. 3429A1—A1			
3432A1	2	..	Front Spring Pressure Plate—On Top of Spring
3433C3	2	..	Front Spring Seat—Between Axle and Spring
3436A1	4	..	Front Spring Clip
G-31904	8	..	Front Spring Clip Nut— $\frac{5}{8}$ " 18 SAE Thd.— $\frac{1}{4}$ " Hex. x $\frac{1}{4}$ " High—Plain
G-36068	8	..	Front Spring Clip Nut Washer— $\frac{5}{8}$ " SAE Special Heavy
3411B2	2	..	Front Spring Pin—Front End
G-31206	2	..	Front Spring Pin Nut—Castle— $\frac{5}{8}$ "—18 SAE Thd.— $\frac{1}{4}$ " Hex. x $\frac{1}{4}$ " High
G-36328	2	..	Front Spring Pin Nut Cotter Pin— $\frac{1}{8}$ " x $1\frac{1}{4}$ " Long
3411C3	4	..	Front Spring Pin—Rear End
G-31206	4	..	Front Spring Pin Nut—Castle— $\frac{5}{8}$ "—18 SAE Thd.— $\frac{1}{4}$ " Hex. x $\frac{1}{4}$ " High
G-36328	4	..	Front Spring Pin Nut Cotter Pin $\frac{1}{8}$ " x $1\frac{1}{4}$ " Long
3434A1	2	..	Front Spring Shackle
G-37300	2	..	Front Spring Bolt Alemite Fitting—Front End— $\frac{1}{8}$ " Pipe Thd.—Straight
G-37304	4	..	Front Spring Bolt Alemite Fitting—Rear End—Upper and Lower— $\frac{1}{4}$ " Pipe Thd. 45° Angle

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

SPRING AND PARTS—Rear

PART No.	No. per Truck	No. per Assy.	NAME OF PART
3429B2—A1	1	..	REAR SPRING—Assembly— Consisting of—21—Succeeding Items—
3430K11—SA1	1	..	Rear Spring Leaf and Bushing Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
3430K11	..	1	Rear Spring—Leaf No. 1— $\frac{3}{8}$ " x $2\frac{1}{2}$ " x $65\frac{1}{4}$ " Long
3405F6	..	2	Rear Spring Leaf Bushing
END OF PARTS IN ASSEMBLY No. 3430K11—SA1			
3430L12	1	..	Rear Spring Leaf No. 2— $\frac{3}{8}$ " x $2\frac{1}{2}$ " x $53\frac{1}{2}$ " Long
3430M13	1	..	Rear Spring Leaf No. 3— $\frac{3}{8}$ " x $2\frac{1}{2}$ " x $45\frac{3}{4}$ " Long
3430N14	1	..	Rear Spring Leaf No. 4— $\frac{1}{8}$ " x $2\frac{1}{2}$ " x $39\frac{5}{8}$ " Long
3430P16	1	..	Rear Spring Leaf No. 5— $\frac{1}{8}$ " x $2\frac{1}{2}$ " x $33\frac{5}{8}$ " Long
3430Q17	1	..	Rear Spring Leaf No. 6— $\frac{1}{8}$ " x $2\frac{1}{2}$ " x $29\frac{1}{8}$ " Long
3430R18	1	..	Rear Spring Leaf No. 7— $\frac{1}{8}$ " x $2\frac{1}{2}$ " x $24\frac{3}{4}$ " Long
3430S19	1	..	Rear Spring Leaf No. 8— $\frac{1}{8}$ " x $2\frac{1}{2}$ " x $20\frac{1}{4}$ " Long
3430T20	1	..	Rear Spring Leaf No. 9— $\frac{1}{8}$ " x $2\frac{1}{2}$ " x $15\frac{5}{8}$ " Long
3430U21	1	..	Rear Spring Leaf No. 10— $\frac{1}{8}$ " x $2\frac{1}{2}$ " x $11\frac{1}{2}$ " Long
18016N14	1	..	Rear Spring Center Bolt
G-31102	1	..	Rear Spring Center Bolt Nut— $\frac{3}{8}$ "—24 SAE Std.— $\frac{1}{16}$ " Hex. x $\frac{11}{16}$ " High—Plain
13049J62	1	..	Rear Spring Center Bolt Washer
3431C3	2	..	Rear Spring Clip—On 3rd Leaf
3431D4	2	..	Rear Spring Clip—On 7th Leaf
G-38507-A	4	..	Rear Spring Clip Rivet— $\frac{3}{8}$ " Dia. x $\frac{3}{4}$ " Long—Round Head—Steel
3437A1	4	..	Rear Spring Clip Spacer
18016P16	4	..	Rear Spring Clip Bolt
G-37298	4	..	Rear Spring Clip Bolt Nut— $\frac{3}{8}$ "—16 USS Thd.— $\frac{1}{16}$ " Hex. x $\frac{1}{2}$ " High—Plain
END OF PARTS IN ASSEMBLY No. 3429B2—A1			
3432B2	2	..	Rear Spring Pressure Plate—On Top of Spring
3433B2	2	..	Rear Spring Seat—Between Axle and Spring
3435A1	8	..	Rear Spring Tie Bolt
G-31905	16	..	Rear Spring Tie Bolt Nut— $\frac{3}{4}$ "—16 SAE Thd.— $1\frac{1}{16}$ " Hex. x $1\frac{1}{16}$ " High—Plain
G-36070	16	..	Rear Spring Tie Bolt Nut Lockwasher— $\frac{3}{4}$ " SAE—Special Heavy
3411D4	2	..	Rear Spring Pin—Through Front Bracket
G-14232	2	..	Rear Spring Pin Cap Screw— $\frac{3}{8}$ "—24 SAE Thd. x $2\frac{1}{2}$ " Long x $\frac{1}{16}$ " Hex. x $\frac{1}{2}$ " High— Drilled End
G-31202	2	..	Rear Spring Pin Cap Screw Nut—Castle— $\frac{3}{8}$ "—24 SAE Thd.
G-36317	2	..	Rear Spring Pin Cap Screw Nut Cotter Pin— $\frac{3}{32}$ " x 1" Long
3411D4	2	..	Rear Spring Pin—Rear—Through Shackle
G-14228	4	..	Rear Spring Pin Cap Screw— $\frac{3}{8}$ "—24 SAE Thd. x $2\frac{1}{4}$ " Long x $\frac{1}{16}$ " Hex. x $\frac{1}{2}$ " High— Drilled End
G-31202	4	..	Rear Spring Pin Cap Screw Nut—Castle— $\frac{3}{8}$ "—24 SAE Thd.— $\frac{1}{16}$ " Hex. x $\frac{11}{16}$ " High
G-36317	4	..	Rear Spring Pin Cap Screw Nut Cotter Pin— $\frac{3}{32}$ " x 1" Long
3434B2—SA1	2	..	Rear Spring Shackle and Bushing Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
3434B2	..	1	Rear Spring Shackle
3405G7	..	1	Rear Spring Shackle Bushing
END OF PARTS IN ASSEMBLY No. 3434B2—SA1			

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

SPRING AND PARTS—Rear—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
3446A1	1	..	Rear Spring Shackle Cross Bar
13049K63	2	..	Rear Spring Shackle and Cross Bar Washer
G-11803	2	..	Rear Spring Shackle and Cross Bar Cap Screw— $\frac{1}{2}$ "—20 SAE Thd. x 1" Long x $\frac{1}{4}$ " Hex. x $\frac{3}{8}$ " High
G-35916	2	..	Rear Spring Shackle and Cross Bar Cap Screw Lockwasher— $\frac{1}{2}$ " SAE Std.
G-37300	2	..	Rear Spring Pin—Front—Alemite Fitting— $\frac{1}{8}$ " Pipe Thd.—Straight
G-37300	2	..	Rear Spring Pin—Rear Lower—Alemite Fitting— $\frac{1}{8}$ " Pipe Thd.—Straight
G-37302	2	..	Rear Spring Shackle Alemite Fitting— $\frac{1}{8}$ " Pipe Thd.—25° Angle

SEDIMENT TRAP

PART No.	No. per Truck	No. per Assy.	NAME OF PART
7650A1—A1	1	..	SEDIMENT TRAP—Complete Assembly— CONSISTING OF—13—SUCCEEDING ITEMS—
7504B2	1	..	Sediment Trap Body
7517E5—SA1	1	..	Sediment Trap Drain Plug and Handle Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
7517E5	..	1	Sediment Trap Drain Plug
7602B2	..	1	Sediment Trap Drain Plug Handle
			END OF PARTS IN ASSEMBLY NO. 7517E5—SA1
7651A1—SA1	1	..	Sediment Trap Valve Stem and Parts Assembly— CONSISTING OF—5—SUCCEEDING ITEMS—
7651A1	..	1	Sediment Trap Valve Stem
7602C3	..	1	Sediment Trap Valve Stem Handle
13026D4	..	1	Sediment Trap Valve Stem Packing
13028C3	..	1	Sediment Trap Valve Stem Packing Nut—Special
7527B2	..	1	Sediment Trap Valve Stem Packing Retaining Washer—Brass
			END OF PARTS IN ASSEMBLY NO. 7651A1—SA1
7652A1—SA1	1	..	Sediment Trap Outlet and Screen Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
7652A1	..	1	Sediment Trap Outlet
7519C3	..	1	Sediment Trap Outlet Screen
			END OF PARTS IN ASSEMBLY NO. 7652A1—SA1
			END OF PARTS IN ASSEMBLY NO. 7650A1—A1

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

SPEEDOMETER HEAD, SHAFT AND DRIVE GEARS—For Use with Brown-Lipe Model 20 U. P. P. Transmission—Used with 33" x 5" Pneu. Tires and 5.1:1 Axle Ratio Only—When 5.66:1 Ratio is Used an Adapter is Necessary (See End of Speedometer Parts)

PART No.	No. per Truck	No. per Assy.	NAME OF PART
11500A1—A1	1	..	SPEEDOMETER HEAD—Complete Assembly— Consisting of—23—Succeeding Items—
11501A1—SA1	..	1	Speedometer Bottom Jewel Assembly
11502A1—SA1	..	1	Speedometer Speed Indicator Dial Assembly
13023C81	..	1	Speedometer Speed Indicator Dial Assembly Screw
11503A1—SA1	..	1	Speedometer Case and Nuts Assembly
G-25124	..	2	Speedometer Case and Nuts Assembly Machine Screw—No. 10—32 Thd. x $\frac{3}{8}$ " Long—Round Head—Steel
13038J36	..	2	Speedometer Case and Nuts Assembly Machine Screw Nut
G-35910	..	2	Speedometer Case and Nuts Assembly Machine Screw Nut Lockwasher—No. 10 SAE Std.—For Round Head Screw
13023D82	..	2	Speedometer Case Machine Screw
11504A1—SA1	..	1	Speedometer Field Plate and Jewel Assembly
11505A1—SA1	..	1	Speedometer Odometer Assembly
13023E83	..	1	Speedometer Odometer Assembly Machine Screw
G-26124	..	2	Speedometer Odometer Assembly Machine Screw—No. 6—32 Thd. x $\frac{3}{8}$ " Long—Flat Countersunk Head—Steel
11506A1—SA1	..	1	Speedometer Frame Gears, Magnet and Sleeve Assembly
11507A1	..	1	Speedometer Hair Spring
11508A1	..	1	Speedometer Hair Spring Pin
11509A1	..	1	Speedometer Indicator Shaft Top Stop
11510A1	..	1	Speedometer Face Dial
11511A1	..	1	Speedometer Face Glass
11512A1	..	2	Speedometer Face Glass Gasket
11513A1	..	1	Speedometer Bezel
11514A1	..	1	Speedometer Flush Bracket
11515A1	..	1	Speedometer Flush Flange
13023J10	..	3	Speedometer Flush Flange Screw—Special
END OF PARTS IN ASSEMBLY No. 11500A1—A1			
11516A1—SA1	1	..	Speedometer Shaft Complete Assembly— CONSISTING OF—7—SUCCEEDING ITEMS—
11516A1—SA2	..	1	Speedometer Shaft Casing and Ferrule Assembly
11517A1	..	1	Speedometer Shaft Sliding Bar and Clutch
11517B2	..	1	Speedometer Shaft Upper Clutch
11518A1	..	3	Speedometer Shaft Chain Link—Short
11518B2	..	2	Speedometer Shaft Chain Link—End
11518C3	..	37	Speedometer Shaft Chain Link—Regular
None	..	1	Speedometer Shaft Cork Plug—We Do Not Service This Part—(Used for Shipping Convenience Only)
This Shaft Assembly Is 50" Long			
END OF PARTS IN ASSEMBLY No. 11516A1—SA1			
11519A1—SA1	1	..	Speedometer Drive Gear Assembly— CONSISTING OF—5—SUCCEEDING ITEMS—
11519A1	..	1	Speedometer Drive Gear—4 Teeth

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

SPEEDOMETER—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
G-36602	..	1	Speedometer Drive Gear and Transmission Shaft Key—No. 3 Woodruff
11519B2	..	1	Speedometer Driven Gear—12 Teeth
11520A1	..	1	Speedometer Driven Gear Bushing
11521A1	..	1	Speedometer Driven Gear Sleeve
			Note—The Parts in This Assembly No. 11519A1—SA1 for Use With 5.1:1 Ratio in Axle and 33" x 5" Pneumatic Tires, Are Assembled in The Transmission.
			<u>END OF PARTS IN ASSEMBLY No. 11519A1—SA1</u>
11522A1	1	..	Speedometer Adaptor—Used With Our No. 11519A1—SA1 Gear Assembly When Axle Ratio Is 5.66:1 and 33" x 5" Pneumatic Tires Are Furnished

STEERING GEAR—For Left Hand Steer—Gemmer Mfg. Co. Model-75 (Ratio 9½:1)

PART No.	No. per Truck	No. per Assy.	NAME OF PART
5000A1— A1	1	..	STEERING GEAR—Complete Assembly— Consisting of—97—Succeeding Items—
5000A1—SA1	1	..	Steering Gear Complete Assembly (Less Wheel Rim and Spider Assembly)— CONSISTING OF—90—SUCCEEDING ITEMS—
5001A1—SA1	1	..	Steering Gear Housing and Bushing Assembly— CONSISTING OF—4—SUCCEEDING ITEMS—
5001A1	..	1	Steering Gear Housing
5002A1	..	1	Steering Gear Housing Bushing—Upper
13022A1	..	1	Steering Gear Housing Bushing Dowel
5002B2	..	1	Steering Gear Housing Bushing—Lower
END OF PARTS IN ASSEMBLY No. 5001A1—SA1			
5003A1	1	..	Steering Gear Housing Cover
13023F84	4	..	Steering Gear Housing Cover Cap Screw— $\frac{5}{16}$ "—18 USS Thd. x $\frac{7}{8}$ " Long x $\frac{1}{2}$ " Hex. x $\frac{11}{16}$ " High
G-36013	4	..	Steering Gear Housing Cover Cap Screw Lockwasher— $\frac{5}{16}$ "—SAE—Special Light
5004A1	1	..	Steering Gear Housing Cover Gasket
13023G85	1	..	Steering Gear Housing Clamp Screw
G-31101	1	..	Steering Gear Housing Clamp Screw Nut— $\frac{5}{16}$ "—24 SAE Thd.— $\frac{1}{2}$ " Hex. x $\frac{11}{16}$ " High— Plain
G-36013	1	..	Steering Gear Housing Clamp Screw Nut Lockwasher— $\frac{5}{16}$ "—SAE—Special Light
13005H8	1	..	Steering Gear Housing Lower Bushing Felt
5005A1	1	..	Steering Gear Worm Wheel—9½:1 Ratio—Left Hand
13049G59	1	..	Steering Gear Worm Wheel Thrust Block—Brass
13023G7	1	..	Steering Gear Worm Wheel Adjusting Screw
G-31102	1	..	Steering Gear Worm Wheel Adjusting Screw Nut— $\frac{3}{8}$ "—24 SAE Thd.— $\frac{5}{16}$ " Hex. x $\frac{11}{16}$ " High—Plain
G-35914	1	..	Steering Gear Worm Wheel Adjusting Screw Nut Lockwasher— $\frac{3}{8}$ " SAE—Standard
13049A1	1	..	Steering Gear Worm Wheel Thrust Washer—Fibre
5002C3	1	..	Steering Gear Worm Wheel Bushing
13020A1	1	..	Steering Gear Worm Wheel Bushing Retaining Pin—Special
5009A1	1	..	Steering Gear Worm Wheel Bushing Adjusting Plate—Rear
G-12709	1	..	Steering Gear Worm Wheel Bushing Adjusting Plate Pinch Screw— $\frac{1}{4}$ "—28 SAE Thd. x $1\frac{1}{2}$ " Long x $\frac{1}{16}$ " Hex. x $\frac{1}{16}$ " High—Slotted
G-31100	1	..	Steering Gear Worm Wheel Bushing Adjusting Plate Pinch Screw Nut— $\frac{1}{4}$ "—28 SAE Thd.— $\frac{1}{16}$ " Hex. x $\frac{3}{32}$ " High—Plain
G-35912	1	..	Steering Gear Worm Wheel Bushing Adjusting Plate Pinch Screw Nut Lockwasher— $\frac{1}{4}$ " SAE—Standard
5013A1	1	..	Steering Gear Worm Wheel Ball Arm— $1\frac{1}{8}$ " Dia. Ball
13038K37	1	..	Steering Gear Worm Wheel Ball Arm Nut—Special
13132F6	1	..	Steering Gear Worm Wheel Ball Arm Nut Lockwasher
5006A1	1	..	Steering Gear Worm—7½:1 Ratio—Left Hand
13012E5	1	..	Steering Gear Worm Key
5012A1	1	..	Steering Gear Worm Adjusting Nut
13023G85	1	..	Steering Gear Worm Adjusting Nut Clamp Screw
G-31101	1	..	Steering Gear Worm Adjusting Nut Clamp Screw Nut— $\frac{5}{16}$ "—24 SAE Thd.— $\frac{1}{2}$ " Hex. x $\frac{11}{16}$ " High—Plain
G-36013	1	..	Steering Gear Worm Adjusting Nut Clamp Screw Nut Lockwasher— $\frac{5}{16}$ "—SAE Light

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

STEERING GEAR—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
13001F6	2	..	Steering Gear Worm Thrust Bearing—Single Row Ball
5019A1	1	..	Steering Gear Main Column (1" x 46")
5015A1—SA1	1	..	Steering Gear Jacket Tube and Bushing Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
5015A1	..	1	Steering Gear Jacket Tube ($1\frac{1}{4}$ " x $38\frac{1}{8}$ ")
5002D4	..	1	Steering Gear Jacket Tube Bushing Assembly (1—No. 5901—1—No. 5902) END OF PARTS IN ASSEMBLY No. 5015A1—SA1
8000A1—SA1	1	..	Steering Gear Electric Push Button Wire and Terminal Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
8000A1	..	1	Steering Gear Electric Push Button Wire—96" Long
8001A1	..	1	Steering Gear Electric Push Button Wire Terminal—Special END OF PARTS IN ASSEMBLY No. 8000A1—SA1
5010A1—SA1	1	..	Steering Gear Horn Button Assembly— CONSISTING OF—5—SUCCEEDING ITEMS—
5010A1	..	1	Steering Gear Horn Button
5023A1	..	1	Steering Gear Horn Button Locking Ring
5024A1	..	1	Steering Gear Horn Button Spring Retainer
13023J88	..	1	Steering Gear Horn Button Spring Retainer Screw—Special
13132G7	..	1	Steering Gear Horn Button Spring Retainer Screw Lockwasher END OF PARTS IN ASSEMBLY No. 5010A1—SA1
5003B2	1	..	Steering Gear Upper Control Cover (1—No. 10489—1—No. 10490)
5025A1	1	..	Steering Gear Horn Button Spring
5022A1—SA1	1	..	Steering Gear Spark—Throttle—Controls and Tubes Assembly— CONSISTING OF—21—SUCCEEDING ITEMS—
5009E5	1	..	Steering Gear Horn Button Contact Cup and Compression Plate Assembly—(1—No. 18481—1—No. 10482)
13049H60	1	..	Steering Gear Horn Button Contact Cup Insulator Washer—Fibre
5009F6	1	..	Steering Gear Upper Control Cover Plate
13013F6	2	..	Steering Gear Upper Control Cover Stud
5012B2	2	..	Steering Gear Upper Control Cover Stud Nut—Special—Slotted—Brass
G-32158	2	..	Steering Gear Upper Control Cover Stud Nut—No. 10—32 Thd.— $\frac{3}{8}$ " Hex. x $\frac{1}{4}$ " High—Plain
13132G7	2	..	Steering Gear Upper Control Cover Stud Nut Lockwasher
5020A1	1	..	Steering Gear Upper Control Base
5016A1	1	..	Steering Gear Upper Spark Lever
5016B2	1	..	Steering Gear Upper Throttle Lever
5008A1	3	..	Steering Gear Upper Throttle and Spark Lever Friction Washer—Special
5015B2—SA1	1	..	Steering Gear Long Spark Tube and Upper Spark Lever Driving Plate Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
5015B2	..	1	Steering Gear Long Spark Tube—($\frac{1}{8}$ " x $49\frac{1}{8}$ ")
5009B2	..	1	Steering Gear Upper Spark Lever Driving Plate END OF ASSEMBLY No. 5015B2—SA1
5015C3—SA1	1	..	Steering Gear Long Throttle Tube and Upper Throttle Lever Driving Plate Assembly—

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

STEERING GEAR—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
CONSISTING OF—2—SUCCEEDING ITEMS—			
5015C3	..	1	Steering Gear Long Throttle Tube—($\frac{1}{2}$ " x $48\frac{1}{8}$ ")
5009C3	..	1	Steering Gear Upper Throttle Lever Driving Plate
END OF PARTS IN ASSEMBLY No. 5015C3—SA1			
5015D4—SA1	1	..	Steering Gear Sector Bracket Tube and Sector Tube Plate and Upper Column Bushing Assembly—
CONSISTING OF—3—SUCCEEDING ITEMS—			
5015D4	..	1	Steering Gear Sector Bracket Tube—($5\frac{1}{8}$ " x $47\frac{1}{4}$ ")
5009D4	..	1	Steering Gear Sector Tube Plate
5002E5	..	1	Steering Gear Upper Column Bushing
END OF PARTS IN ASSEMBLY No. 5015D4—SA1			
END OF PARTS IN ASSEMBLY No. 5022A1—SA1			
5007A1	2	..	Steering Gear Stationary Tube Spring Silencer
5021A1	1	..	Steering Gear Sector Bracket Tube Clamp
G-24086	2	..	Steering Gear Sector Bracket Tube Clamp Machine Screw— $\frac{1}{4}$ "—20 Thd. x $\frac{1}{2}$ " Long—Oval Fill. Head
G-35912	2	..	Steering Gear Sector Bracket Tube Clamp Machine Screw Lockwasher— $\frac{1}{4}$ "—SAE—Standard
G-10009	1	..	Steering Gear Sector Bracket Tube Clamp Pinch Screw— $\frac{1}{4}$ "—20 USS Thd. x $1\frac{1}{2}$ " Long x $\frac{1}{16}$ " Hex. x $\frac{1}{4}$ " High
13038L38	1	..	Steering Gear Sector Bracket Tube Clamp Pinch Screw Nut
G-35912	1	..	Steering Gear Sector Bracket Tube Clamp Pinch Screw Nut Lockwasher— $\frac{1}{4}$ " SAE—Standard
5008B2	1	..	Steering Gear Sector Bracket Tube Clamp Pinch Screw Nut Washer—Tongued
5016C3	1	..	Steering Gear Lower Spark Lever
G-24090	1	..	Steering Gear Lower Spark Lever Pinch Screw— $\frac{1}{4}$ "—20 Thd. x 1" Long—Oval Fill. Head Machine Screw
13038M39	1	..	Steering Gear Lower Spark Lever Pinch Screw Nut
G-35912	1	..	Steering Gear Lower Spark Lever Pinch Screw Nut Lockwasher— $\frac{1}{4}$ " SAE Std.
5008B2	1	..	Steering Gear Lower Spark Lever Pinch Screw Nut Washer—Tongued
5016D4	1	..	Steering Gear Lower Throttle Lever
G-24090	1	..	Steering Gear Lower Throttle Lever Pinch Screw— $\frac{1}{4}$ "—20 Thd. x 1" Long—Oval Fill. Head Machine Screw
13038M39	1	..	Steering Gear Lower Throttle Lever Pinch Screw Nut
G-35912	1	..	Steering Gear Lower Throttle Lever Pinch Screw Nut Lockwasher— $\frac{1}{4}$ " SAE Std.
5008B2	1	..	Steering Gear Lower Throttle Lever Pinch Screw Nut Washer—Tongued
END OF PARTS IN ASSEMBLY No. 5000A1—SA1			
5017A1—SA1	1	..	Steering Gear Wheel Assembly—
CONSISTING OF—3—SUCCEEDING ITEMS—			
5017A1	..	1	Steering Gear Wheel Rim—18" Dia.—Walnut Finish
5018A1	..	1	Steering Gear Wheel Rim Spider
G-34464	..	4	Steering Gear Wheel Rim and Spider Screw—No. 12 x 1" Oval Head Wood Screw
END OF PARTS IN ASSEMBLY No. 5017A1—SA1			
13012D4	1	..	Steering Gear Wheel and Tube Key
13038N40	1	..	Steering Gear Wheel and Tube Nut
END OF PARTS IN ASSEMBLY No. 5000A1—A1			

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

STEERING GEAR—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
G-10105	1	..	Steering Gear Worm Wheel Bushing Adjusting Plate Cap Screw— $\frac{1}{8}$ "—18 USS Thd. x 1" Long $\frac{1}{4}$ " Hex. x $\frac{1}{8}$ " High
G-35913	1	..	Steering Gear Worm Wheel Bushing Adjusting Plate Cap Screw Lockwasher— $\frac{1}{8}$ " SAE—Standard
5011A1	1	..	Steering Gear Support Bracket
G-11610	3	..	Steering Gear Support Bracket and Dash Cap Screw— $\frac{3}{8}$ "—24 SAE Thd. x 1 $\frac{1}{4}$ " Long— x $\frac{1}{8}$ " Hex. x $\frac{3}{7}$ " High
G-31102	3	..	Steering Gear Support Bracket and Dash Cap Screw Nut— $\frac{3}{8}$ "—24 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{1}{4}$ " High—Plain
G-35914	3	..	Steering Gear Support Bracket and Dash Cap Screw Nut Lockwasher— $\frac{3}{8}$ " SAE Std.
13049G7	3	..	Steering Gear Support Bracket and Dash Cap Screw Washer
13019A1	1	..	Steering Gear and Support Spoke Clip
13038C29	2	..	Steering Gear and Support Spoke Clip Nut
G-37307	1	..	Steering Gear Alemite Fitting—65° Angle— $\frac{1}{4}$ " Pipe Thd.—As Required
G-37306	1	..	Steering Gear Alemite Fitting—65° Angle— $\frac{1}{8}$ " Pipe Thd.—As Required
13021A1	1	..	Steering Gear Electric Push Button Wire Terminal—On Junction Block End

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

**TRANSMISSION—For Use with Borg and Beck Clutch No. 10KP Only (See Page 75-A For Transmission Used with Borg and Beck Clutch No. 11QL)
Brown-Lipe Model 20, 3 Speed-U. P. P.—Their Drwg 690-XX Overhead Shift—
Left Hand Steer—Case 16 $\frac{1}{8}$ " Bell—Drive Gear for Borg & Beck Clutch No. 10KP—Pump Aperture—Bearing Cap for Speedometer Drive**

PART No.	No. per Truck	No. per Assy.	NAME OF PART
1500A1— A1	1	..	TRANSMISSION—Complete Assembly— Consisting of—137—Succeeding Items—
1501A1—SA1	1	..	Transmission Case and Shifter Shaft Bushings Assembly— CONSISTING OF—3—SUCCEEDING ITEMS—
1501A1	..	1	Transmission Case—Gray Iron
1024D4	..	2	Transmission Shifting Rod Poppet Bushing
1024B2	..	2	Clutch Shifter Shaft Bushing
END OF PARTS IN ASSEMBLY No. 1501A1—SA1			
G-37508	1	..	Transmission Case Oil Hole Filler Plug— $\frac{3}{4}$ " Pipe Thd.—Square Head
G-37506	1	..	Transmission Case Oil Hole Drain Plug— $\frac{1}{2}$ " Pipe Thd.—Square Head
1021B2	1	..	Clutch Hand Hole Cover
G-10101	2	..	Clutch Hand Hole Cover Cap Screw— $\frac{1}{8}$ "—18 USS Thd. x $\frac{1}{2}$ " Long x $\frac{1}{4}$ " Hex. x $\frac{1}{16}$ " High
1021C3	1	..	Transmission Case Pump Aperture Cover
1519F6	1	..	Transmission Case Pump Aperture Cover Gasket
G-10101	4	..	Transmission Case Pump Aperture Cover Cap Screw— $\frac{1}{8}$ "—18 USS Thd. x $\frac{1}{2}$ " Long x $\frac{1}{4}$ " Hex. x $\frac{1}{16}$ " High
G-36013	4	..	Transmission Case Pump Aperture Cover Cap Screw Lockwasher— $\frac{1}{8}$ " SAE Std.
1512A1—SA1	1	..	Transmission Countershaft With Gears, Spacers and Keys Assembly— CONSISTING OF—9—SUCCEEDING ITEMS—
1512A1	..	1	Transmission Countershaft—With 12 Tooth Gear Integral
1518A1	..	1	Transmission Countershaft Low Speed Gear—15 Teeth
13012G7	..	2	Transmission Countershaft Low Speed Gear Key
1513B2	..	1	Transmission Countershaft Medium Speed Gear—21 Teeth
13012G7	..	2	Transmission Countershaft Medium Speed Gear Key
1513C3	..	1	Transmission Countershaft Drive Gear—26 Teeth
13012H8	..	2	Transmission Countershaft Drive Gear Key
13034A1	..	1	Transmission Countershaft Drive Gear and Bearing Spacer
13034B2	..	1	Transmission Countershaft Drive Gear and Medium Speed Gear Spacer
END OF PARTS IN ASSEMBLY No. 1512A1—SA1			
13000A1	1	..	Transmission Countershaft Front Bearing Cone—Timken No. 07098
1519B2	1	..	Transmission Countershaft Front Bearing Cap Gasket
13023K89	4	..	Transmission Countershaft Front Bearing Cap Cap Screw
G-36014	4	..	Transmission Countershaft Front Bearing Cap Cap Screw Lockwasher— $\frac{1}{4}$ " SAE Light
13134F6	2	..	Transmission Countershaft Front Bearing Cap Cap Screw Lock Wire
1509C3—SA1	1	..	Transmission Countershaft Front Bearing Cap and Cup Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
1509C3	..	1	Transmission Countershaft Bearing Cap—Front
13000B2	..	1	Transmission Countershaft Bearing Cup—Front—Timken No. 07204
END OF PARTS IN ASSEMBLY No. 1509C3—SA1			
13000C3	1	..	Transmission Countershaft Rear Bearing Cone—Timken No. 17118
1519E5	1	..	Transmission Countershaft Rear Bearing Cap Gasket

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

TRANSMISSION—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
13023K89	4	..	Transmission Countershaft Rear Bearing Cap Cap Screw
G-36014	4	..	Transmission Countershaft Rear Bearing Cap Cap Screw Lockwasher— $\frac{3}{8}$ " SAE Light
13134F6	2	..	Transmission Countershaft Rear Bearing Cap Cap Screw Lock Wire
1509D4—SA1	1	..	Transmission Countershaft Rear Bearing Cup and Cap Assembly— CONSISTING OF—5—SUCCEEDING ITEMS—
1509D4	..	1	Transmission Countershaft Bearing Cap—Rear
13000D4	..	1	Transmission Countershaft Bearing Cup—Rear—Timken No. 17244
1518A1	..	1	Transmission Countershaft Bearing Adjuster
13023H8	..	1	Transmission Countershaft Bearing Adjuster Screw—Special
G-30904	..	1	Transmission Countershaft Bearing Adjuster Screw Check Nut— $\frac{1}{2}$ "—13 USS Thd.— $\frac{7}{8}$ " Hex. x $\frac{1}{4}$ " High
			END OF PARTS IN ASSEMBLY No. 1509D4—SA1
1513D4	1	..	Transmission Reverse Idler Gear—19 Teeth
1521A1	1	..	Transmission Reverse Idler Gear Shaft—Bronze—Screwed Into Case
1513E5—SA1	1	..	Transmission Drive Gear and Pocket Bearing Cup Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
1513E5	..	1	Transmission Drive Gear—Splined End—15 Teeth
13000H8	..	1	Transmission Drive Gear Pocket Bearing Cup—Timken No. 20187
			END OF PARTS IN ASSEMBLY No. 1513E5—SA1
13000G7	1	..	Transmission Drive Gear Pocket Bearing Cone—Timken No. 20074
1508A1	1	..	Transmission Main Shaft—Square
13038P42	1	..	Transmission Main Shaft Nut—Special— $\frac{1}{4}$ "—20 SAE Thd.— $1\frac{1}{4}$ " Hex.— $\frac{1}{2}$ " High— Slotted
13000F6	1	..	Transmission Main Shaft Front Bearing Cup—Timken No. 11315
13000E5	1	..	Transmission Main Shaft Front Bearing Cone—Timken No. 11157
1509A1	1	..	Transmission Main Shaft Front Bearing Cap
1519D4	1	..	Transmission Main Shaft Front Bearing Cap Gasket
13023K89	4	..	Transmission Main Shaft Front Bearing Cap Cap Screw
G-36014	4	..	Transmission Main Shaft Front Bearing Cap Cap Screw Lockwasher— $\frac{3}{8}$ " SAE Light
13134F6	2	..	Transmission Main Shaft Front Bearing Cap Cap Screw Lock Wire— $\frac{1}{8}$ " Dia. x 4" Long
13000C3	1	..	Transmission Main Shaft Rear Bearing Cone—Timken No. 17118
1519C3	1	..	Transmission Main Shaft Rear Bearing Cap Gasket
13023K89	3	..	Transmission Main Shaft Rear Bearing Cap Cap Screw
13023P94	1	..	Transmission Main Shaft Rear Bearing Cap Cap Screw
G-36014	4	..	Transmission Main Shaft Rear Bearing Cap Cap Screw Lockwasher— $\frac{3}{8}$ "—SAE Light
13023Q95	1	..	Transmission Main Shaft Rear Bearing Cap Cap Screw
G-35914	1	..	Transmission Main Shaft Rear Bearing Cap Cap Screw Lockwasher— $\frac{1}{2}$ "—SAE—Std.
13134F6	2	..	Transmission Main Shaft Rear Bearing Cap Cap Screw Lock Wire
1509B2—SA1	1	..	Transmission Main Shaft Rear Bearing Cup, Cap and Parts Assembly— CONSISTING OF—13—SUCCEEDING ITEMS—
1509B2—SA2	1	..	Transmission Main Shaft Rear Bearing Cap and Brake Support Pin Assembly— CONSISTING OF—3—SUCCEEDING ITEMS—
1509B2	..	1	Transmission Main Shaft Rear Bearing Cap
3411E5	..	1	Transmission Brake Anchor Pin
13020Q17	..	1	Transmission Brake Anchor Pin Rivet— $\frac{3}{8}$ " Dia. x $1\frac{1}{8}$ " Long—Plain Steel Pin
			END OF PARTS IN ASSEMBLY No. 1509B2—SA2

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

TRANSMISSION—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
13000D4	1		Transmission Main Shaft Rear Bearing Cup—Timken No. 17244
1510A1	1		Transmission Main Shaft Rear Bearing Adjusting Ring
13020R18	1		Transmission Main Shaft Rear Bearing Adjust'ng Ring Pin
1518B2	1		Transmission Main Shaft Rear Bearing Adjuster
1022A1	1		Transmission Main Shaft Rear Bearing Adjuster Lock Nut
1023A1	1		Transmission Main Shaft Rear Bearing Adjuster Lock Nut Locking Washer
2014A1	1		Transmission Main Shaft Rear Bearing Adjuster Lock
G-25124	1		Transmission Main Shaft Rear Bearing Adjuster Lock Machine Screw—No. 10—32 Thd x $\frac{3}{8}$ " Long—Round Head—Steel
G-35910	1		Transmission Main Shaft Rear Bearing Adjuster Lock Machine Screw Lockwasher— No. 10—SAE Std.—For Round Head Screw END OF PARTS IN ASSEMBLY No. 1509B2—SA1
1513F6	1		Transmission Gear—On Main Shaft—Reverse and 1st Speed—Sliding—26 Teeth
1513G7	1		Transmission Gear—On Main Shaft—2nd and 3rd Speed—Sliding—20 Teeth
1517A1	1		Transmission Reverse and 1st Speed Shifting Rod
1005C3	1		Transmission Reverse and 1st Speed Shifting Rod Sleeve—1" Long
1516A1	1		Transmission Reverse and 1st Speed Shifting Fork
13023R96	1		Transmission Reverse and 1st Speed Shifting Fork Screw
G-36014	1		Transmission Reverse and 1st Speed Shifting Fork Screw Lockwasher— $\frac{1}{8}$ " SAE Light
1517B2	1		Transmission 2nd and 3rd Speed Shifting Rod
1005B2	1		Transmission 2nd and 3rd Speed Shifting Rod Sleeve
1516A1	1		Transmission 2nd and 3rd Speed Shifting Fork
13023R96	1		Transmission 2nd and 3rd Speed Shifting Fork Screw—Special
G-36014	1		Transmission 2nd and 3rd Speed Shifting Fork Screw Lockwasher— $\frac{1}{8}$ " SAE—Light
1520A1	1		Transmission Shifting Rod Interlock
1506A1	2		Transmission Shifting Rod Poppet
1006E5	2		Transmission Shifting Rod Poppet Spring
1505A1	2		Transmission Shifting Rod Poppet Plug
1021E5	1		Transmission Shifting Rod Cover
1519G7	1		Transmission Shifting Rod Cover Gasket
G-25124	2		Transmission Shifting Rod Cover Machine Screw—No. 10—32 Thd.— $\frac{1}{8}$ " Long—Round Head—Steel
G-35910	2		Transmission Shifting Rod Cover Machine Screw Lockwasher—No. 10 SAE Std.—For Round Head Screw
1519A1	1		Transmission Cover Gasket
13023L90	4		Transmission Cover Cap Screw
G-36014	4		Transmission Cover Cap Screw Lockwasher— $\frac{1}{8}$ "—SAE—Light
2001A1—SA1	1		Transmission Shifting Lever and Cover Parts Assembly— CONSISTING OF—12—SUCCEEDING ITEMS—
2001A1—SA2	1		Transmission Shifting Lever, Handle and Steady Pin Assembly— CONSISTING OF—3—SUCCEEDING ITEMS—
2001A1		1	Transmission Shifting Lever
2005A1		1	Transmission Shifting Lever Ball—1 $\frac{3}{4}$ " Dia.
1511D4		1	Transmission Shifting Lever Steady Pin END OF PARTS IN ASSEMBLY No. 2001A1—SA2

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

TRANSMISSION—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
1021D4—SA1	1	..	Transmission Cover and Shifting Lever Bearing Assembly— CONSISTING OF—3—SUCCEEDING ITEMS—
1021D4	..	1	Transmission Cover—Aluminum
1507A1	..	1	Transmission Shifting Lever Bearing
G-25124	..	1	Transmission Shifting Lever Bearing Machine Screw—No. 10—32 Thd.— $\frac{3}{8}$ " Long—Round Head
END OF PARTS IN ASSEMBLY No. 1021D4—SA1			
2012A1	1	..	Transmission Shifting Lever Compression Cup
1006F6	1	..	Transmission Shifting Lever Spring
1022B2	1	..	Transmission Shifting Lever Lock Nut
1006K11	1	..	Transmission Shifting Lever Lock Nut Spring
END OF PARTS IN ASSEMBLY No. 2001A1—SA1			
1012A1	1	..	Clutch Shifter
1011B2	1	..	Clutch Shifter Shaft—Right Hand
1011A1	1	..	Clutch Shifter Shaft—Left Hand
13049L64	1	..	Clutch Shifter Shaft Key—Left Hand
13023E5	1	..	Clutch Shifter Shaft Screw—Special
13038Q43	1	..	Clutch Shifter Shaft Screw Nut—Special
13023M91	2	..	Clutch Shifter Screw— $\frac{1}{4}$ "—14 USS Thd. x $1\frac{1}{4}$ " Long x $\frac{3}{8}$ " Hex. x $\frac{3}{8}$ " High
G-36015	2	..	Clutch Shifter Screw Lockwasher— $\frac{1}{4}$ " SAE—Light
2001B2—SA1	1	..	Transmission Brake Lever, Pawl and Parts Assembly— CONSISTING OF—11—SUCCEEDING ITEMS—
2001B2—SA2	1	..	Transmission Brake Lever and Bushing Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
2001B2	..	1	Transmission Brake Lever (For Emergency Brake, on Transmission)
1024C3	..	1	Transmission Brake Lever Bushing
END OF PARTS IN ASSEMBLY No. 2001B2—SA2			
2004A1	1	..	Transmission Brake Pawl
2008A1	1	..	Transmission Brake Pawl Rod Button—Brass
13020P16	1	..	Transmission Brake Pawl Rod Button Pin
1006G7	1	..	Transmission Brake Pawl Rod Button Spring
13049M65	1	..	Transmission Brake Lever Washer
2010A1	1	..	Transmission Brake Lever Shaft Bracket
G-31204	1	..	Transmission Brake Lever Shaft Castle Nut— $\frac{1}{4}$ "—20 SAE Thd.— $\frac{3}{4}$ " Hex. x $\frac{1}{8}$ " High
G-36326	1	..	Transmission Brake Lever Shaft Castle Nut Cotter Pin— $\frac{1}{8}$ " x 1" Long
END OF PARTS IN ASSEMBLY No. 2001B2—SA1			
2006A1	1	..	Transmission Brake Quadrant
13023N92	2	..	Transmission Brake Lever Bracket Cap Screw—Special
G-35914	2	..	Transmission Brake Lever Bracket Cap Screw Lockwasher— $\frac{3}{8}$ "—SAE—Std.
END OF PARTS IN ASSEMBLY No. 1500A1—A1			
G-10205	12	..	Transmission and Crank Case Cap Screw— $\frac{3}{8}$ "—16 USS Thd. x $1\frac{1}{8}$ " Long x $\frac{1}{8}$ " Hex. x $\frac{3}{8}$ " High
G-35914	12	..	Transmission and Crank Case Cap Screw Lockwasher— $\frac{3}{8}$ "—SAE—Std.
13012F6	1	..	Transmission Main Shaft and Propellor Shaft Companion Flange Key
G-36332	1	..	Transmission Main Shaft and Propellor Shaft Companion Flange Nut Cotter Pin— $\frac{1}{8}$ " x $1\frac{1}{4}$ " Long

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

TRANSMISSION BRAKE

PART No.	No. per Truck	No. per Assy.	NAME OF PART
3444A1— A1	1	..	TRANSMISSION EXTERNAL BRAKE BAND—Complete Assembly— Consisting of—33—Succeeding Items—
3418B2—SA1	1	..	Transmission External Brake Band, Lining and Fitting Assembly— CONSISTING OF—8—SUCCEEDING ITEMS—
3418B2	..	1	Transmission External Brake Band
3419B2	..	2	Transmission External Brake Band Lining— $\frac{1}{8}$ " x 2" x 11" Each
13042E5	..	16	Transmission External Brake Band Lining Rivet
3409F6	..	1	Transmission External Brake Band Support Bracket
G-37907-A	..	6	Transmission External Brake Band Support Bracket Rivet— $\frac{3}{16}$ " Dia. x $\frac{1}{4}$ " Long— Round Head—Iron
3409G7	..	1	Transmission External Brake Band End Bracket—Upper
3409H8	..	1	Transmission External Brake Band End Bracket—Lower
G-37907-A	..	8	Transmission External Brake Band End Bracket Rivet— $\frac{3}{16}$ " Dia. x $\frac{1}{4}$ " Long—Round Head—Iron
END OF PARTS IN ASSEMBLY No. 3418B2—SA1			
13023H86	1	..	Transmission External Brake Band Adjusting Cap Screw—Special
3416A1	1	..	Transmission External Brake Band Adjusting Cap Screw Locking Plate
G-36307	1	..	Transmission External Brake Band Adjusting Cap Screw Cotter Pin— $\frac{1}{8}$ " x $1\frac{1}{8}$ " Long
3454B2	1	..	Transmission External Brake Band Compression Spring
3408B2	1	..	Transmission External Brake Band Contracting Lever
13020N14	1	..	Transmission External Brake Band Contracting Lever and End Clevis Pin
G-36314	1	..	Transmission External Brake Band Contracting Lever and End Clevis Pin Cotter Pin— $\frac{3}{32}$ " x $\frac{5}{8}$ " Long
3450A1	1	..	Transmission External Brake Yoke
13020N14	1	..	Transmission External Brake Yoke and Contracting Lever Clevis Pin
G-36314	1	..	Transmission External Brake Yoke and Contracting Lever Clevis Pin Cotter Pin— $\frac{3}{32}$ " x $\frac{5}{8}$ " Long
G-31604	2	..	Transmission External Brake Yoke Lock Nut— $\frac{1}{4}$ "—20 SAE Thd.— $\frac{1}{4}$ " Hex. $\frac{3}{4}$ " High (Check Nut)
13049W49	2	..	Transmission External Brake Yoke Retaining Washer
3454C3	1	..	Transmission External Brake Compression Spring
3407E5	1	..	Transmission External Brake Compression Spring Retainer—Lower
3407F6	1	..	Transmission External Brake Compression Spring Retainer—Upper
3454D4	1	..	Transmission External Brake Cushion Spring
3407F6	2	..	Transmission External Brake Cushion Spring Retainer
G-30502	1	..	Transmission External Brake Adjusting Nut— $\frac{3}{8}$ "—16 USS Thd.— $\frac{11}{16}$ " Hex. x $\frac{3}{8}$ " High— Plain
G-30902	1	..	Transmission External Brake Adjusting Nut Lock Nut (Check Nut)— $\frac{3}{8}$ "—16 USS Thd. x $\frac{11}{16}$ " Hex. x $\frac{1}{4}$ " High
3451A1	1	..	Transmission External Brake Connecting Link
13020N14	1	..	Transmission External Brake Connecting Link Clevis Pin
G-36314	1	..	Transmission External Brake Connecting Link Clevis Pin Cotter Pin— $\frac{3}{32}$ " x $\frac{5}{8}$ " Long
13020N14	1	..	Transmission External Brake Connecting Link and Hand Lever Clevis Pin
G-36314	1	..	Transmission External Brake Connecting Link and Hand Lever Clevis Pin Cotter Pin— $\frac{3}{32}$ " x $\frac{5}{8}$ " Long
END OF PARTS IN ASSEMBLY No. 3444A1—A1			
3428B2	1	..	Transmission Brake Drum

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

VACUUM TANK—Stewart-Warner Model 216-A

PART No.	No. per Truck	No. per Assy.	NAME OF PART
7700A1— A1	1	..	VACUUM TANK—Complete Assembly— Consisting of—40—Succeeding Items—
7701A1	1	..	Vacuum Tank Outside Shell—Assembly
G-37500	1	..	Vacuum Tank Outside Shell Pipe Plug—In Bottom of Tank— $\frac{1}{8}$ " Pipe Thd.—Square Head—Iron
7506B2	2	..	Vacuum Tank Band Bracket
G-24097	2	..	Vacuum Tank Band Bracket Machine Screw— $\frac{1}{4}$ "—20 Thd. x $2\frac{1}{2}$ " Long—Oval Fillister Head—Steel
7527C3	2	..	Vacuum Tank Band Bracket Machine Screw Washer—Shake Proof—(Under Head)
G-32109	2	..	Vacuum Tank Band Bracket Machine Screw Nut— $\frac{1}{4}$ "—20 Thd.— $\frac{1}{2}$ " Hex. x $\frac{1}{8}$ " High— Plain
7801B2	1	..	Vacuum Tank Vent Tube
13038G7	1	..	Vacuum Tank Vent Tube Nut
7510B2	1	..	Vacuum Tank Vent Tube Compression Collar
13017A1	1	..	Vacuum Tank Connection Nipple (Vacuum Connection)
7513E5	1	..	Vacuum Tank Cover Gasket
G-23965	8	..	Vacuum Tank Cover Machine Screw—No. 8—32 Thd. x $\frac{1}{8}$ " Long—Oval Fillister Head —Steel
7507F6—SA1	1	..	Vacuum Tank Gas Inlet Bushing and Strainer Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
7507F6	..	1	Vacuum Tank Gas Inlet Bushing
7519D4	..	1	Vacuum Tank Gas Inlet Bushing Strainer Screen
			<u>END OF PARTS IN ASSEMBLY No. 7507F6—SA1</u>
7701B2—SA1	1	..	Vacuum Tank Inner Shell and Flapper Valve Assembly— CONSISTING OF—2—SUCCEEDING ITEMS—
7701B2	..	1	Vacuum Tank Inner Shell—Assembly—Sold Separately If Desired
7525B2	..	1	Vacuum Tank Inner Shell Flapper Valve Assembly—Sold Separately If Desired
			<u>END OF PARTS IN ASSEMBLY No. 7701B2—SA1</u>
7702A1—SA1	1	..	Vacuum Tank Mechanism Assembly— CONSISTING OF—21—SUCCEEDING ITEMS—
7512B2	1	..	Vacuum Tank Float Assembly
7523B2	1	..	Vacuum Tank Tension Spring—At Float Stem
13020B2	1	..	Vacuum Tank Float Lever Pin
7511B2—SA1	1	..	Vacuum Tank Cover and Levers Assembly— CONSISTING OF—17—SUCCEEDING ITEMS—
7511B2—SA2	1	..	Vacuum Tank Cover and Bushing Assembly— CONSISTING OF—3—SUCCEEDING ITEMS—
7511B2	..	1	Vacuum Tank Cover
7507E5	..	1	Vacuum Tank Atmospheric Valve Bushing
7507D4	..	1	Vacuum Tank Valve Bushing
			<u>END OF PARTS IN ASSEMBLY No. 7511B2—SA2</u>
7516C3—SA1	1	..	Vacuum Tank Levers and Pins Assembly— CONSISTING OF—4—SUCCEEDING ITEMS—
7516C3	..	1	Vacuum Tank Spring Lever

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

VACUUM TANK—Continued

PART No.	No. per Truck	No. per Asy.	NAME OF PART
7516D4	..	1	Vacuum Tank Connecting Link Lever
7516E5	..	1	Vacuum Tank Combination Float and Tip Lever
13020C3	..	2	Vacuum Tank Lever Pin
<u>END OF PARTS IN ASSEMBLY NO. 7516C3—SA1</u>			
13020D4	1	..	Vacuum Tank Float Lever Pin
7703A1	1	..	Vacuum Tank Valve Stem Sleeve
7510C3	2	..	Vacuum Tank Valve Stem Collar
7516F6	1	..	Vacuum Tank Valve Stem Lever
13020E5	1	..	Vacuum Tank Valve Stem Lever Pin
7703B2	1	..	Vacuum Tank Valve Sleeve
7651B2	1	..	Vacuum Tank Atmospheric Valve Stem
7523C3	2	..	Vacuum Tank Valve Tension Spring
<u>END OF PARTS IN ASSEMBLY NO. 7511B2—SA1</u>			
<u>END OF PARTS IN ASSEMBLY NO. 7702A1—SA1</u>			
<u>END OF PARTS IN ASSEMBLY NO. 7700A1—A1</u>			
G-28901	4	..	Vacuum Tank Band Bracket and Dash Carriage Bolt— $\frac{5}{16}$ "—18 USS Thd. x $1\frac{1}{4}$ " Long
G-32210	4	..	Vacuum Tank Band Bracket and Dash Carriage Bolt Nut—With Bolt— $\frac{5}{16}$ "—18 USS Thd.—Square
G-35913	4	..	Vacuum Tank Band Bracket and Dash Carriage Bolt Nut Lockwasher— $\frac{5}{16}$ " SAE Std.
13049X50	4	..	Vacuum Tank Band Bracket and Dash Carriage Bolt Plain Washer

WINDSHIELD

PART No.	No. per Truck	No. per Assy.	NAME OF PART
10000A1— A1	1		WINDSHIELD AND PARTS—Complete Assembly— CONSISTING OF—61—SUCCEEDING ITEMS—
10000A1— A2	1		Windshield Assembly— CONSISTING OF—28—SUCCEEDING ITEMS—
10001A1—SA1	1		Windshield Upper Frame and Glass Assembly— CONSISTING OF—15—SUCCEEDING ITEMS—
10001A1—SA2	1		Windshield Upper Frame Assembly— CONSISTING OF—9—SUCCEEDING ITEMS—
None		1	Windshield Upper Frame Hinge and Fence—Right Hand—Not Sold Separately
None		1	Windshield Upper Frame Hinge and Fence—Left Hand—Not Sold Separately
13012C3		1	Windshield Upper Frame Hinge and Fence Top Plug—Not Sold Separately
G-26206		4	Windshield Upper Frame Hinge and Fence Top Plug Machine Screw—No. 10—24 Thd. x 1/4" Long—Flat Countersunk Head
10002B2		1	Windshield Upper Frame Swing Arm Bracket—Assembly—Right Hand
10002A1		1	Windshield Upper Frame Swing Arm Bracket—Assembly—Left Hand
G-37738-A		4	Windshield Upper Frame Swing Arm Bracket Rivet—1/8" Dia. x 3/4" Long—Round Head—Iron
13040B2		2	Windshield Upper Frame Pull to Handle
G-37738-A		4	Windshield Upper Frame Pull to Handle Rivet—1/8" Dia. x 3/4" Long—Round Head— Iron
END OF PARTS IN ASSEMBLY NO. 10001A1—SA2			
10006A1	1		Windshield Upper Frame Glass—10" Wide x 40" Long—3/8" Thick—Selected Plate
13005L12	1		Windshield Upper Frame Glass Felt (x-423 Form—63" Long)
13044A1	1		Windshield Upper Frame Glass Tape (x-51 Form—62" Long)
10003A1	2		Windshield Upper Frame Glass Clip
13023W75	2		Windshield Upper Frame Glass Clip Machine Screw
END OF PARTS IN ASSEMBLY NO. 10001A1—SA1			
10001B2—SA1	1		Windshield Lower Frame and Glass Assembly— CONSISTING OF—6—SUCCEEDING ITEMS—
10001B2—SA2		1	Windshield Lower Frame Assembly—
10006B2		1	Windshield Lower Frame Glass—10" Wide x 38" Long—3/8" Thick—Selected Plate
13005M13		1	Windshield Lower Frame Glass Felt (x-423 Form—59" Long)
13044B2		1	Windshield Lower Frame Glass Tape (x-51 Form—58" Long)
10003B2		2	Windshield Lower Frame Glass Clip
13023W75		2	Windshield Lower Frame Glass Clip Machine Screw
END OF PARTS IN ASSEMBLY NO. 10001B2—SA1			
10007A1	2		Windshield Swing Arm—N. P.
13049C3	2		Windshield Swing Arm Washer—N. P.
13023P16	2		Windshield Swing Arm Screw—N. P.
10009A1	1		Windshield Rainstrip—Rubber
END OF PARTS IN ASSEMBLY NO. 10000A1—B2			
10010B2—SA1	1		Windshield Side Member Right Hand and Parts Assembly— CONSISTING OF—15—SUCCEEDING ITEMS—
10010B2		1	Windshield Side Member—Right Hand—Aluminum
10008A1		1	Windshield Side Member Upper Side Plate

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

WINDSHIELD—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
G-35022	..	4	Windshield Side Member Upper Side Plate Drive Screw—No. 2 x $\frac{1}{4}$ " Long—Brass Plated
10002D4	..	1	Windshield Body Bracket—Right Hand
13023V74	..	2	Windshield Body Bracket Machine Screw
13132C3	..	2	Windshield Body Bracket Machine Screw Lockwasher
10001D4—SA1	1	..	Windshield Side Frame and Glass Assembly—Right Hand CONSISTING OF—8—SUCCEEDING ITEMS—
10001D4—SA2	1	..	Windshield Side Frame Assembly—Right Hand CONSISTING OF—3—SUCCEEDING ITEMS—
10011B2	..	1	Windshield Side Frame Front Piece—Right Hand Side
10011A1	..	1	Windshield Side Frame Rear Piece
G-26161	..	2	Windshield Side Frame Rear Piece Machine Screw—No. 8—32 Thd. x $\frac{1}{8}$ " Long—Flat Head—Steel END OF PARTS IN ASSEMBLY No. 10001D4—SA2
10006C3	1	..	Windshield Side Frame Glass— $\frac{3}{16}$ " Thick Plate—Special Shape
13005N14	1	..	Windshield Side Frame Glass Felt
13044C3	1	..	Windshield Side Frame Glass Tape
G-25663	8	..	Windshield Side Frame Assembly and Side Member Machine Screw—No. 8—32 SAE Thd. x $\frac{1}{8}$ " Long—Oval Countersunk—Steel END OF PARTS IN ASSEMBLY No. 10001D4—SA1 END OF PARTS IN ASSEMBLY No. 10010B2—SA1
10010A1—SA1	1	..	Windshield Side Member—Left Hand and Parts Assembly— CONSISTING OF—15—SUCCEEDING ITEMS—
10010A1	..	1	Windshield Side Member—Left Hand—Aluminum
10008A1	..	1	Windshield Side Member Upper Side Plate
G-35022	..	4	Windshield Side Member Upper Side Plate Drive Screw—No. 2 x $\frac{1}{4}$ " Long—Brass Plated
10002C3	..	1	Windshield Body Bracket—Left Hand
13023V74	..	2	Windshield Body Bracket Machine Screw
13132C3	..	2	Windshield Body Bracket Machine Screw Lockwasher
10001C3—SA1	1	..	Windshield Side Frame and Glass Assembly—Left Hand— CONSISTING OF—8—SUCCEEDING ITEMS—
10001C3—SA2	1	..	Windshield Side Frame Assembly—Left Hand— CONSISTING OF—3—SUCCEEDING ITEMS—
10011C3	..	1	Windshield Side Frame Front Piece—Left Hand Side
10011A1	..	1	Windshield Side Frame Rear Piece
G-26161	..	2	Windshield Side Frame Rear Piece Machine Screw—No. 8—32 Thd. x $\frac{1}{8}$ " Long—Flat Head—Steel END OF PARTS IN ASSEMBLY No. 10001C3—SA2
10006C3	1	..	Windshield Side Frame Glass— $\frac{3}{16}$ " Thick Plate—Special Shape
13005N14	1	..	Windshield Side Frame Glass Felt
13044C3	1	..	Windshield Side Frame Glass Tape

ALWAYS SPECIFY MODEL, CHASSIS SERIAL AND PART NUMBER

WINDSHIELD—Continued

PART No.	No. per Truck	No. per Assy.	NAME OF PART
G-25663	8	..	Windshield Side Frame Assembly and Side Member Machine Screw—No. 8—32 Thd. $\frac{1}{8}$ " Long—Oval Countersunk—Steel <u>END OF PARTS IN ASSEMBLY No. 10001C3—SA1</u> <u>END OF PARTS IN ASSEMBLY No. 10010A1—SA1</u> <u>END OF PARTS IN ASSEMBLY No. 10000A1—A1</u>
10005A1	2	..	Windshield Lower Frame and Side Member Weather Strip— $\frac{7}{8}$ " x 12" Long—Each
10004A1	1	..	Windshield Lower Frame Fence—Screwed to Cowl
13023X76	12	..	Windshield Lower Frame Fence and Cowl Wood Screw
13023Z72	6	..	Windshield Lower Frame and Side Member Machine Screw
13023Y77	8	..	Windshield Upper Frame, Hinge and Fence Assembly Wood Screw
13023A79	4	..	Windshield Side Member and Cowl Cap Screw
G-31100	4	..	Windshield Side Member and Cowl Cap Screw Nut— $\frac{1}{4}$ "—28 SAE Thd.— $\frac{1}{8}$ " Hex. x $\frac{1}{4}$ " High—Plain
13049Y51	4	..	Windshield Side Member and Cowl Cap Screw Washer
13023B80	2	..	Windshield Side Member and Cowl Lag Screw
13056A1	2	..	Windshield Swing Arm Thumb Screw